



For easy use, follow the break-in procedures below:

1. Uncoil and straighten hose to full length.
2. Check that washer is seated in the coupling. The washer will prevent leaking at the faucet.
3. Attach hose to faucet, then attach nozzle.
4. Turn water on full and let trapped air out with nozzle.
5. Pull hose straight to remove any twists caused by packaging.

Vinyl garden hoses perform better at temperatures above 55 F degrees.