



## HANDY HEATER® HEAT WAVE

PRODUCT NAME: HANDY HEATER HEAT WAVE MODEL: XXX-XXX POWER: 1200W VOLTAGE: 120V AC 60Hz CONFORMS TO UL STD. 1278

XXXXXX









# **Instruction Manual**

Please read all instructions before using.
USE ONLY AS DIRECTED - SAVE THESE INSTRUCTIONS

ı


Thanks for your purchase of the Handy Heater Heatwave – this personal space heater uses a parabolic design to concentrate heat from a focused point and reflects off the curved surface for instant, sun-like warmth without a noisy fan. The Handy Heater Heatwave will quickly turn your personal space into a warm comfort zone.

### **WARNINGS:**

- Read all instructions before using this heater.
- This heater is hot when in use. To avoid burns, do not let bare skin touch hot surfaces. Always use the handle when moving this heater. Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front, sides and rear of the heater.
- Extreme caution is necessary when the heater is used near children or someone who is disabled.
- Do not leave the heater unattended while it is on. Always unplug heater when not in use.
- Do not operate heater with a damaged cord or plug, or after the heater malfunctions.
   If the heater is damaged in any manner, discard heater, or return it to an authorized service facility for examination and/or repair.
- · Do not use outdoors.
- This heater is not intended for use in bathrooms or laundry areas. Never locate heater where it may fall into a bathtub or other water container.
- Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
- To disconnect heater, turn controls to off, then remove plug from outlet.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- A heater has hot and arcing sparking parts inside. Do not use it in areas where gasoline, paint, or flammable liquids are used or stored.
- Use this heater only as described in this manual. Any use not recommended by the manufacturer may cause fire, electric shock, or injury to persons.
- Always plug heaters directly into a wall outlet/receptacle. Never use with an extension cord or relocatable power tap (outlet/power strip).
- This heater includes an audible alarm and a visual indicator light to warn that parts of the heater are getting excessively hot. If the alarm sounds, and light flashes immediately turn the heater off and inspect for any objects on or adjacent to the heater that may causehigh temperatures. DO NOT OPERATE THE HEATER WITH THE ALARM SOUNDING AND VISUAL INDICATOR LIGHT IS FLASHING.

### **HOW TO USE:**

- 1. Place your Handy Heater Heatwave on a flat surface, and plug into an outlet. FOR BEST USE:
  - Keep at least 3 feet away heater will be most effective up to 10 feet away. Ensure there are no objects between you and the heater.
- 2. Select your heat mode by turning the dial on the back of the unit High or Low.
- 3. When done, turn dial to OFF and unplug unit until next use.

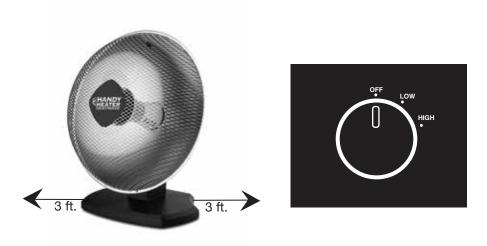

#### SAFETY:

Handy Heater Heatwave has a built-in Anti-Tip Safety Switch – if the heater senses it is tipped over or not on a level surface, the alarm will sound, the alarm light will blink, and unit will turn OFF.

### **CLEANING AND CARE:**

Only clean your Handy Heater Heatwave when off, unplugged, and cooled down. Use a soft cloth (dampened if necessary) to clean the exterior, do not touch inside the heater or the heating element. Never use any sprays or water directly on the unit. Never submerge or run under water.

When not using for an extended period of time, store in a cool, dry place.