


EXPLODED VIEW AND PARTS LIST (VIBRATOR ASSEMBLY)

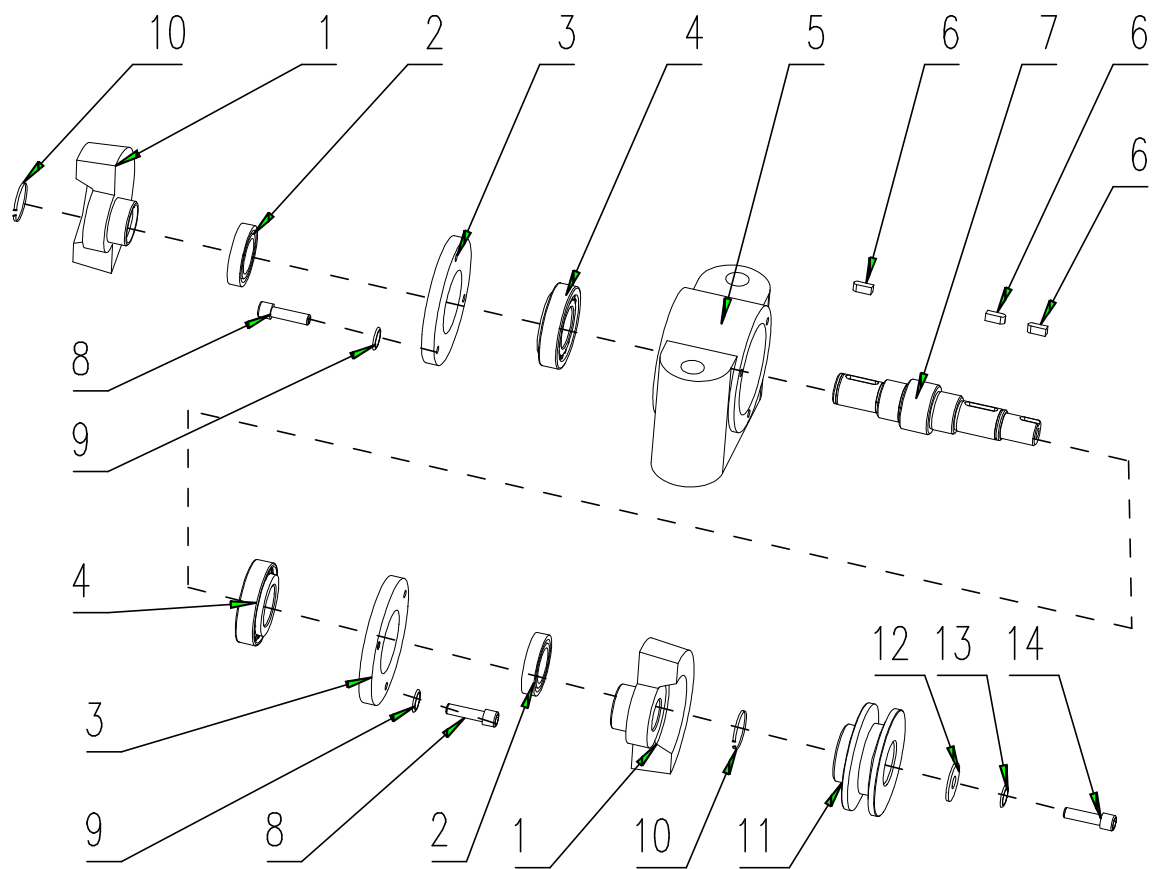


EXPLODED VIEW AND PARTS LIST (VIBRATOR ASSEMBLY)

No.	Part Number	Description	Specification	Qty.
1	56035-G-001	Eccentric Block		2
2	56035-G-002	Oil Seal	28 x 50 x 10	2
3	56035-G-003	Bearing Cover		2
4	56035-G-004	Bearing	6306	2
5	56035-G-005	Bearing Seat		1
6	56035-G-006	Key	6 x 6 x 20	3
7	56035-G-007	Main Shaft		1
8	56035-G-008	Inner Hexagon Bolt	M6 x 16	6
9	56035-G-009	Spring Gasket	Ø6	6
10	56035-G-010	Clip	Ø24	2
11	56035-G-011	Pulley	84 x 35	1
12	56035-G-012	Conical Flat Gasket	8 x 30 x 6	1
13	56035-G-013	Spring Gasket	Ø8	1
14	56035-G-014	Inner Hexagon Bolt	M8 x 20	1

NOTE: These parts are only available as a complete assembly (vibrator assembly, part 56035-023).
If you wish to purchase this assembly, please visit www.wenproducts.com

EXPLODED VIEW AND PARTS LIST (PLATE COMPACTOR)

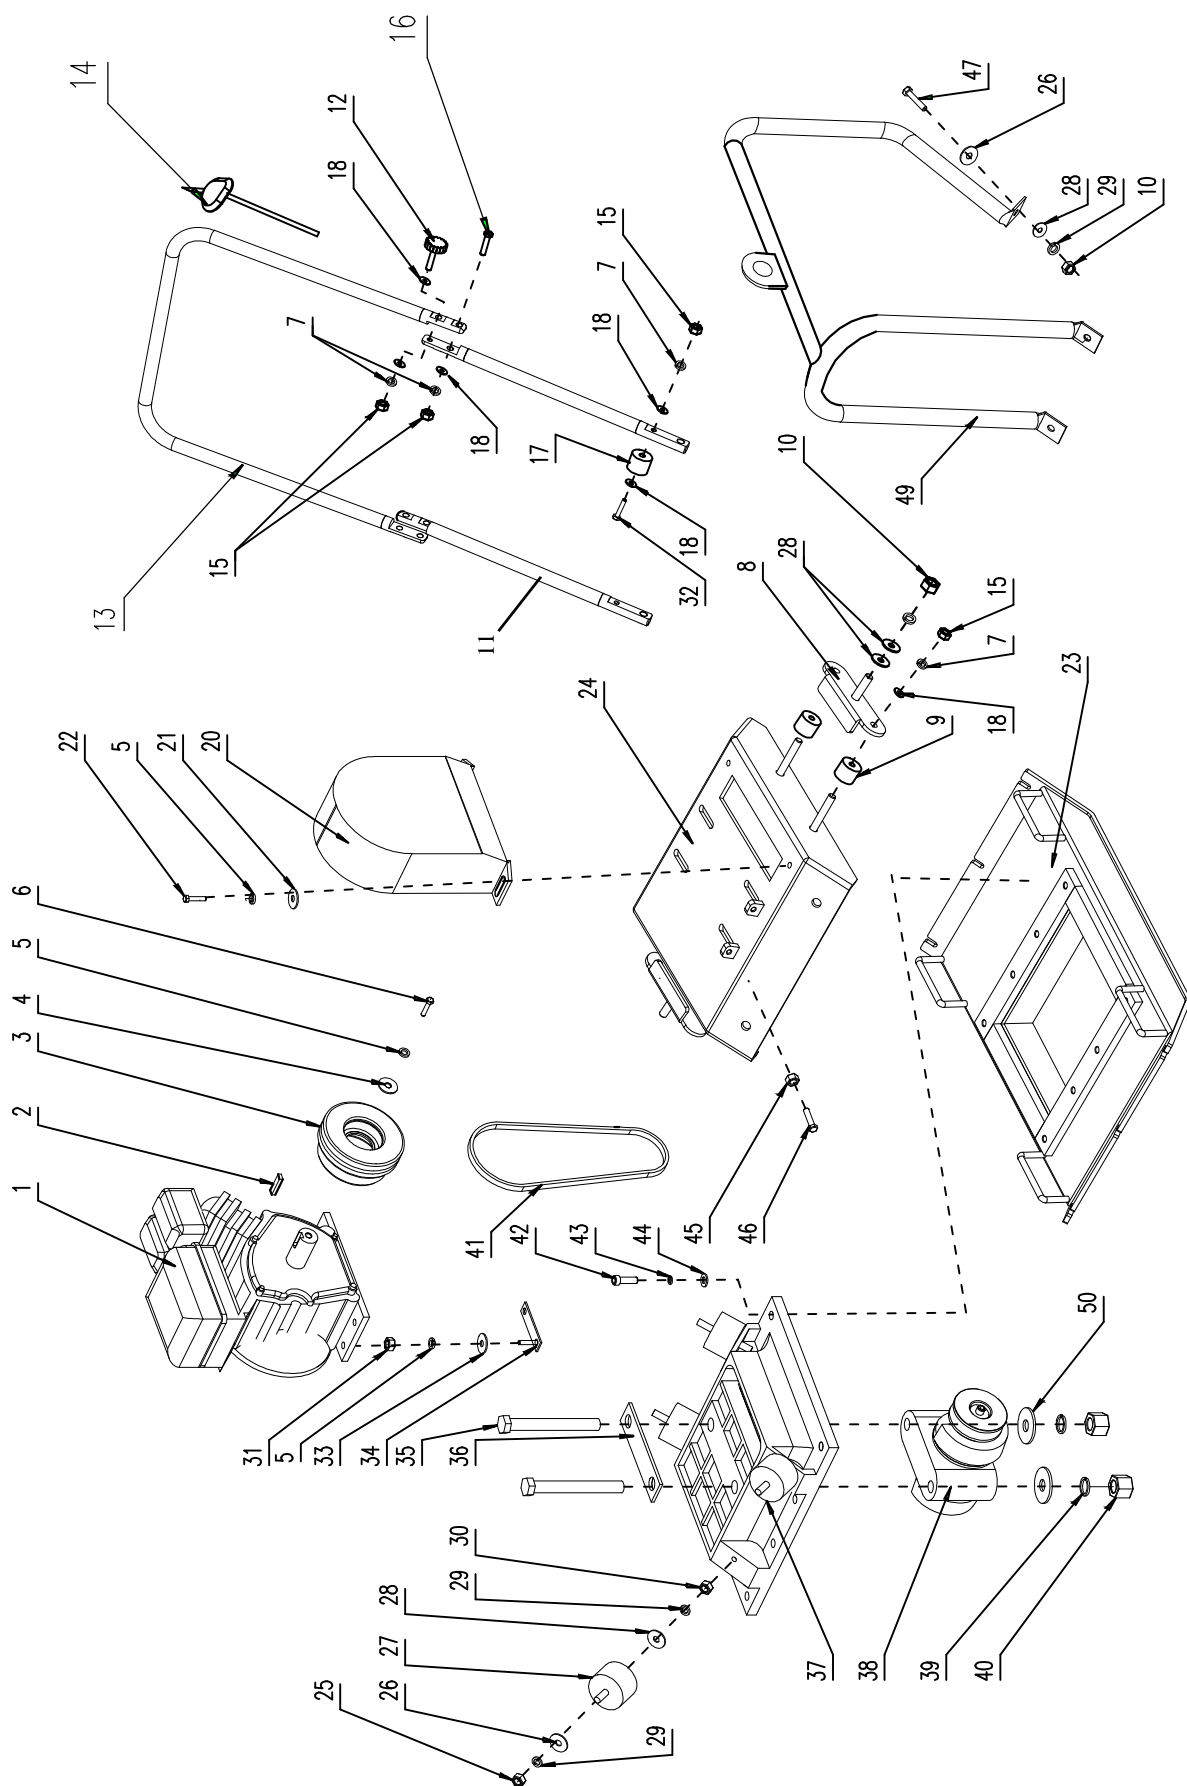

EXPLODED VIEW AND PARTS LIST (PLATE COMPACTOR)

No.	Part Number	Description	Specification	Qty.
1	56035-E-000	Engine		1
2	56035-147	Key	5*40	1
3	56035-020	Pulley		1
4	56035-019	Washer	M8×30×6	1
5	56035-018	Spring Washer	Ø 8	5
6	56035-017	Hex Bolt	M8*30	1
7	56035-005-3	Washer	Ø 10	6
8	56035-048	Handle Fixed Plate		2
9	56035-049	Handle Rubber Damper		4
10	56035-050	Locked Nut	M12	2
11	56035-005L	Lower handle		2
12	56035-051	Locked Pin Assembly	M10*35	2
13	56035-005H	Upper handle		1
14	56035-046	Throttle Line Assembly		1
15	56035-005-2	Locked Nut	M10	2
16	56035-005-6	Flange Bolt	M10*35	2
17	56035-005-7	Handle Damper		2
18	56035-005-4	Washer	Ø 10	14
20	56035-015	Belt Cover		1
21	56035-014	Washer	Ø8*24	2
22	56035-012	Bolt	M8*20	2
23	56035-030	Bottom Plate		1
24	56035-031-1	Engine Support Plate		1
25	56035-035	Locked Nut	M12	4
26	56035-003	Washer	12*35	4
27	56035-032	Shock Absorber		4
28	56035-028	Washer	Ø12	4
29	56035-027	Spring Washer	Ø12	4
30	56035-026	Nut	M12	4
31	56035-052	Locked Nut	M8	4
32	56035-005-8	Hex Bolt	M10*65	2
33	56035-009	Washer	Ø8	4
34	56035-053	Hex Bolt	M8*45	2
35	56035-024	Hex Bolt	M18*140	2
36	56035-025	Press Plate		1
37	56035-031-2	Exciter Seat		1
38	56035-023	Vibrator Assembly		1
39	56035-022	Spring & Flat Washer	Ø18	2
40	56035-021	Nut	M18	2
41	56035-016	Belt	B-787	1
42	56035-038	Hex Bolt	M12*35	8
43	56035-037	Spring Washer	Ø12	8
44	56035-036	Flat Washer	Ø12	8
45	56035-043	Nut	M8	2
46	56035-042	Hex Bolt	M8*50	2
47	56035-002	Hex Bolt	M10*30	1
49	56035-001	Frame		1
50	56035-054	Washer	Ø18	2

EXPLODED VIEW AND PARTS LIST (ENGINE)

NOTE: The entire engine is available as a single assembly under model number 56035-E-000.

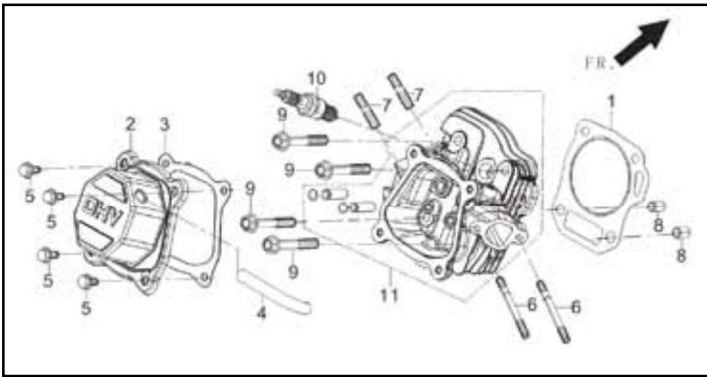


Fig. 1 - Cylinder Head Assembly

No.	Part	Description	Qty.
Fig. 1 - 1	56035-E-001	Cylinder Head Gasket	1
Fig. 1 - 2	P54066	Cylinder Head Cover Assembly	1
Fig. 1 - 3	P54064	Cylinder Head Cover Gasket	1
Fig. 1 - 4	56035-E-004	Breather Tube	1
Fig. 1 - 5	P54040	Bolt	4
Fig. 1 - 6	56035-E-006	Stud	2
Fig. 1 - 7	P54058	Stud	2
Fig. 1 - 8	P54048	Pin	2
Fig. 1 - 9	P54062	Cylinder Head Bolt	4
Fig. 1 - 10	P54060	Spark Plug	1
Fig. 1 - 11	P54054	Cylinder Head Subassembly	1


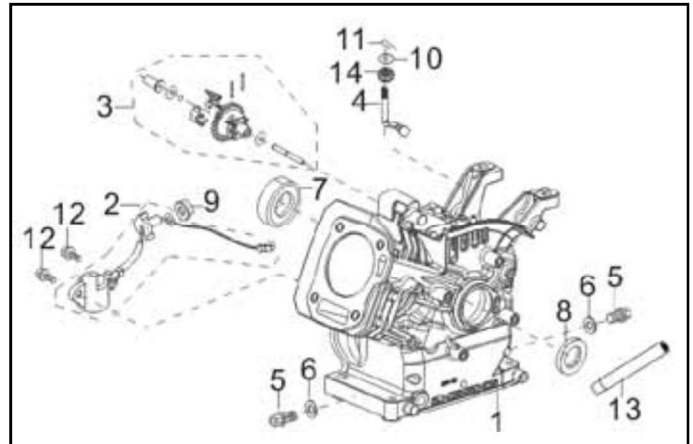


Fig. 2 - Crankcase Assembly

No.	Part	Description	Qty.
Fig. 2 - 1	56035-E-012	Crankcase Subassembly	1
Fig. 2 - 2	P54020	Engine Oil Sensor	1
Fig. 2 - 3	P54031	Governor Gear Assembly	1
Fig. 2 - 4	P54014	Governor Arm	1
Fig. 2 - 5	56035-E-016	Drain Plug Bolt	2
Fig. 2 - 6	P54002	Washer	2
Fig. 2 - 7	56035-E-018	Bearing	1
Fig. 2 - 8	P54008	Oil Seal	1
Fig. 2 - 9	P54003	Nut	1
Fig. 2 - 10	56035-E-020	Washer	1
Fig. 2 - 11	56035-E-021	Pin	1
Fig. 2 - 12	56035-E-022	Bolt	2
Fig. 2 - 13	56035-E-100	Oil Drain Tube	1
Fig. 2 - 14	56035-E-101	Seal Guide	1

Fig. 3 - Crankcase Cover Assembly

No.	Part	Description	Qty.
Fig. 3 - 1	56035-E-023	Crankcase Cover	1
Fig. 3 - 2	56035-E-018	Bearing	1
Fig. 3 - 3	P54008	Oil Seal	1
Fig. 3 - 4	P54080	Crankcase Gasket	1
Fig. 3 - 5	P54082	Pin	2
Fig. 3 - 6	P54086	Oil Dipstick Subassembly	1
Fig. 3 - 8	56035-E-029	Engine Oil Plug Subassembly	1
Fig. 3 - 9	P54092	Bolt	6

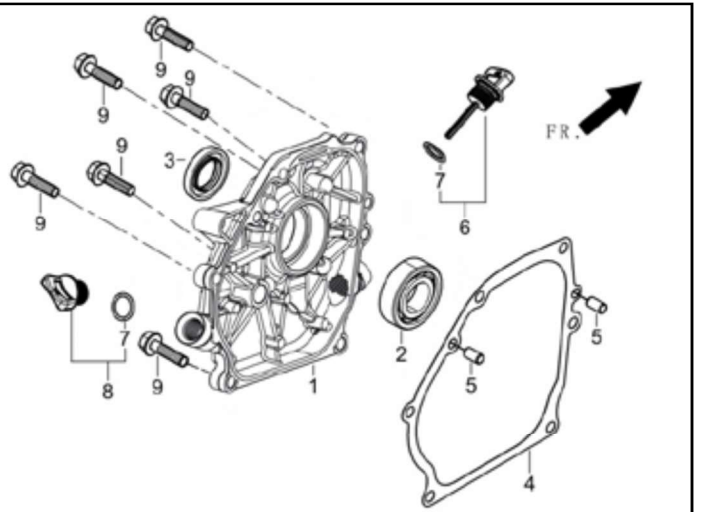

EXPLODED VIEW AND PARTS LIST (ENGINE)

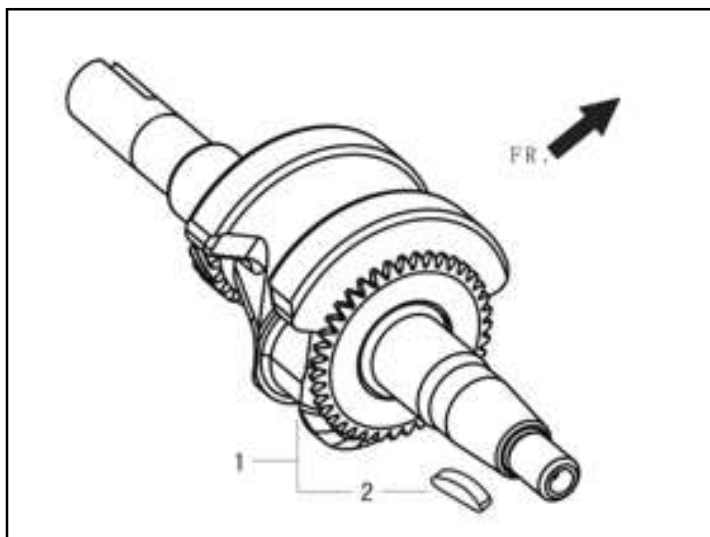


Fig. 4 - Crankshaft

No.	Part	Description	Qty.
Fig. 4 - 1	56035-E-031	Crankshaft Assembly	1

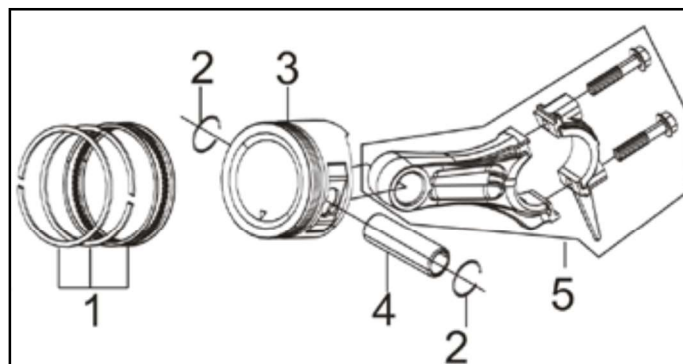


Fig. 5. Piston Ring/Connecting Rod

No.	Part	Description	Qty.
Fig. 5 - 1	P54105	Piston Ring Assembly	1
Fig. 5 - 2	P54106	Piston Ring Clip	2
Fig. 5 - 3	P54109	Piston	1
Fig. 5 - 4	P54112	Piston Pin	1
Fig. 5 - 5	P54121	Connecting Rod	1

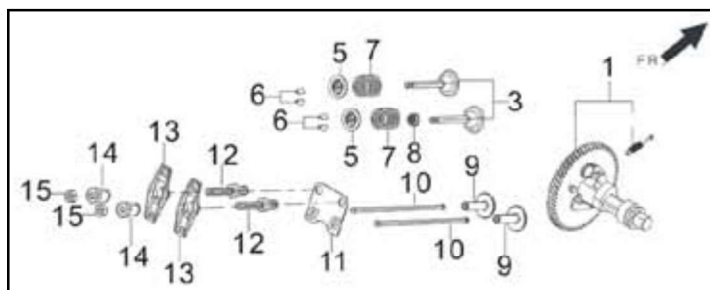


Fig. 6 - Valve/Camshaft

No.	Part	Description	Qty.
Fig. 6 - 1	P54146	Camshaft Assembly	1
Fig. 6 - 3	P54150	Valve	1
Fig. 6 - 5	56035-E-043	Valve Spring Seat	2
Fig. 6 - 6	P54160	Valve Lock Clamp	4
Fig. 6 - 7	P54154	Valve Spring	2
Fig. 6 - 8	P54161	Seal Guide	1
Fig. 6 - 9	P54142	Valve Tappet	2
Fig. 6 - 10	P54140	Valve Lifter	2
Fig. 6 - 11	P54138	Stopper Plate Subassembly	1
Fig. 6 - 12	P54134	Valve Adjusting Bolt	2

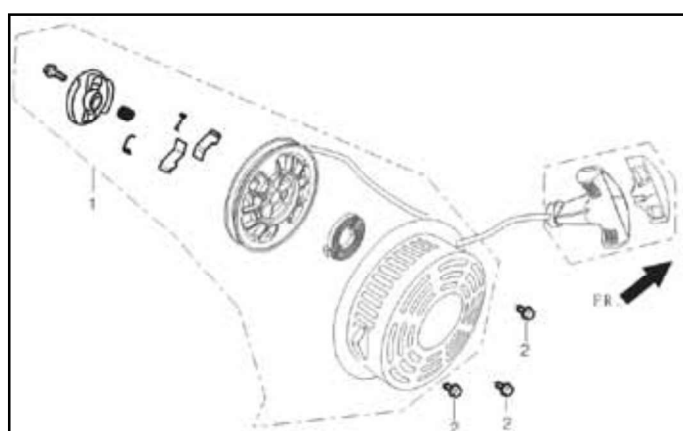


Fig. 7 - Recoil Starter

No.	Part	Description	Qty.
Fig. 7 - 1	56035-E-054	Recoil Starter Assembly	1
Fig. 7 - 2	P54598	Bolt	3

No.	Part	Description	Qty.
Fig. 6 - 13	P54132	Valve Rocker	2
Fig. 6 - 14	P54130	Valve Adjusting Nut	2
Fig. 6 - 15	P54128	Valve Lock Nut	2

EXPLODED VIEW AND PARTS LIST (ENGINE)

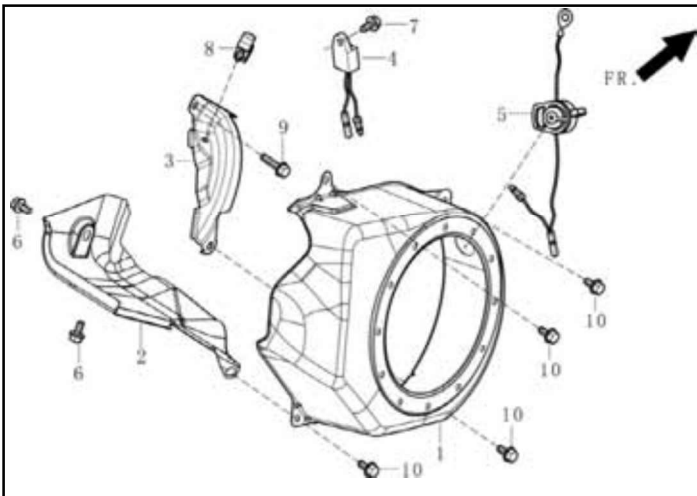


Fig. 8 - Shroud

No.	Part	Description	Qty.
Fig. 8 - 1	P54668	Shroud	1
Fig. 8 - 2	56035-E-058	Cylinder Body Shroud	1
Fig. 8 - 3	56035-E-059	Lower Shield	1
Fig. 8 - 4	P54612	Oil Protector	1
Fig. 8 - 5	56035-E-061	Stop Engine Switch Subassembly	1
Fig. 8 - 6	P54040	Bolt	2
Fig. 8 - 7	P54040	Bolt	1
Fig. 8 - 8	P54596-1	Collar	1
Fig. 8 - 9	P54186	Bolt	1
Fig. 8 - 10	P54040	Bolt	4

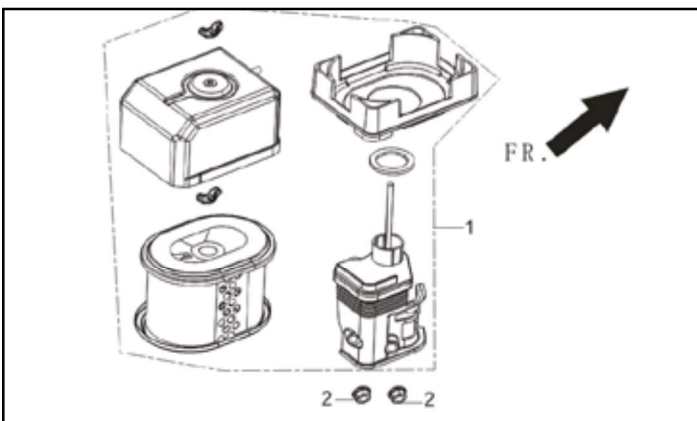


Fig. 10 - Air Cleaner

No.	Part	Description	Qty.
Fig. 10 - 1	56035-E-073	Air Cleaner	1
Fig. 10 - 2	P54179	Nut	2
Fig. 10 - 3	56035-E-073-1	Air Cleaner Element	1

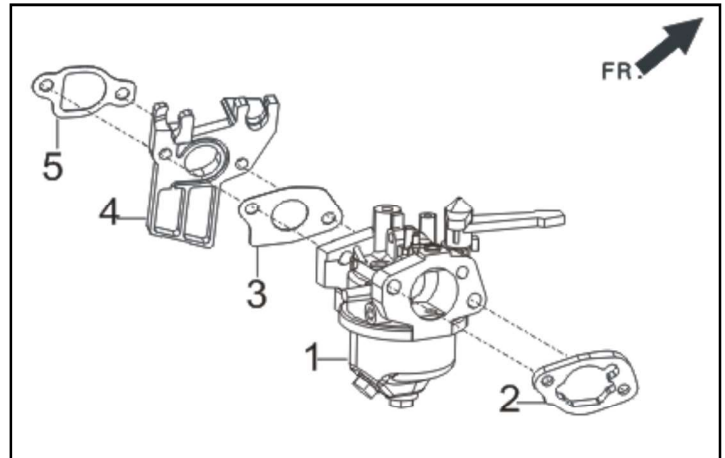


Fig. 9 - Carburetor Assembly

No.	Part	Description	Qty.
Fig. 9 - 1	56035-E-067	Carburetor Assembly	1
Fig. 9 - 2	56035-E-068	Air Cleaner Gasket	1
Fig. 9 - 3	P54166	Carburetor Gasket	1
Fig. 9 - 4	P54164	Carburetor Insulator Plate	1
Fig. 9 - 5	P54162	Carburetor Insulator Gasket	1

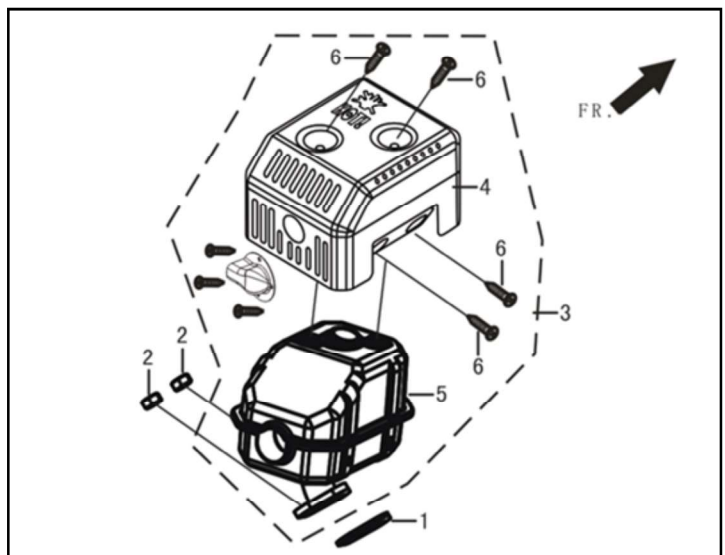


Fig. 11 - Muffler Assembly

No.	Part	Description	Qty.
Fig. 11 - 1	P54426	Exhaust Outlet Gasket	1
Fig. 11 - 2	56035-E-076	Nut	2
Fig. 11 - 3	56035-E-077	Muffler Assembly	1

EXPLODED VIEW AND PARTS LIST (ENGINE)

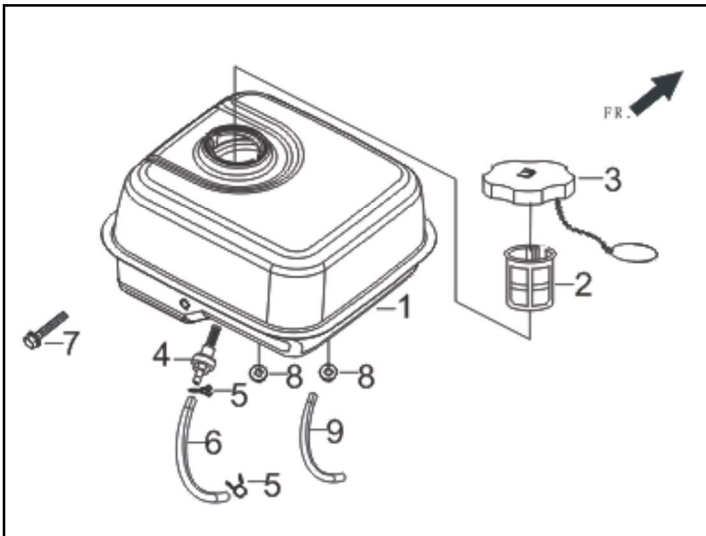


Fig. 12 - Gas Tank

No.	Part	Description	Qty.
Fig. 12 - 1	56035-E-078	Fuel Tank	1
Fig. 12 - 2	56035-E-079	Fuel Strainer	1
Fig. 12 - 3	56035-E-080	Fuel Tank Cover	1
Fig. 12 - 4	56035-E-081	Fuel Tank Oil Outlet Subassembly	1
Fig. 12 - 5	56035-E-082	Collar	2
Fig. 12 - 6	56035-E-083	Fuel Tube	1
Fig. 12 - 7	56035-E-084	Bolt	1
Fig. 12 - 8	P54179	Nut	2
Fig. 12 - 9	56035-E-102	Rubber Jacket	1

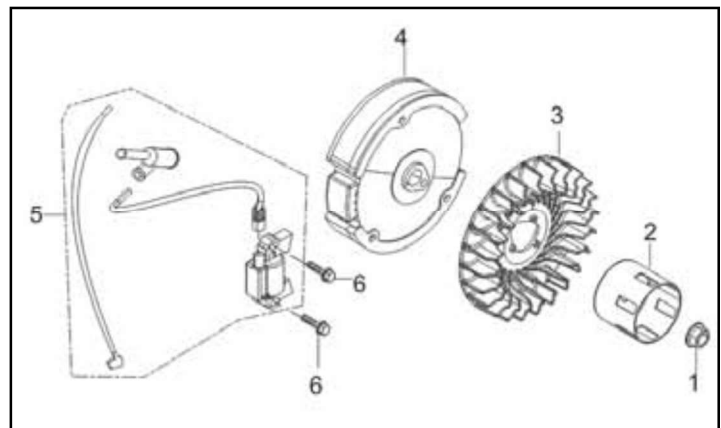


Fig. 13 - Flywheel/Impeller

No.	Part	Description	Qty.
Fig. 13 - 1	P54630	Flywheel Nut	1
Fig. 13 - 2	56035-E-087	Starter Pulley	1
Fig. 13 - 3	P54634	Impeller	1
Fig. 13 - 4	P54636	Flywheel Subassembly	1
Fig. 13 - 5	56035-E-091	Ignition Coil	1
Fig. 13 - 6	P54628	Bolt	2

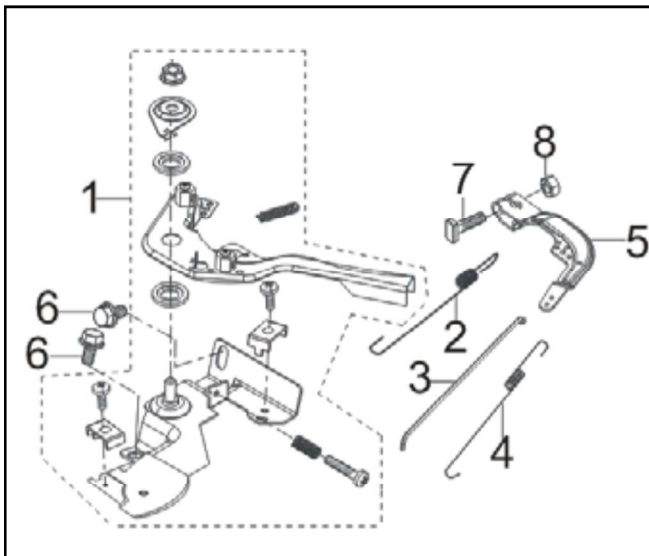


Fig. 14 - Control Assembly, Throttle

No.	Part	Description	Qty.
Fig. 14 - 1	56035-E-092	Throttle Control Assembly	1
Fig. 14 - 2	56035-E-094	Governor Spring	1
Fig. 14 - 3	P54620	Governor Rod	1
Fig. 14 - 4	P54618	Throttle Valve Returning Spring	1
Fig. 14 - 5	P54624	Governor Support Subassembly	1
Fig. 14 - 6	P54040	Bolt	2
Fig. 14 - 7	P54622	Governor Support Bolt	1
Fig. 14 - 8	P54179	Nut	1