

RAIN BIRD®

Simple To Set Timer (SST) Setup & Operation Instructions



English Instructions

Installation	1
Tools and Supplies Needed.....	1
Step 1. Mount Timer	1
Step 2. Connect Power	1
Indoor Timer	1
Outdoor Timer	1
Step 3. Connect Valve Wires To Timer.....	2
Valve Connections.....	2
Timer Connections.....	2
Step 4. Verify System Operation.....	3
Battery Pull Tab.....	3
Apply Power	3
Test Watering.....	3
Optional Accessories	3
Rain Sensor	3
Master Valve Or Pump Start Relay	4
Controls and Indicators.....	4
Setting the Timer	5
Step 1. Set Time	5
Step 2. Set Date.....	5
Step 3. Schedule Watering	5
Set Start Time and Run Time.....	5
Select Run Days	5
Select Watering Times Per Day.....	5
Optional Features	6
Multiple Start Times.....	6
Seasonal Adjust.....	6
Rain Delay.....	6
Normal Operation.....	6
Not Watering	6
Watering Now	6
Rain Delay.....	6
Seasonal Adjust.....	6
Error Detected.....	6
Manual Operation.....	7
Water All Zones Now	7
Water 1 Zone Now.....	7
Troubleshooting	7
Watering Issues.....	7
Electrical Issues.....	7

Questions?

Scan the QR code →
to visit www.rainbird.com

for help setting up and
operating the Rain Bird SST Timer

Call Rain Bird toll free Technical
Support at **1-800-724-6247**
(USA and Canada only)



Installation

Tools and Supplies Needed


- Phillips screwdriver
- Wire stripper
- Hammer
- Valve wire: direct burial, color coded multi-strand (not included)
 - 18 gauge for runs less than 800 feet.
 - 14 gauge for runs greater than 800 feet.
- Watertight splice connectors (not included)

Step 1. Mount Timer

Mount the SST in an accessible location

! **NOTE:** SST indoor timers are for indoor use only. SST outdoor timers can be used indoors or outdoors.

- 1 For indoor installation, choose a location within 5 feet of an AC power outlet and at least 15 feet away from major appliances or air conditioners.
- 2 Drive a screw into the wall, leaving an 1/8" gap between the screw-head and the wall (use the supplied wall anchors if necessary).
- 3 Locate the keyhole slot on back of the unit and hang it securely on the screw.
- 4 Remove the wiring bay cover at the bottom of the unit and drive a screw through the center hole as shown (use the supplied wall anchors if necessary).

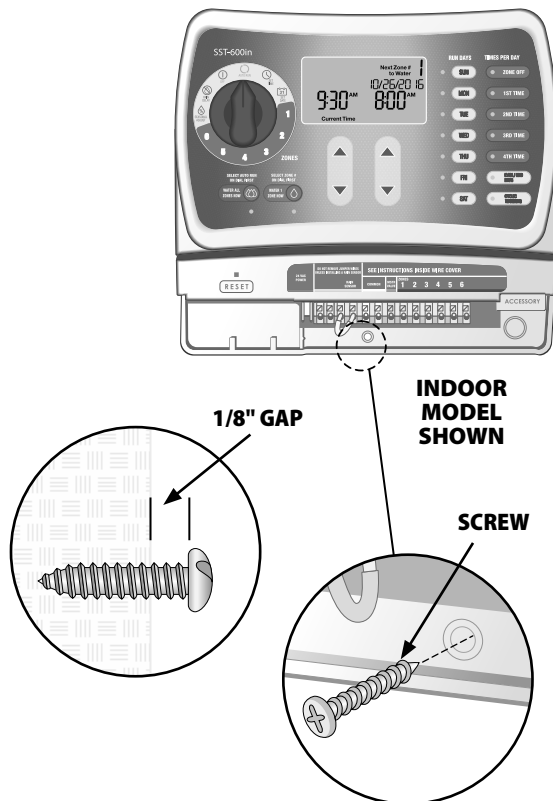

Step 2. Connect Power


⚡ WARNING: DO NOT plug in or apply power to the timer until you have completed and checked all wiring connections.

Indoor Timer

- ▶ Attach the transformer connector to the 24VAC POWER pin connection on the terminal strip.

⚡ WARNING: Do not attempt to link two or more timers together using a single transformer.

SST Indoor Model

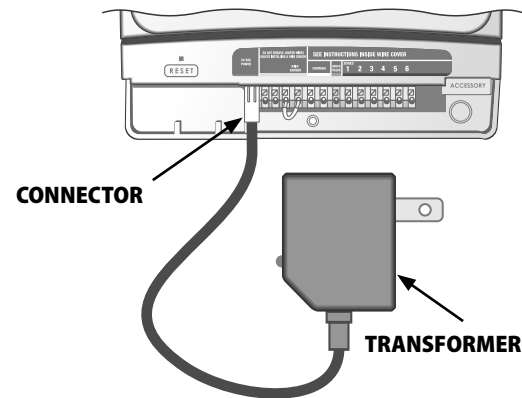

Outdoor Timer

Standard Installation


The SST outdoor version comes with a power cord and 24VAC transformer already connected.

Hard-wire Installation

⚡ WARNING: Disconnect or shut off the external power source before connecting or disconnecting wires to the timer.

- 1 Remove the wiring bay cover at the bottom of the unit.
- 2 Locate the wiring compartment in the lower left-hand corner of the unit and using a screwdriver, unscrew wiring compartment front cover.

SST Outdoor Model

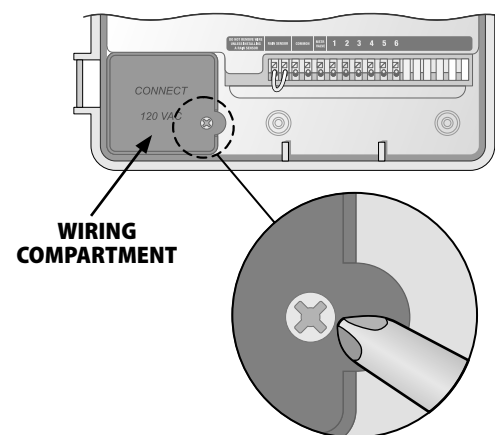


- ③ Unscrew the wire-nuts from the three wires connecting the power cord to the timer.
- ④ Remove the metal bracket holding the power cord to the back of the wiring compartment and pull the cord out through the bottom of the cabinet.
- ⑤ Route the three wires from an external power source into the wiring compartment.
- ⑥ Using the wire-nuts, connect the external power wires to the internal connection wires inside the wiring compartment.

⚡ WARNING: Be sure to connect the color coded external wires to the same color internal connection wires, as follows:

- **Black wire (power)**
- **White wire (neutral)**
- **Green wire (ground)**

- ⑦ Verify that all wiring connections are secure, then replace the wiring compartment cover.

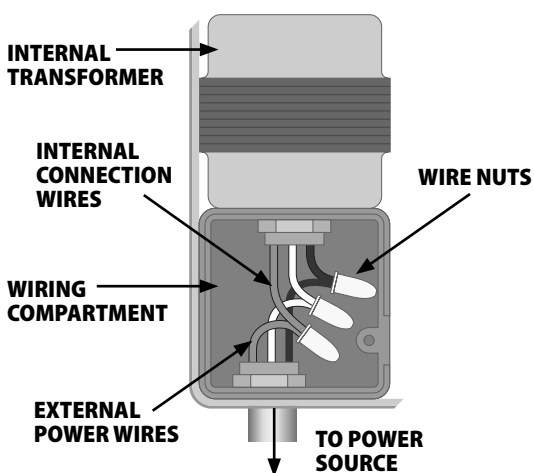

Step 3. Connect Valve Wires To Timer

Valve Connections


- ① Use direct burial cable to run wiring from the timer to valves in the field.
- ② Connect a color coded wire from the direct burial cable to either wire on the valve.
- ③ Connect the remaining wire on each valve to a "common" wire which then connects to the timer.

⚡ NOTE: Use water-tight connectors for all wire splice connections. Depending on your landscape setup, you may need to run extension wires for the power and common connections.

Timer Connections

- ① Use a wire stripper to strip away approximately 1/4" of insulation from the end of the valve wire.
- ② Push the exposed end of the color coded wire from each external valve (or zone) into the corresponding zone number on the terminal block.

⚡ NOTE: To insert or remove a wire, use a screwdriver to press down on the connection release.

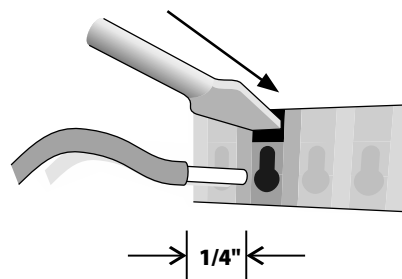


⚡ WARNING: To prevent damage to the timer, connect only ONE valve to each open zone slot on the terminal block.

- ③ Connect the common wire to one of the **COMMON** slots on the terminal block.
- ④ Check that all wiring connections are secure.

⚡ NOTE: Do not remove the yellow jumper wire on the terminals marked **RAIN SENSOR** unless you're connecting an optional rain sensor. See "Rain Sensor" on page 3 for more information.

VALVE AND TIMER CONNECTIONS

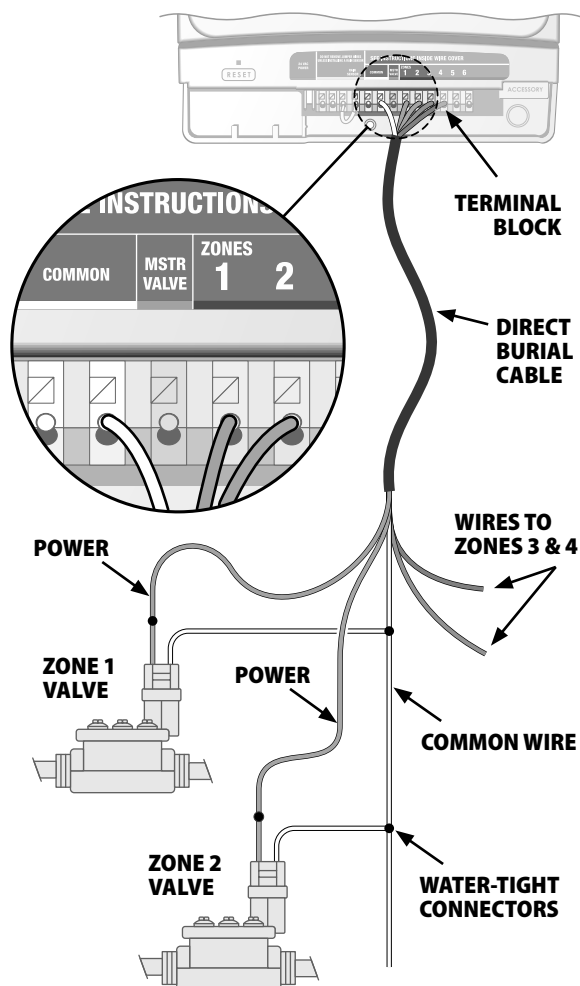

Step 4. Verify System Operation

Battery Pull Tab

- ▶ To activate the internal battery, grasp the yellow pull-tab on the side of the timer and pull it out.

! **NOTE:** If the timer doesn't have AC power for more than a week, the time needs to be reset. This conserves battery power for future outages. Program details are kept in long term non volatile memory so they are not lost even after long power outages.

Apply Power

Indoor Model


- ▶ Plug the transformer into a wall outlet.


Outdoor Model

- ▶ Turn on main power supply or plug the power cord into a waterproof receptacle.

! **NOTE:** Do not plug the timer into a socket that is controlled by a secondary ON/OFF light switch or GFI outlet.

Test Watering

- 1 Turn the dial to the **ZONE 1** position.
 Press the **WATER 1 ZONE NOW** button. The zone will start watering for the default run time of 10 minutes and the green LED corresponding to WATER 1 ZONE NOW button turns on.
- 2 To stop watering before time is up, press the **WATER 1 ZONE NOW** button a second time. The green LED corresponding with the WATER 1 ZONE NOW button will turn off.
- 3 Repeat the above steps until all connected zones have been tested.
- 4 Replace the wiring bay cover on front of the unit.

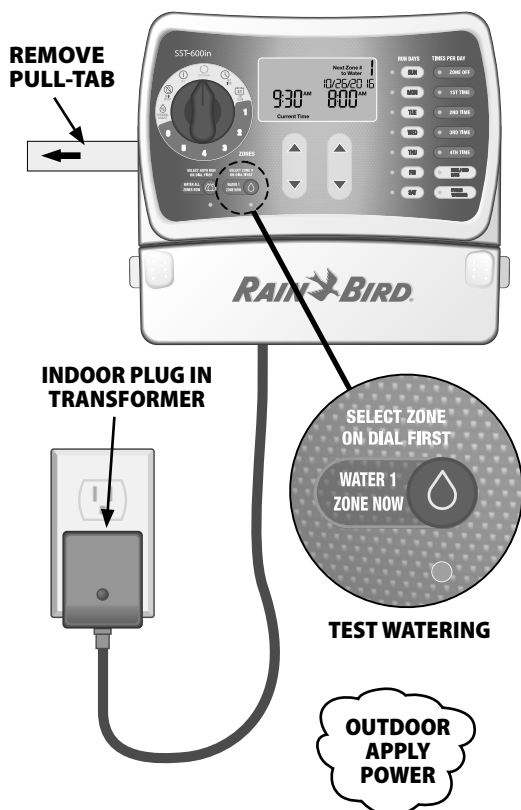


Optional Accessories

Rain Sensor


Connect an optional Rain Sensor to the Timer

- 1 Remove the wiring bay cover at the bottom of the unit.
- 2 Remove the yellow jumper wire from the terminals marked **RAIN SENSOR** on the terminal block.

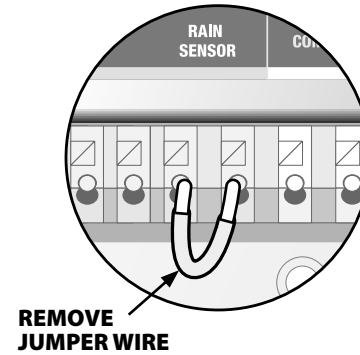

! **NOTE:** Do not remove the jumper wire unless connecting a rain sensor. The timer will not function if the jumper wire is removed and a rain sensor is not connected.

- 3 Connect the two wires from the sensor to the **RAIN SENSOR** terminals.

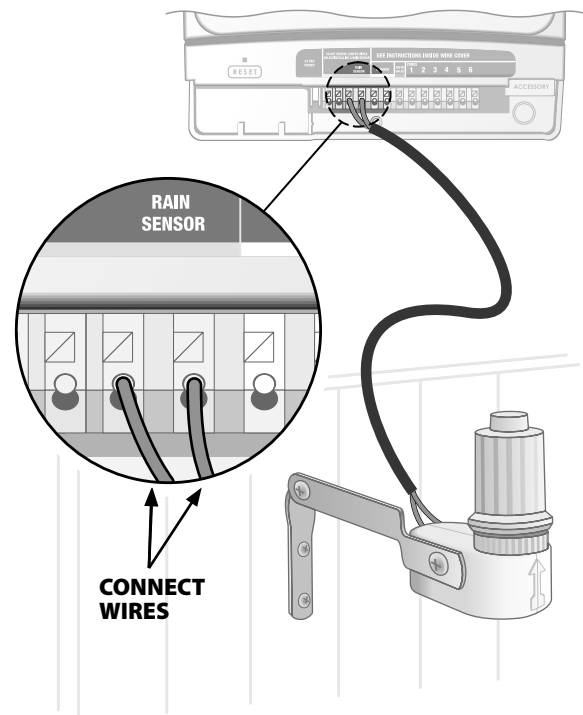


Master Valve Or Pump Start Relay

Connect an optional master valve or pump start relay

SST timers support the use of a master valve or pump start relay. A pump start relay connects to the timer the same way as a master valve, but connects differently at the water source.

- Using a direct burial cable, connect one of the wires from the master valve (or pump start relay) to the timer terminal marked **MSTR VALVE**.
- Using a direct burial cable, connect the remaining wire from the master valve (or pump start relay) to one of the timer terminals marked **COMMON**.

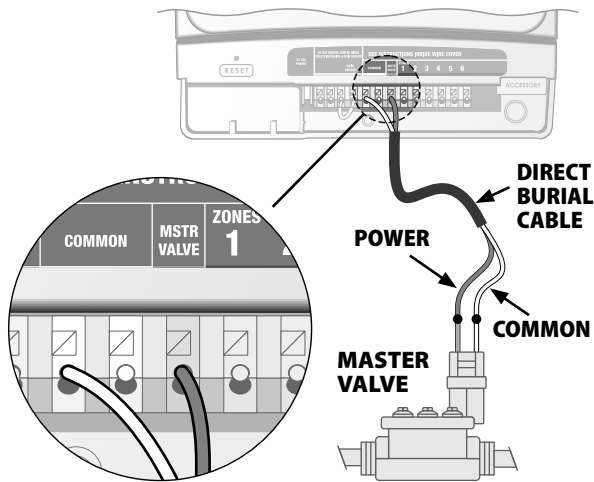


Additional instructions for connecting a pump start relay

- To avoid possible pump damage, connect a short jumper wire from any unused zone terminal(s) to the previous terminal, continuing back to the nearest zone terminal in use (as shown below).

For example, if a 4 zone model timer is in use with only two zones connected, route the terminals for zones 3 and 4 to the nearest active terminal (zone 2 in the example below).

- WARNING:** Make sure that the total draw of the master valve (and/or pump start relay) plus the draw of the valve does not exceed 650mA at 24VAC, 60hz. Note that the timer does NOT provide main power for a pump.

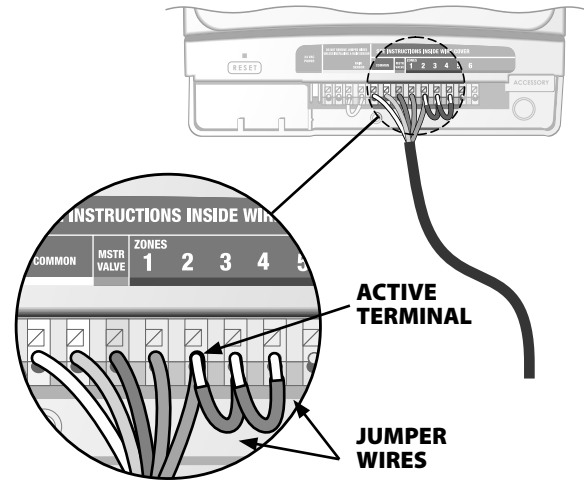

Controls and Indicators

AUTO RUN

Set dial here to run all programmed settings.

OFF

Turns off all watering.

RAIN DELAY

Delays watering up to 72 hours.

SEASONAL ADJUST

Adjusts watering % as seasons change.

ZONES

Select individual zone to program (6 zone model shown).

WATER ALL ZONES NOW

Sequentially waters all scheduled zones.

WATER 1 ZONE NOW

Manually waters an individual zone.

SET TIME

SET DATE

DISPLAY SCREEN

RUN DAYS

Select which week day(s) a zone is watered.

ZONE OFF

Turns off watering of selected zone.

WATERING TIMES

Select how many times per day a zone is watered.

ODD/EVEN DAYS

Select only Odd or Even days to water by pressing twice. Pressing multiple times switches between **ODD** and **EVEN** day cycles.

CYCLIC WATERING

Select watering interval from 1-29 days.

UP/DOWN ARROWS

Use **UP/DOWN** arrows on left or right keys to set time, date, run time, etc.



Setting the Timer


Step 1. Set Time

- Turn the dial to the **SET TIME** position.
- Press the **UP/DOWN** arrow keys to set the time (verify AM/PM setting is correct).




Step 2. Set Date

- Turn the dial to the **SET DATE** position.
- Press the LEFT **UP/DOWN** arrow keys to set the year.
- Press the RIGHT **UP/DOWN** arrow keys to set the month and day.

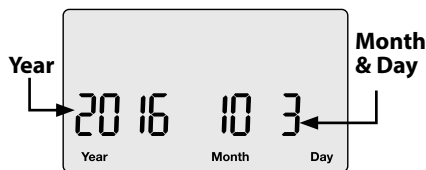

Step 3. Schedule Watering

- Turn the dial to select the desired **ZONE** (from 1 to 12).

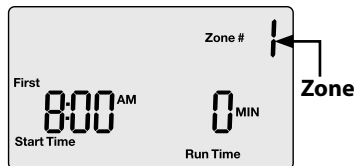

Set Start Time and Run Time

- Press the Left **UP/DOWN** arrow keys to set the Start Time.
- Press the Right **UP/DOWN** arrow keys to set the Run Time (duration).




- NOTE:** Multiple zones having the same start time will run in sequence by zone number. For example, if zones 3 and 4 are both set to run for 10 min. at 8:00 AM, zone 3 will run first at 8:00 then zone 4 will run afterwards at 8:10.

Select Run Days

- Press the **RUN DAYS** buttons to select which days to water. Active watering days will show lights illuminated.

- NOTE:** By default ALL days are lit. Press the button(s) to turn off the days you don't want to water.

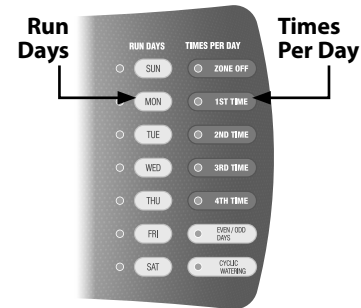

- Select specific days of the week or select **ODD /EVEN DAYS** or **CYCLIC WATERING**.

When **ODD/EVEN DAYS** is pressed:


- 1st press will show **Odd Days** on the screen.
- 2nd press will show **Even Days** on the screen.



- NOTE:** When Odd Days or Even Days is first pressed it will flash a few times on the screen and then stay illuminated.

When **CYCLIC WATERING** is pressed:

- Press the **LEFT UP/DOWN** arrow keys to increase or decrease the number of days between watering (**EVERY XX DAYS**).
- Press the **RIGHT UP/DOWN** arrow keys to adjust the **Cyclic Watering** start date.

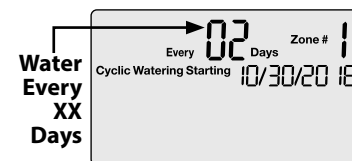

Select Watering Times Per Day

- Press the **TIMES PER DAY** buttons to schedule the number of times per day to water.

- Press the **LEFT UP/DOWN** arrow keys to set the Start Time.
- Press the **RIGHT UP/DOWN** arrow keys to set the Run Time (duration).


- Repeat Step 3 for remaining zones.

- Turn the dial to **AUTO RUN**.

Optional Features

Multiple Start Times

After selecting a time per day the screen will show that time, "First", as an example.

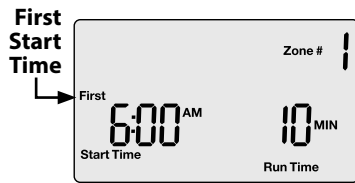

- Press the **LEFT UP/DOWN** arrow keys to set the start time.
- Press the **RIGHT UP/DOWN** arrow keys to set the duration.


- Repeat to set additional watering times, up to 4 per day.

NOTE: If a second, third, or fourth watering time is scheduled earlier in time than a previous time, the timer will automatically reorder the times sequentially the next time the dial is turned to that zone #.

Seasonal Adjust

Adjust for seasonal weather variation

- Turn the dial to **SEASONAL ADJUST**.

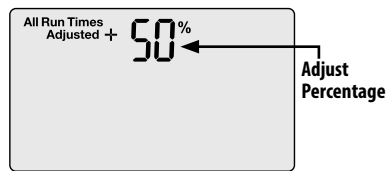


- Press the **UP/DOWN** arrow keys to adjust the percentage. For example, a +50% adjustment means 10 min. becomes 15 min.

NOTE: Adjustment applies to ALL watering run times (durations) for all zones.

Rain Delay

Suspend Watering

- Turn the dial to **RAIN DELAY**.

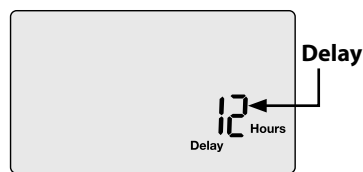

- Press the **UP/DOWN** arrow keys to set the delay time for up to 3 days (72 hours).

NOTE: Any scheduled watering that falls within the delay period will not occur.

Normal Operation

While set to **AUTO RUN**, one of the following screens will be displayed:


Not Watering

Screen displays the current time, the zone that is scheduled to be watered next, and the date and time when watering will occur.




Watering Now

Screen displays the zone currently being watered and the number of minutes remaining for that zone.

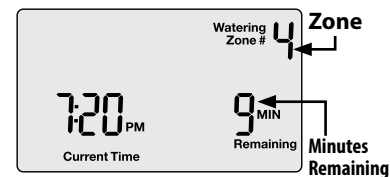


Rain Delay

Screen displays the current time and the number of delay hours that are left until regularly scheduled watering resumes.

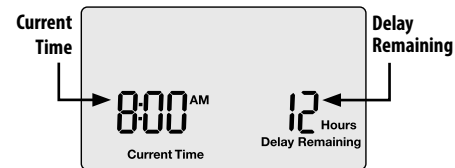


Seasonal Adjust

Screen displays the percentage adjustment for all zones.

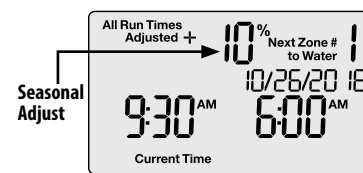

Error Detected

If an error is detected, the affected zone is displayed.

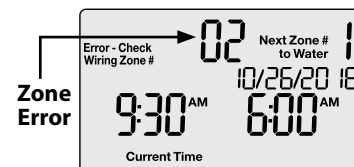

Important!

Always return the dial to **AUTO RUN** when programming is completed. The timer will not run automatically unless the dial is set to **AUTO RUN**.

Manual Operation


Choose from two Manual Watering options:



Water All Zones Now

- Turn the dial to **AUTO RUN**.
- Press the **WATER ALL ZONES NOW** button to start watering.

Screen displays which zone is being watered and the number of minutes remaining for that zone.

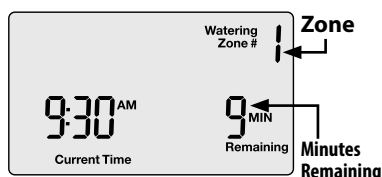


To stop watering the active zone and skip to next zone, press the **WATER ALL ZONES NOW** button again.

- To stop manual watering, turn the dial to **OFF**, wait until watering is stopped and then back to **AUTO RUN**.

Water 1 Zone Now

- Turn the dial to select a **ZONE**.
- Press the **WATER 1 ZONE NOW** button to start watering (default run time of 10 minutes).

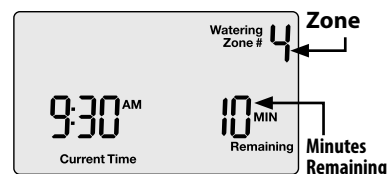

- Press the **UP/DOWN** arrow keys to adjust the run time.
- To stop manual watering, turn dial to **OFF**, wait until watering is stopped, and then turn dial to **AUTO RUN**, or press the **Water 1 Zone Now** button a second time.

Troubleshooting

Watering Issues

Problem	Possible Cause	Possible Solution
Automatic and manual cycles do not begin watering.	Water source not supplying water.	Verify the main water and all supply lines are open and operating properly.
	Wires not properly connected.	Verify field wires are connected properly including the timer, master valve (or pump start relay) and any spliced connections.
	Wires damaged or corroded.	Check field wiring for damage and replace if necessary. Check all connections and replace with watertight connectors as needed.
	Dial not set to AUTO RUN position.	Turn the dial to set date and set time and use UP/Down arrows to set correct date and time.
	Date and/or Time is not set correctly.	Enter the current Date and Time on the controller.
	An installed Rain Sensor may be activated.	Operation will resume when sensor dries out. To test operation, disconnect the Sensor and connect a jumper wire between the Rain Sensor terminals.
	If no Rain Sensor is installed, the jumper wire may be damaged or missing.	Connect the two yellow Rain Sensor terminals with a short length of 14 to 18 gauge jumper wire.
An electrical surge may have damaged the timer's electronics.	Disconnect power to the timer for 3 minutes, press the reset button, then turn back on. If there is no damage, the timer will accept programming and resume normal operation.	
Watering cycles do not shut off.	Debris trapped in valve.	Flush the valve by temporarily opening the bleed-screw and re-tighten.

Electrical Issues

Problem	Possible Cause	Possible Solution
LCD Display is blank.	Timer is not receiving power.	Verify the power cord is connected and securely plugged in (indoor).
		Verify the transformer is wired correctly and the circuit breaker is on (outdoor).
No red LED light on transformer (indoor only).	Blown transformer.	Replace transformer.
LCD Display is "frozen" and timer will not accept programming.	An electrical surge may have damaged the timer's electronics.	Disconnect power to the timer for 3 minutes, press the reset button, then turn back on. If there is no damage, the timer will accept programming and resume normal operation.
Valve short error message on LCD display.	Wires damaged or corroded.	Check the indicated zone wiring for damage and replace if necessary. Check all connections and replace with watertight connectors as needed.



Rain Bird Corporation
6991 East Southpoint Road
Tucson, AZ 85756 USA
Tel: (520) 741-6100
Fax: (520) 741-6522

© 2016 Rain Bird Corporation
® Registered trademark of Rain Bird Corporation

**Questions? Call 1-800- RAIN BIRD (800-724-6247)
or visit www.rainbird.com**

Rev.10/16 09OC16