 


*Frigidaire*

## RETRO COOLER

0.32<sup>CU FT</sup>

9<sub>L</sub>

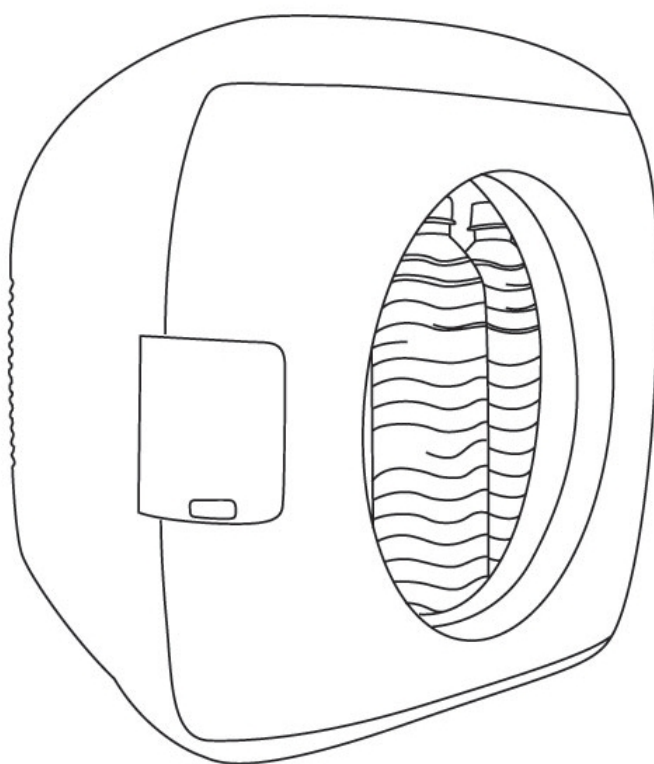

**Please Read These Instructions Carefully Before Use!**  
**FRIGIDAIRE™ is a pending or registered trademark used**  
**under license from Electrolux Home Products, Inc**

### USER MANUAL

EFMIS 462

## IMPORTANT SAFETY INSTRUCTIONS

### PLEASE FOLLOW THE PRECAUTIONS BELOW FOR YOUR NEW RETRO COOLER

1. The power switch should be put at the "OFF" position for over 5 minutes before changing the working mode (from cooling to warming or from warming to cooling).
2. When the cooling or warming function is on, keep in a well-ventilated area. Don't block the ventilation of the unit.
3. Do not operate under direct sunlight.
4. Do not disturb the airflow of the unit.
5. Do not pour water into the unit directly.
6. Do not use near water. Keep unit out of wet weather conditions.
7. Use damp cloth to clean the unit; do not submerge unit in water.
8. When leaving unit for a long time, put it in a well-ventilated area.
9. Avoid dropping unit.
10. Do not put carbonated beverage in unit when in warming function, this may cause unit to explode.
11. Keep unit away from fire or other flammable substances.
12. Do not store meats, poultry, fish, dairy products and other items that may spoil in unit for more than one hour.

### PROPER DISPOSAL

An empty RETRO COOLER is an extremely dangerous attraction to children. If you are getting rid of your old RETRO COOLER, please follow the instructions in the Child Entrapment Warning.

### CHILD ENTRAPMENT WARNING

 
Risk of child entrapment. Before you throw away your old RETRO COOLER:

1. Take off the doors.
2. Leave the shelves in place so that children may not easily climb inside.

### CAUTION: USE OF AN EXTENSION CORD IS NOT RECOMMENDED

**FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS**


## DOOR CLOSED

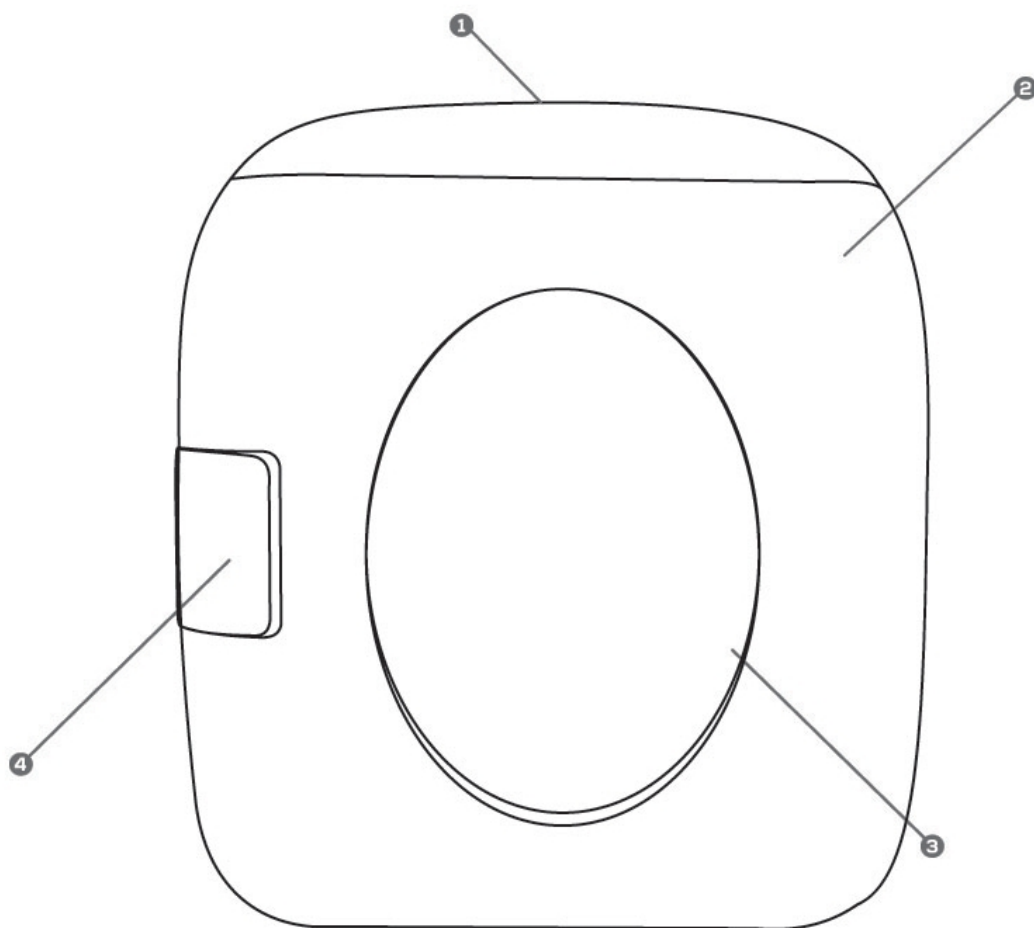

- ① HANDLE
- ② RETRO COOLER DOOR
- ③ TRANSPARENT DOOR
- ④ DOOR HANDLE

## FEATURES
 
### DOOR OPEN

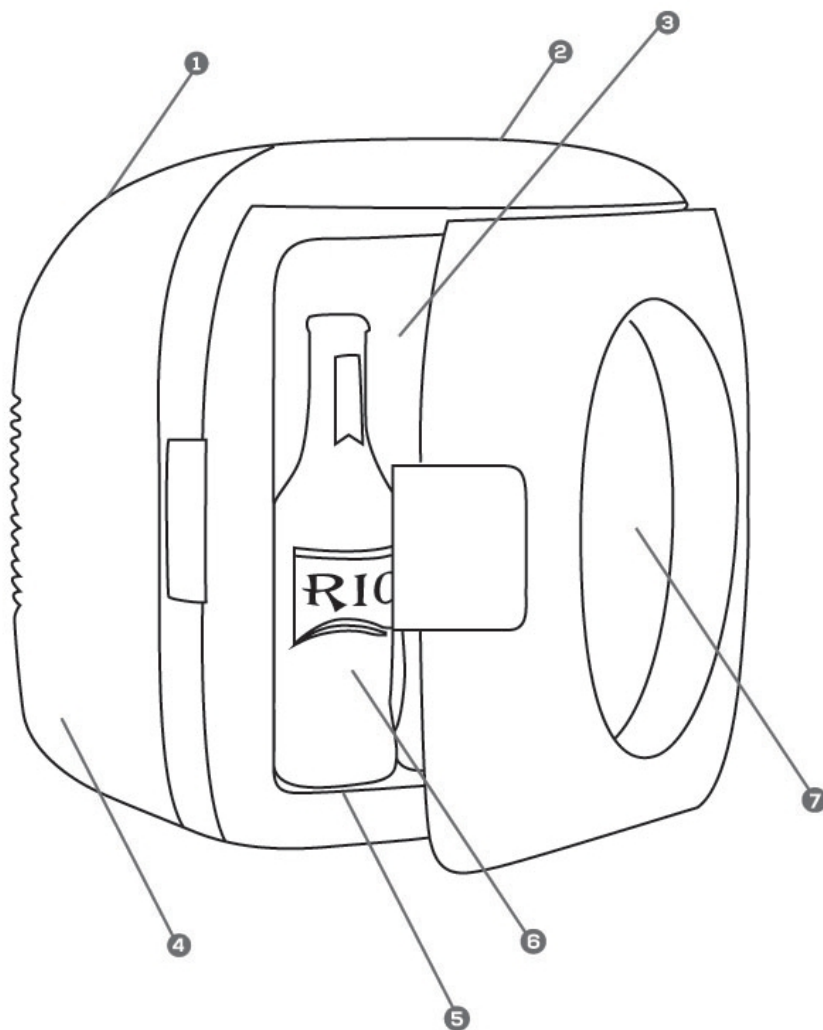

- ❶ VIBRATION FREE THERMOELECTRIC COOLING SYSTEM
- ❷ CONVENIENT CARRYING HANDLE
- ❸ HAS ROOM FOR YOUR SNACKS AND BEVERAGES
- ❹ DESIGNED TO EASILY FIT WHERE YOU NEED IT - ON YOUR DESK, BOOKSHELF OR OTHER HANDY SPOTS


- ❺ FOUR FEET-WONT SCRATCH YOUR FURNITURE
- ❻ HOLDS 12 CANS OR 9 LITERS
- ❼ COMPACT SEE THROUGH WINDOW

Please read through the operation manual thoroughly before using.

**CAUTION:** Always connect the adapter to the unit before connecting it to the power source. Use only the adapter provided with this unit.

## METHOD OF OPERATION
 
### 1. Electrical Outlet Use:

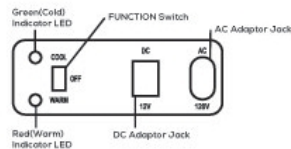

A. Ensure the function switch is in the off position and the unit is unplugged from any power source (electrical outlet or vehicle outlet).

B. Insert the narrow end of the AC adapter into the AC adapter jack on the product, and plug the other end into a standard 120-volt electrical outlet.



C. Slide the function switch to either the warm or cool position, as desired.

**NOTE:** It may take up to 45 minutes to cool or warm.

D. To turn the unit off, slide the function switch to the OFF position and then unplug it from the power source.

### 2. Vehicle Outlet Use:

**CAUTION:** Always connect the cord to the unit before connecting it to the power source. Use only the adapter provided with this unit.

The unit should only be operated while the engine is running to avoid draining the vehicle battery charge.

A. Connect the unit to 12-volt vehicle outlet.

B. Slide the function switch to either the WARM or COOL position, as desired.

**NOTE:** It may take up to 45 minutes to cool or warm.

C. To turn the unit off, slide the function switch to the OFF position and then unplug it from the power source.

## TROUBLESHOOTING

1.If unit stops functioning properly:

a.Disconnect unit

i.If plug is loose re-insert plug into DC power supply completely.

ii.If the cigarette lighter plug is loose (DC power supply),make sure lighter does not need to be cleaned.

iii.If the unit is still not properly functioning the cigarette lighter plug connect fuse could be blown, and should be changed by a proper automotive mechanic.

iv.If the car's power switch is off,the cigarette lighter may only function when car power is turned on.

## TECHNICAL SPECIFICATIONS

Model	Volume	Power Supply	N.W.	Power Consumption	Cool to...	Warm to...
EFMIS 462	9 Liters	DC: 12V	3KGS	Cold mode:50W Warm mode:40W	18-20°C or 64-68°F  Below Room Temperature	60 C or 140°F
		AC: 120V		Cold mode:58W Warm mode:50W		

## WARNING

### Accessories

When you open the package of mini fridge, you can find out the following main accessories.

1. DC 12V car adaptor
2. AC 120V Power adaptor
3. Instruction Manual

### WARNING:

Modifications not approved by the party responsible for compliance could void user's authority to operate the equipment.

Use of extension cords is not recommended with this product.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation."

## LIMITED PRODUCT WARRANTY

This quality product is warranted to be free from manufacturer's defects in material and workman-ship, provided that the unit is used under the normal operating conditions intended by the manufacturer.

Should you have any problem with this product, please and it is highly recommended to visit our website at [www.curtisint.com](http://www.curtisint.com) before you take any other steps as we have additional copies of instruction manuals, operating manuals and trouble shooting tips on our website which gives you the answer on most of the questions you could have in operating the unit.

### TERMS OF WARRANTY

C.I. Service Dept. warrants this product to be free from defects in materials and workmanship for 1 year on parts and 1 year on labor. If you originally purchased your product more than 1 year ago, a repair fee will apply.

Nothing within this warranty shall imply that C.I. will be responsible or liable for any damage to any items placed in this appliance, whether due to any defect of the appliance, or its use, whether proper or improper.

### EXCLUSIONS

Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), there are no other warranties, conditions, representations or guarantees, express or implied, made or intended by C.I. or its authorized distributors and all other warranties, conditions, representations or guarantees, including any warranties, conditions, representations or guarantees under any Sale of Goods Act or like legislation or statute is hereby expressly excluded. Save as herein provided, C.I. Service Dept. (Canada) or C.I. Service Dept. (USA), shall not be responsible for any damages to persons or property, including the unit itself, howsoever caused or any consequential damages arising from the malfunction of the unit and by the purchase of the unit, the purchaser does hereby agree to indemnify and save harmless C.I. from any claim for damages to persons or property caused by the unit.

### TO OBTAIN REPAIRS UNDER THE TERMS OF THIS WARRANTY

1. The original purchaser must present a copy of the original bill of sale and the service warranty card.
2. Any alterations, abuse, misuse, battery corrosion or accidental damage voids the warranty.
3. The warranty does not cover cabinets and accessories.
4. No warranty or insurance contained or set out shall apply when damage or repair is caused by power failure; damage in transit or when moving the unit; improper power supply; use for commercial or industrial purposes; service calls resulting in customer education, etc.
5. The defective product should be taken or mailed to:

Canada  
C.I. Service Dept.  
315 Attwell Drive  
Toronto, ON  
M9W 5C1

U.S.A  
Curtis International Ltd  
c/o Lotus International Company  
6880 Commerce Blvd.  
Canton MI 48187  
U.S.A.

For service assistance and product information, please call: 1-800-968-9853.

If mailing the product, the freight must be prepaid and a money order for \$7.00 should be included to cover the cost of insurance and the return of the product.

6. C.I. reserves the right to repair or replace the parts, which have become defective.

To begin the warranty repair process, please note that you MUST obtain a return authorization number prior to returning your product for warranty based support. This can be placed under the 1-800-968-9853 contact line.

Model No. \_\_\_\_\_ Date Purchased \_\_\_\_\_ Serial No. \_\_\_\_\_

**©Curtis International Ltd.**

**315 Attwell Drive, Toronto, Ontario M9W 5C1 [www.curtisint.com](http://www.curtisint.com)**