


USE AND CARE GUIDE

MODERN BATHROOM FAUCET

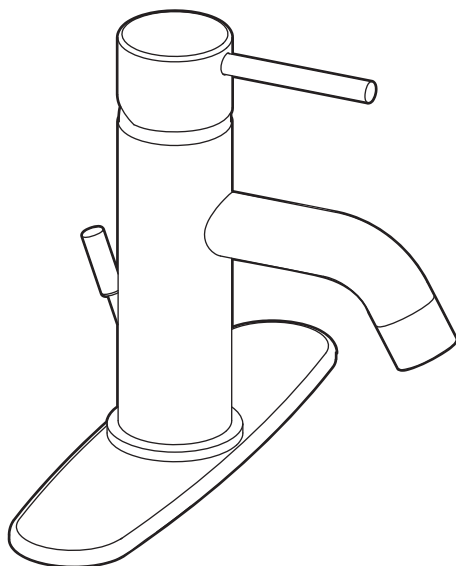

Questions, problems, missing parts? Before returning to the store,
call Glacier Bay Customer Service
8 a.m. - 6 p.m., EST, Monday - Friday

1-855-HD-GLACIER

HOMEDEPOT.COM/GLACIERBAY

THANK YOU

We appreciate the trust and confidence you have placed in Glacier Bay through the purchase of this faucet. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Glacier Bay!

Table of Contents

Table of Contents	2	Tools Required	3
Safety Information	2	Package Contents	4
Warranty	2	Installation	5
Limited Lifetime Warranty	2	Maintenance	7
Pre-Installation	3	Replacing the Cartridge	7
Planning Installation	3	Replacing or Cleaning the Aerator	7
Temperature and Pressure Specifications	3	Care and Cleaning	7

Safety Information

1. Always turn off the water supply before removing the existing faucet or replacing any part of the faucet. Open the faucet handle to relieve water pressure and ensure that water is completely shut off.
2. Cover the drain in your sink to avoid losing parts.



WARNING: Avoid contact of plastic parts with plumber's putty, pipe dope, or any other oil-based compound.

Warranty

LIMITED LIFETIME WARRANTY

Glacier Bay products are manufactured with superior quality standards and workmanship and are backed by our limited lifetime warranty. Glacier Bay products are warranted to the original consumer purchaser to be free of defects in materials or workmanship. We will replace **FREE OF CHARGE** any product or parts that proves defective. Simply, return the product / part to any of The Home Depot retail locations or call 1-855-HD-Glacier (1-855-434-5224) to receive the replacement item. Proof of purchase (original sales receipt) from the original consumer purchaser must be made available for all Glacier Bay warranty claims.

This warranty excludes incidental/inconsequential damages and failures due to misuse, abuse or normal wear and tear. This warranty excludes all industrial, commercial & business usage, whose purchasers are hereby, extended a five year limited warranty from the date of purchase, with all other terms of this warranty applying except the duration of warranty.

Some states and provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you. This warranty gives you specific legal rights and you may also have other rights that vary from state to state and province to province.

Contact the Customer Service Team at 1-855-HD-GLACIER or visit HOMEDEPOT.COM/GLACIERBAY.

PLANNING INSTALLATION

Before you begin to install this product, ensure that all parts are present. Compare parts with the package contents list. If any part is missing or damaged, do not attempt to install the product. Contact customer service for replacement parts.

Always turn off the water supply before you remove or replace the existing faucet. Turn off the cold and hot water lines and turn on the old faucet to release build-up pressure.

TEMPERATURE AND PRESSURE SPECIFICATIONS

Water Supply	Recommended	Max.	Min.
Hot Water Temperature	65°C (150°F)	80°C (175°F)	15°C (60°F)
Working Pressure	3 BAR (45 PSI)	5 BAR (75PSI)	0.5 BAR (7PSI)

If the operating pressure exceeds 75PSI (5 BAR), the use of a pressure reducer is recommended.

TOOLS REQUIRED



Adjustable
Wrench



Safety Goggles



Silicone




Groove
Joint Pliers



Thread Sealant
Tape

Pre-Installation (continued)

PACKAGE CONTENTS

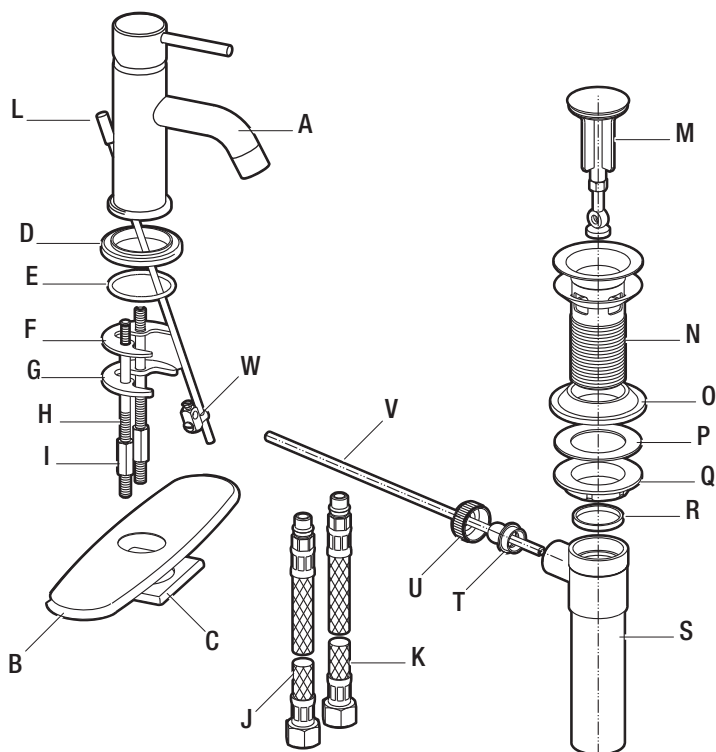


Part	Description	Quantity
A	Faucet body	1
B	Deck plate	1
C	Deck square	1
D	Base ring	1
E	O-ring	1
F	Shaped seal	1
G	Flange	1
H	Threaded pin	2
I	Pin nut	2
J	Left supply tube	1
K	Right supply tube	1
L	Vertical rod	1

Part	Description	Quantity
M	Drain plug	1
N	Drain	1
O	Drain seal	1
P	Drain flange	1
Q	Drain nut	1
R	Drain washer	1
S	Drain body	1
T	Ball	1
U	Nut	1
V	Horizontal rod	1
W	Clamp	1

Installation


1 Turning off the water supply

- Shut off the water supply.
- If necessary, remove the old faucet and clean off the installation surface.

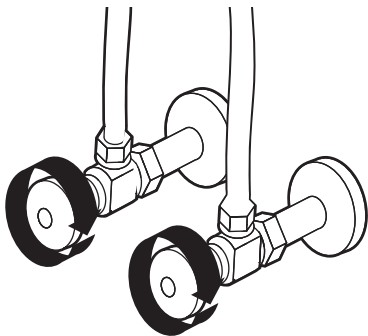


2 Installing the deck plate

- Position the deck square (C) and deck plate (B) over the faucet hole.

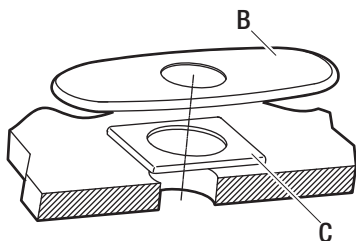


3 Preparing the faucet body

- Screw the threaded pins (H) and the supply tubes (J and K) into the bottom of the faucet body (A).
- Position the base ring (D) and O-ring (E) to the bottom of the faucet body (A).

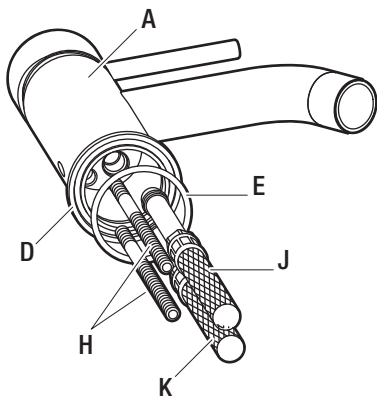


4 Installing the faucet body

- Place the faucet body (A) over the hole in the sink and thread the connections through the sink hole.
- From underneath the sink, slip the shaped seal (F) and the flange (G) onto the threaded pins (H).
- Secure the faucet body (A) underneath the sink using the pin nuts (I).

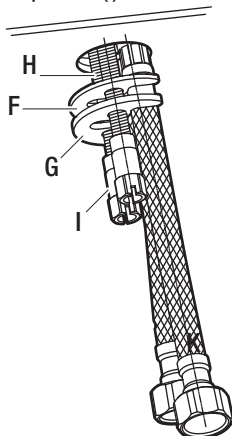


5 Installing the drain body

- Place the drain (N) equipped with the tapered drain seal (O) in the drain hole (apply silicone between the drain and the ceramic if necessary).
- Secure the drain (N) underneath the sink using the drain flange (P) and drain nut (Q). Insert the drain plug (M) into the drain (N).
- Attach the drain body (S) to the drain (N) by placing the drain washer (R) and drain body (S) to the bottom of the drain (N) and twisting the drain body (S) until secured in place.
- Insert the ball (T) of the horizontal rod (V) into the hole in the drain body (S), ensure it enters the hole in the bottom of the drain plug (M). Secure in place by tightening the nut (U) onto the drain body (S).

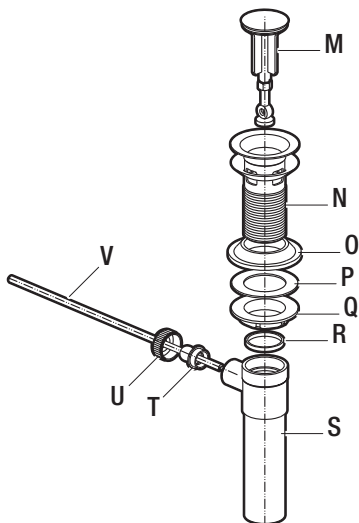


6 Attaching the vertical rod

- Insert the vertical rod (L) down through the hole in the faucet body (A).
- Connect the rod (L) to the horizontal rod (V) using the clamp (W). Adjust the travel of the drain plug (M) as necessary by adjusting these connections.

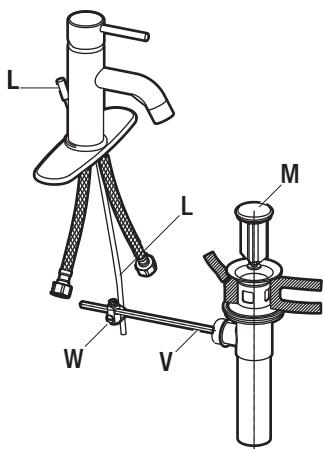


7 Connecting the water supplies

- Connect the left supply tube (J) to the hot water supply and the right supply tube (K) to the cold water supply.

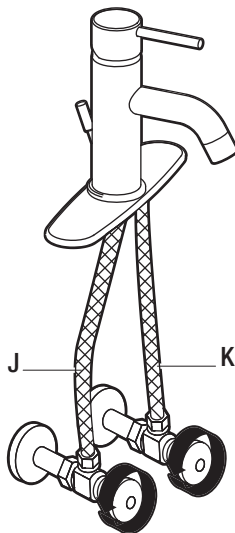

8 Checking for leaks


- Turn on the water supply and check that the faucet is operating properly and that no leakage is detected from any of its parts. Also check underneath the sink to ensure all connections are secure and that there are no leaks.
- Pull the handle upwards to turn on the water.
- Position it to the left for hotter water and to the right for colder water. To turn off the water, push the handle down.

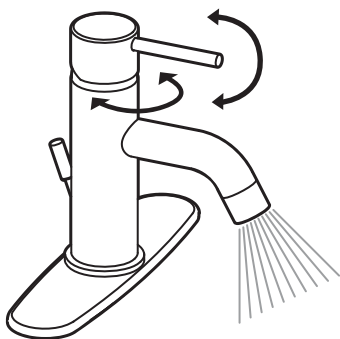

Maintenance


REPLACING THE CARTRIDGE

- Unscrew the lever (1) and remove the handle (2).
- Unscrew the cap (3) and retainer nut (4). Unscrew the top (5) and remove the cartridge (6).
- To assemble, reverse the steps taking care to clean the surface in contact with the seals properly.
- Tighten the nut (4) in order to guarantee the seal, while assuring that the handle turns smoothly.

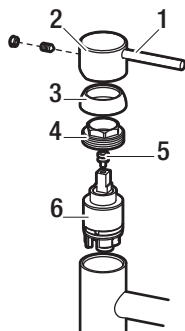

REPLACING OR CLEANING THE AERATOR

Unscrew the aerator nut (1) and clean the aerator (2). Reverse these steps to reinstall the aerator (2), ensuring the washer (3) is in the proper installation position.

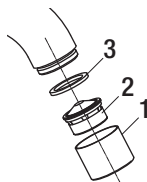

Care and Cleaning

This faucet is designed for years of trouble-free performance. Keep it looking new by doing the following:

- Clean periodically with a soft cloth.
- Avoid abrasive cleaners, steel wool, and harsh chemicals as these will dull the finish and void your warranty.



Questions, problems, missing parts? Before returning to the store,
call Glacier Bay Customer Service
8 a.m.-6 p.m., EST, Monday-Friday

1-855-HD-GLACIER

HOMEDEPOT.COM/GLACIERBAY

Retain this manual for future use.