

## **AC04128 Air Filter Kit**

### **Installation Instructions**

1. Remove the air filter from your tool following the instructions in your operator's manual.
2. Find the new air filter from the kit which matches your old filter.
3. Replace the air filter for your tool following the instructions in your operator's manual.