



For Best Results Please Consider These Tips

While obeying all the “Important Safeguards and Operating Instructions” there are a few tips that can make your Flame Genie fire pit experience even more enjoyable.

There are differences between wood pellets. Be sure to buy the best hardwood pellets. Take care to reseal or close your wood pellet bag, or even store your wood pellets in a sealable container. Wood pellets are very dry when first opened, but will attract water vapor slowly over time, which can affect performance when burning.

Flame Genie should be placed on a non-combustible surface, such as a patio block, which will also act as a catch for the small amount of ash generated by the Flame Genie.

Load the Flame Genie with approximately 2 — 2 1/2” of wood pellets before lighting. Fat Wood works well to start your Flame Genie. Do not use any volatile flammable liquids such as gasoline.

The special flame pattern will not start until the inner cylinder walls become hot enough to heat the air between the inner and outer cylinders, and start the gravitational flow. You will enjoy watching it start, and go completely around the ring. This will take about five minutes.

After enjoying the flames from your initial load of wood pellets, when the fire starts to die down as the wood pellets are consumed, replenish the wood pellets using a small metal scoop, or similar device. BUT DO NOT suffocate the remaining flame with the new wood pellets, which will cause the new pellets to smoke excessively until the pellets re-ignite. Learning this trick will improve your enjoyment.

At the end of your Flame Genie burn, just let the fire go out. Be cautious of live coals that may look like ash, to avoid being burned. In a relatively few minutes the coals will have gone out leaving a very limited amount of ash on the grate, and the Flame Genie will be cooled. Just shake out the remaining ash through the grate and put away your Flame Genie. Make sure everything is cool before storing.

1. **This appliance is for outdoor use only, and should NOT be used in a building, a garage, or any other enclosed area.**
2. Do NOT use this fire pit for indoor heating. TOXIC carbon monoxide can accumulate and cause asphyxiation.
3. This outdoor fire pit is not for commercial use.
4. This outdoor fire pit is NOT to be operated by CHILDREN.
5. NEVER leave this fire pit unattended, especially when children and pets are about.
6. This outdoor fire pit is not to be used in a boat or recreational vehicle.
7. Always use this fire pit in accordance with all applicable local, state, and national codes. Some areas ban open burning. Contact local fire departments for details on open burning.
8. When using this fire pit, exercise the same precautions you would with any open fire.
9. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to operate this fire pit safely.
10. Do NOT use this fire pit until you have read the Operating Instructions.
11. This fire pit is designed for the use of wood pellets only. it will burn hotter, more completely, and create less smoke and ash.
12. Do NOT burn charcoal briquettes, lump charcoal, manufactured logs, driftwood, trash, leaves, paper, cardboard, plywood, or painted, stained, or pressure treated wood.
13. Do NOT alter this fire pit in any manner.
14. Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other burning appliance.
15. Do not store or use a LP gas cylinder within 30 feet (9.2 meters) of this fire pit while it is in operation.
16. Do NOT use this outdoor fire pit near automobiles, trucks, vans or recreational vehicles.
17. Do NOT use this fire pit in any explosive environment. Keep outdoor fire pit area clear and free of any combustible materials, gasoline, or other flammable liquids.
18. Do NOT use this fire pit under any overhead, or near any unprotected combustible constructions. Avoid using under or near any overhanging trees or shrubs.
19. Always use this fire pit on a hard, level, non-combustible surface like concrete, rock or stone. An asphalt or hardtop surface may not be acceptable for this purpose. Do Not use on a **wooden deck**.
20. Always empty this fire pit before each use.
21. Do NOT wear inflammable or loose clothing when operating this fire pit.
22. Do NOT use this fire pit in windy conditions.
23. Always use this fire pit in a steel or rock campfire ring.
24. Do NOT use gasoline, kerosene, diesel fuel, lighter fluid or alcohol to light or relight this fire pit.
25. Keep all electrical cords away from this fire pit.
26. All surfaces of this fire pit are hot when in operation. To avoid burns and injury, do NOT touch this fire pit until the fire is completely out and it has completely cooled. Never touch the coals or ash to see if they're still warm.
27. Do NOT attempt to move or store this outdoor fire pit until **all fire, coals, and ashes are completely extinguished, and the fire pit has completely cooled.**
28. Do not remove any coals or ash, or clean the fire pit until the coals and ash are completely extinguished and the fire pit has completely cooled.
29. Do NOT lean over this fire pit when lighting or when it is in use.
30. Do NOT place any guard or accessory such as tools onto combustible surfaces such as grass, a wooden deck, or furniture.
31. Avoid breathing smoke from the fire, and avoid getting it in your eyes.
32. This fire pit should be inspected and cleaned regularly after each use.
33. After a period of non-use, check the fire pit for signs of damage and creosote buildup. Do NOT operate until necessary repairs and for cleanup is done.
34. **Serious injury, death, and/or property damage may occur if the above instructions are not followed exactly.**