



*The Choice of Professionals*



**DTA USA GROUP Inc**  
Tiling Tools, Accessories & Floor Trims



## Use & Care Manual for hardwood & laminate floor wedge -WFW-4

Easy, fast, and simple. Insert between the wall and the first row of flooring, adjust the distance to the wall can be set by turning the dial. To release, simply rotate the dial to release the pressure.

Wide contact and support surface, Pressure points on the wall and the flooring are avoided with no danger of the spacer slipping or tilting – as can happen with wedges or blocks.

Wall surface irregularities can be compensated for easily. The exact distance for spacing can be readily seen on the scale on wedge.

Manufactured for durability.

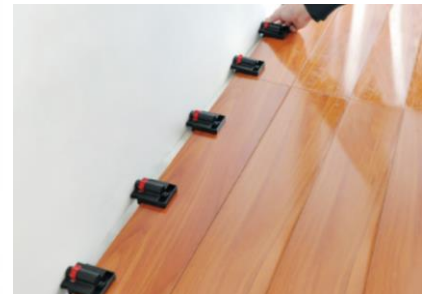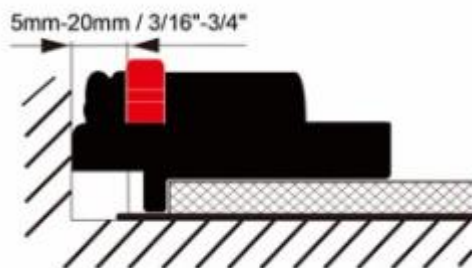

DTA USA GROUP INC  
230 South Vasco Road  
Livermore, CA 94551  
E: [sales@dtausagroup.com](mailto:sales@dtausagroup.com)  
P: 925 371 7101

[www.dtausagroup.com](http://www.dtausagroup.com)