

## 1. Safety & Warnings

**Inspect Before Each Use:** Check the chair frame, joints, fabric, and all seams for signs of damage, rust, or stress. Do not use if any part is compromised.

**Weight Limit:** This chair has a maximum weight capacity of **300 lbs (136 kg)**. Do not exceed this limit.

**Proper Setup:** Ensure the chair is fully unfolded and all locking mechanisms are securely engaged before sitting down. Only use on flat, stable ground.

**Folding/Unfolding:** Keep hands and fingers clear of folding joints and pivots to avoid pinching.

**Dynamic Loading:** Avoid sudden, forceful dropping into the chair or rocking excessively. Do not stand on the chair.

**Children:** Do not leave children unattended in or near the chair. The folding mechanism poses a pinch hazard.

---

## 2. Assembly (if required)

Your chair may come partially assembled. If needed, refer to the quick-start diagram included in your packaging.

Typically, this involves attaching the backrest support bars to the seat frame using provided pins or bolts.

Ensure all connections are **snapped or screwed securely into place** before first use.

---

## 3. Usage Instructions

### Opening the Chair:

Hold the chair by the armrests.

Gently pull upward and push the seatback backward until the frame clicks into the fully locked open position.

### Closing the Chair:

Ensure all pockets and the cooler bag are empty.

Locate the release levers or buttons (typically near the pivot points on the armrests).

Activate the releases while gently folding the seat and backrest together.

### Feature Use:

**Side Pockets:** Ideal for storing phones, books, or sunscreen. Do not overload with heavy or sharp objects.

**Cup Holder:** Designed for standard cans and cups. Wipe spills promptly.

**Cooler Bag:** Use with reusable ice packs for best results. Avoid placing wet items directly inside. Do not overfill.

---

## 4. Care & Cleaning

### **Black Stainless Steel Frame:**

Wipe clean with a damp, soft cloth after use to remove dirt, sand, or moisture.

For stubborn spots, use a mild soap solution. Dry thoroughly.

**Do not use** abrasive cleaners, steel wool, or harsh chemicals that can damage the finish.

### **Fabric (Seat, Backrest, Pockets):**

Spot clean with a soft brush or cloth, mild detergent, and lukewarm water.

Rinse thoroughly with a clean, damp cloth. **Allow to air dry completely** in a shaded area before folding and storing.

**Do not** machine wash, machine dry, bleach, or dry clean.

### **Cooler Bag (if fabric/insulated):**

Empty and wipe interior with a damp cloth. For spills, use a mild baking soda or vinegar solution to neutralize odors.

Leave open to air dry **completely** before storing.

Store in a relaxed, unfolded state to maintain insulation integrity.

---

## 5. Storage & Maintenance

**Crucial:** Store the chair **indoors** or in a dry, covered area when not in use for extended periods.

**Always ensure the chair and cooler bag are completely clean and dry** before folding and storing to prevent mold, mildew, and frame corrosion.

Lubricate the folding pivot points and locking mechanisms **once per season** with a light silicone spray to ensure smooth operation.

---

## 6. Warranty

This product is covered by a limited manufacturer's warranty against defects in materials and workmanship for a specified period from the date of purchase. Damage from misuse, improper care, commercial use, or failure to follow instructions is not covered.