



chili®

Model HSV1000



### Care and Use Instructions

Ewbank LLC  
8261 Highway 73, Suite F,  
Stanley, N.C. 28164, USA

Toll Free: 855-4EWBANK Email: [enquiries@ewbankusa.com](mailto:enquiries@ewbankusa.com) Website: [www.ewbankusa.com](http://www.ewbankusa.com)

**DO NOT VACUUM LIQUIDS WITH THIS PRODUCT**




Thank you for purchasing your Ewbank Chilli® Vacuum Cleaner, we hope you enjoy using it.

Please read the manual carefully to get the most out of your product.

**Pack Contents:**

No.	Description	Part No.
1 -	Ewbank Chilli®	n/a
2 -	Extension Handle	EB0398
3 -	Extension Hose	EB0394
4 -	Floor Brush	EB0396
5 -	Upholstery Brush	EB0397
6 -	Crevice Tool	EB0395
7 -	Instruction Manual	EB0499
8 -	Filter Assembly x2	EB0400
9 -	Filter Debris Guard x2	EB0401
10 -	Angled Dust Remover	EB0510

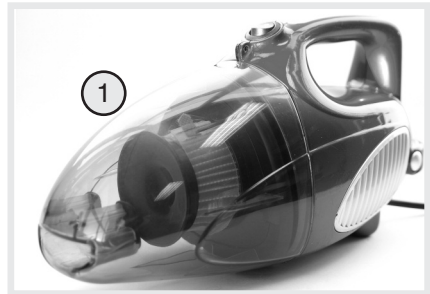

**Read the instruction book before using the Ewbank Chilli® and make sure that...**

- The power cord is in perfect condition.
- All packaging materials are removed from the product.



### DO NOT:

- Move the unit by pulling on the power cord.
- Modify the unit in any way - this is dangerous and will invalidate the guarantee.
- Handle the unit with wet hands.



### WARNING!

- This product is not a toy.
- Always unplug the Ewbank Chilli® when not in use.
- To avoid electric shock, do not expose to rain or use outside.
- Store the unit indoors.
- NEVER pick up flammable or combustible liquids such as petrol or other volatile substances.
- NEVER use in the presence of explosive liquids, vapours or explosive dust such as coal or grain.
- If motor sound becomes higher pitched always check for the following:
  - Blocked hose or accessory
  - Blocked/clogged filter
  - Full container
- Always check that the filter is clear and not blocked. Keep all openings clear of any blockages.
- When lifting the unit, always hold it by the hand grip.
- Only use the product as detailed in these instructions.
- Only use the manufacturer's recommended attachments and consumables.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Ensure unit operation switch is off before plugging unit into power socket-outlet.
- If the power cord is damaged, it must be replaced by Ewbank Products Ltd or its appointed agents in order to avoid a hazard.

## Assembling the accessories

The Ewbank Chilli® can be used as a hand-held vacuum cleaner and as an upright stick-vac.

Floor brush, hose and upholstery accessories can be added by inserting the required accessory into the waste chamber inlet.

The extension handle can be added by inserting the handle into the hole located at the rear of the unit, ensuring that the button located on the end of the handle is guided into the slot on the edge of the hole. Push the handle in until an audible “click” is heard.

To remove the handle, depress the silver button on the side of the unit and pull the handle out of the hole, releasing the button once the handle is clear of the unit.



## Handheld Use

Use without accessories as a hand-held vacuum cleaner.

Perfect for tidying up after meals, vacuuming upholstery, stairs and anywhere that needs a quick clean up.



Using the air-powered brush head.

Use with the air-powered brush head to clean carpets, rugs and any types of bare floor.




Using the extension hose and accessories.



Use with the accessories to clean sofas and chairs, cars, trailers and anywhere you need to clean.



Using the angled dust remover.  
For blinds/shelves it is recommended to attach the dust remover to the extension hose.

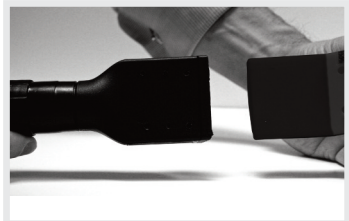



For hard to reach areas such as ceiling fans and door frames the attachment can be fitted directly to the chilli unit on the extension handle.

Please note the unit should be rotated so the dust remover is angled correctly.



To keep your Ewbank Chilli® running at maximum efficiency it is recommended that the filter is cleaned and washed at regular intervals, ideally after every use.

A replacement filter pack is provided to enable continuous use of your Ewbank Chilli® with regular filter cleaning and maintenance.

### **Important Care Advice**

A blocked filter will restrict airflow to the motor which can cause overheating. This will become apparent as the motor will make a high-pitched noise. If this happens stop the unit and clean the filter or switch to the spare filter as described below.

As a safety precaution the motor is designed to cut out in the event of overheating. Please allow the unit to cool sufficiently for up to one hour before restarting.

### **Emptying the waste chamber and caring for your filter**

Disconnect the Ewbank Chilli® from the power socket-outlet.

Depress the waste chamber release button (Fig. 1).

Separate the chamber from the main body (Fig. 2).

Fig.1



Fig.2



Remove the filter body from the chamber (Fig. 3), and empty the waste from the chamber. The chamber can be rinsed out with warm (not hot) soapy water if necessary. Ensure that the chamber is dry before reassembly.



Unwrap the debris guard from the filter (Fig.4) then gently shake, tap or brush the filter to remove dust particles and debris. Both the filter and debris guard can be washed under warm water.

Allow 24 hours to ensure the filter has fully dried before reassembly.

Use the additional filter pack supplied to continue using your Ewbank Chilli® whilst filter maintenance is carried out.



## Mains Connection

This unit is a Class II appliance which means it is double-insulated for your protection, no earthing wire is necessary.



If the power cord is damaged, it must be replaced by Ewbank Products Ltd or its appointed agents to avoid a hazard.

If the fitted plug is cut off from the power cord then the plug must be disposed of safely.

If you are using an extension cord it must be rated at a minimum of 15 Amps and fully unwound. Do not operate with a lead rated less than 15 Amps as this will cause premature failure of the motor which is not covered by the warranty.

## Technical data

- 23ft Power Cord
- 120V ~ 60Hz
- 1000W
- Sound pressure 80dB (A) approx.
- 0.85 quart (Qt) Waste Capacity
- 3.3 lbs



E113595  
CONFORMS TO UL STD 1017  
CERTIFIED TO CSA STD C22.2 No. 243-10

## Your Warranty

This product is guaranteed for a period of 12 months against faulty materials and workmanship.

While every possible care is taken by Ewbank LLC to ensure that our products leave the factory in good working order, Ewbank LLC cannot under any circumstances accept liability for problems or damage caused by their subsequent use. It is the responsibility of the user to ensure the surfaces to be treated or cleaned are suitable for vacuuming. This warranty does not affect your statutory rights. This warranty excludes the use for rental. In the event of a fault occurring please contact our helpline before returning the unit to our Service Department at the address below together with a copy of your purchase receipt. All repairs will be dealt with speedily.

Some States do not allow limitations on how long an implied warranty lasts and some States do not allow the exclusion or limitation of incidental or consequential damages, so part or all of the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.

Toll Free: 855-4EWBANK Email: [enquiries@ewbankusa.com](mailto:enquiries@ewbankusa.com)

**[www.ewbankusa.com](http://www.ewbankusa.com)**

Made in China

2013 © Ewbank LLC  
EB0511 12/12/2013