

REGENCY

RGS
FURNITURE

LDS4224XX

Regency Legacy 42" x 24" Desk Shell

LDS6030XX

Regency Legacy 60" x 30" Desk Shell

LDS6630XX

Regency Legacy 66" x 30" Desk Shell

LDS7124XX

Regency Legacy 71" x 24" Desk Shell

LDS7135XX

Regency Legacy 71" x 35" Desk Shell

CT-DS4224XX

RGS Cornerstone 42" x 24" Desk Shell

CT-DS6030XX

RGS Cornerstone 60" x 30" Desk Shell

CT-DS6630XX



RGS Cornerstone 66" x 30" Desk Shell

CT-DS7124XX

RGS Cornerstone 71" x 24" Desk Shell

CT-DS7135XX

RGS Cornerstone 71" x 35" Desk Shell

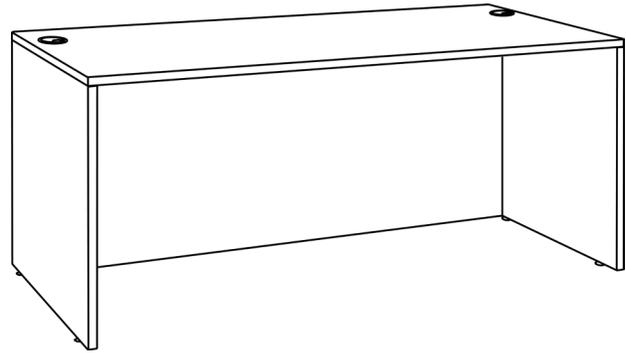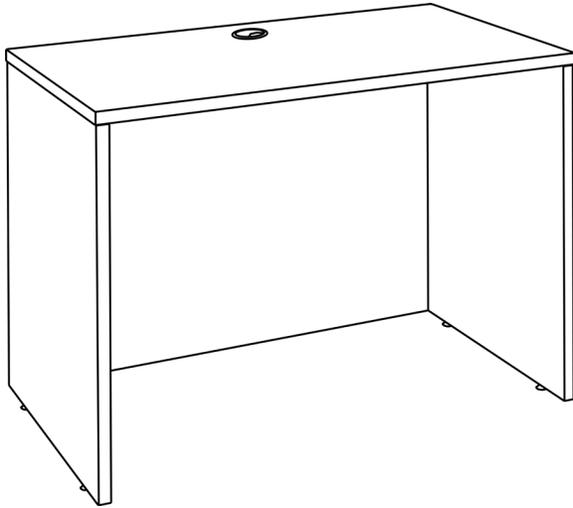


#	Part	Qty	Image	#	Part	Qty	Image
A	Desk Top	1		H	Cam Pins (71" x 35" would use 13)	11	
B	Left Leg	1		I	Screws	30	
C	Right Leg	1		J	L-Bracket	5	
D	Modesty Panel	1		K	Cam Covers (71" x 35" would use 13)	11	


REGENCY RGS Missing Parts? Assembly Questions?
FURNITURE

Call us at 1-866-816-9822 or email help@regencyof.com for immediate assistance.


Step 1: Thread Cam Pins (H) into small holes, 3 per Leg (B & C) and 5 for the Desk Top (A)
Note: A powerdrill will be most beneficial.

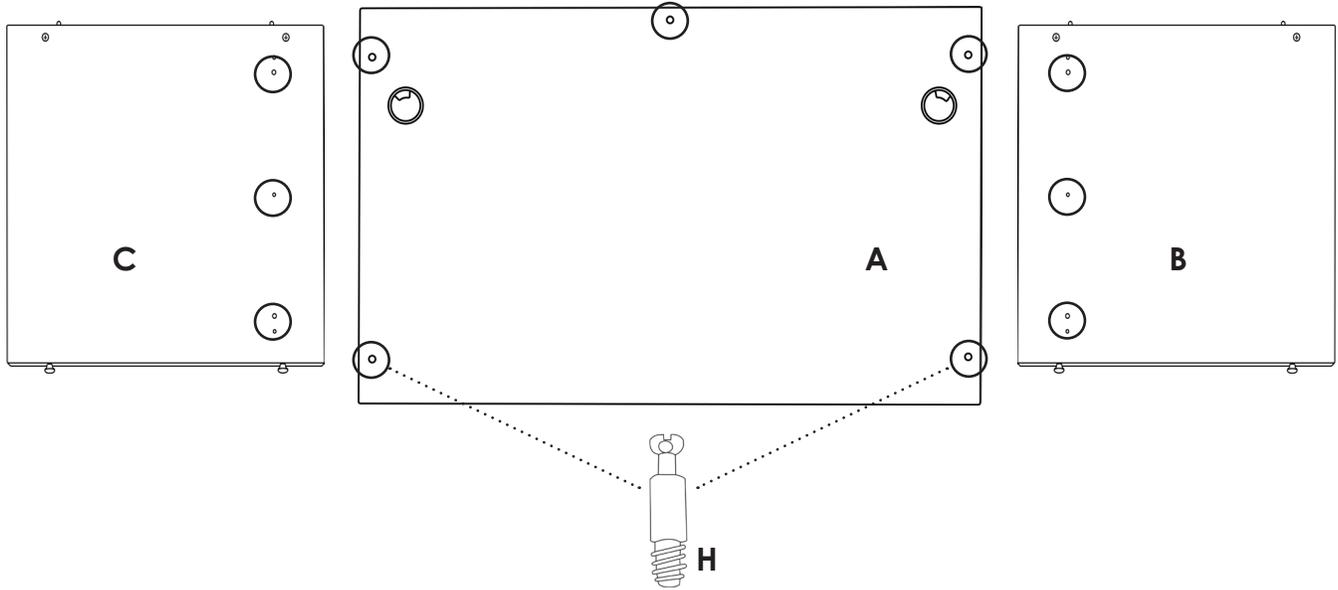


Step 2: Insert Cam Pins (H) on Legs (B & C) into holes in Modesty Panel (D)
Secure in place by turning Cam Locks clockwise.

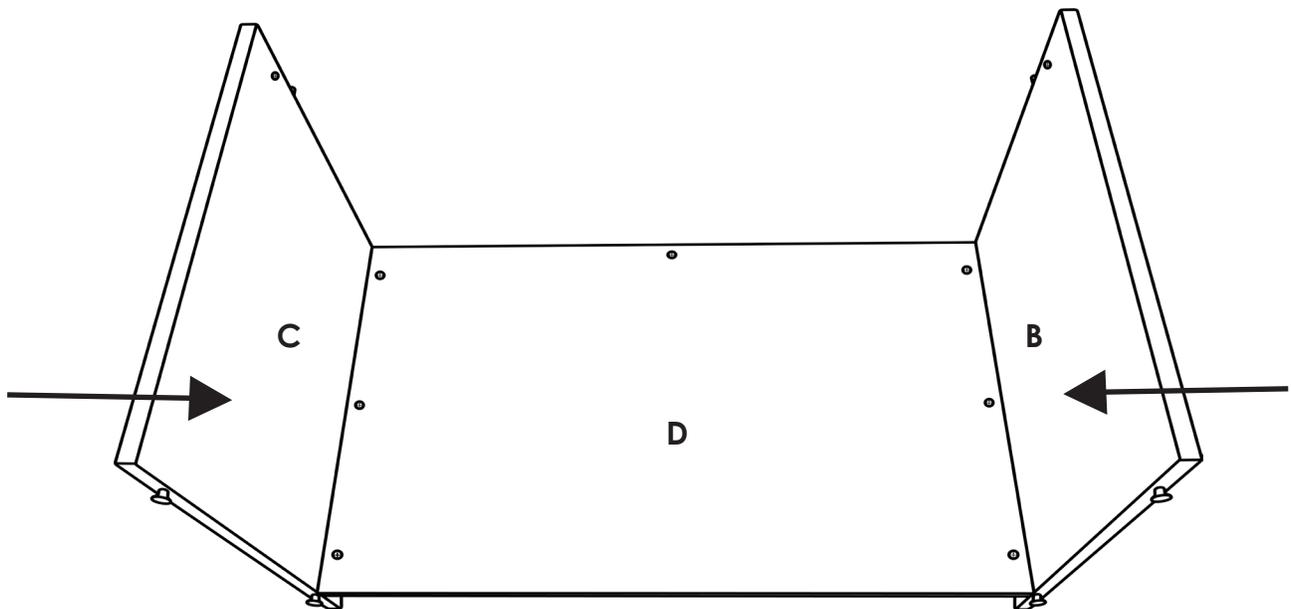


**Step 3: Insert Cam Pins on Top (A) into holes in Modesty Panel and Legs.
Secure in place by turning Cam Locks clockwise.**

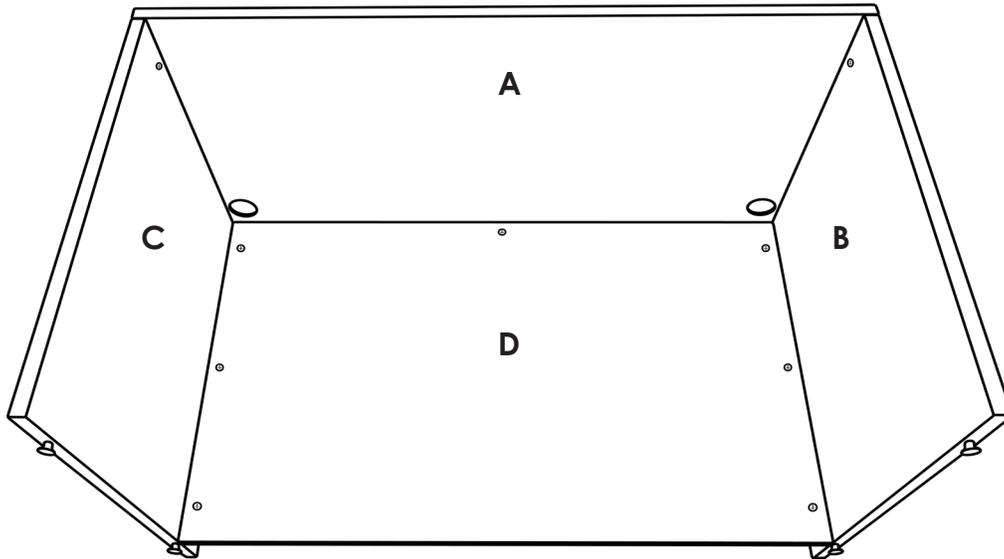

Step 4: Attach 3 L-Brackets (J) using 6 Screws (I) each.

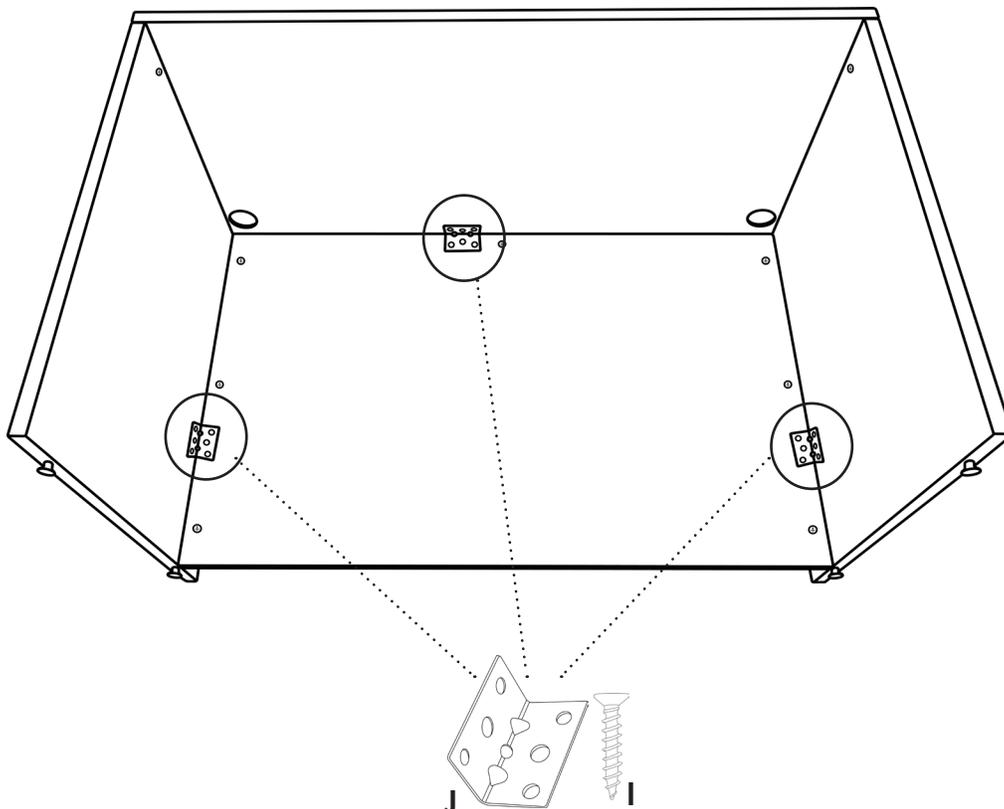

Step 5: If Pedestals are not being used with this desk shell, attach remaining 2 L-Brackets (J) for additional stability.

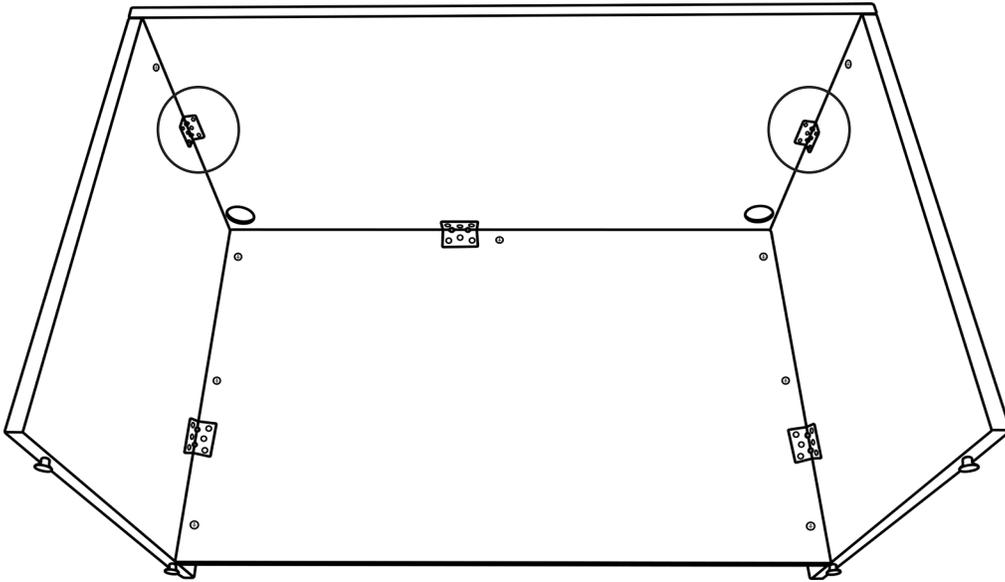

Step 6: Cover any visible Cam Locks with Cam Covers (K).

