


Item # 1004400448
Model # SK19304C1r1-V
Item # 1004400450
Model # SK19304C1r1-C
Item # 1004400451
Model # SK19304C1r1-M

USE AND CARE GUIDE

KITCHEN PANTRY CABINET

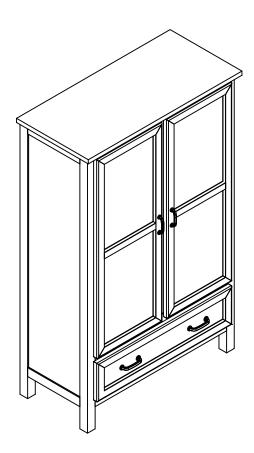

Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

Table of Contents

Table of Contents	2
Safety Information	2
Warranty	
1 Year Warranty	
What is Covered	3
What is Not Covered	3
Pre-assembly	4
Planning Assembly	

Tools Required	4
Hardware Included	4
Pre-assembly (continued)	5
Package Contents	
Assembly	6

Safety Information



DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.



WARNING

- Read these instructions carefully and keep in a safe place.

 TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW
- THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.
- To further reduce the risk of serious injury and death from tip-overs:
 - Place heaviest items in the lowest compartments or drawers.
 - Never allow children to climb or hang on drawers, doors or shelves.
 - Never open more than one drawer at a time.
 - Use of tip-over restraints may only reduce, but not eliminate, the risk of tip-over.
 - For safe mounting, it is essential to use wall anchors appropriate to your wall type (i.e. plaster, drywall, concrete, etc). Mount to wood studs whenever possible.*



NOTE: If you are unsure about your wall type or what mounting method you should use, consult a qualified professional.



CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.).
 Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- □ This product should only be used on a flat, level surface.
- Product is designed to hold75 pounds. Exceeding this limit may damage the product or cause injury to the user.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

 
This warranty does not cover commercial use, acts of nature, and abusive use.

Pre-assembly


PLANNING ASSEMBLY


Keep children and pets away from build area. Make sure your area is large enough to unpack, sort and assemble the unit.

TOOLS REQUIRED



HARDWARE INCLUDED

 

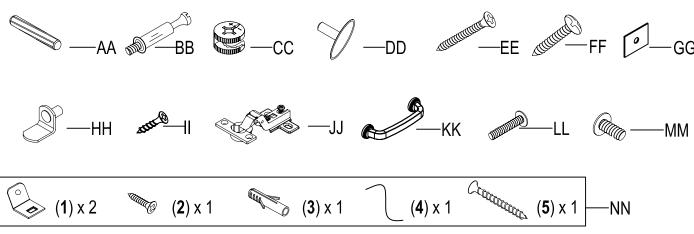


Part	Description	Quantity
AA	Wood dowel	24
BB	Cam lock bolt	17
CC	Cam lock	17
DD	Plastic cover	8
EE	1 in. Flat head screw	11
FF	5/8 in. Round head screw	29
GG	Metal plate	5

Part	Description	Quantity
НН	Shelf support	16
II	5/8 in. Flat head screw	16
JJ	Hinge	4
KK	Handle	4
LL	Long handle bolt	4
MM	Short handle bolt	4
NN	Anti-tipping hardware package	1

Pre-assembly (continued)

PACKAGE CONTENTS

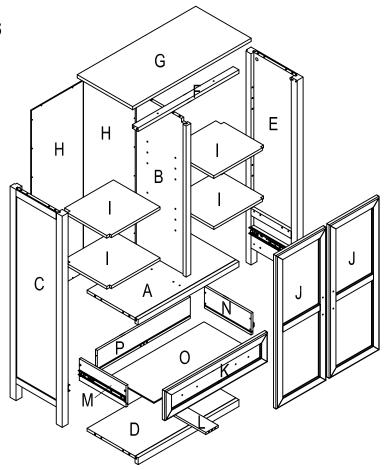


Part	Description	Quantity
Α	Fixed panel	1
В	Partition	1
С	Left side panel	1
D	Bottom panel	1
E	Right side panel	1
F	Crossbar	1
G	Top panel	1
Н	Back panel	2
- 1	Adjustable shelf	4
J	Door	2
K	Drawer front panel	1
L	Support bar	1
М	Drawer left side panel	1
N	Drawer right side panel	1
0	Drawer bottom panel	1
Р	Drawer back panel	1


Assembly

Attaching the partition to the fixed panel


a) Install dowel (AA) and bolt (BB) into panel (A).

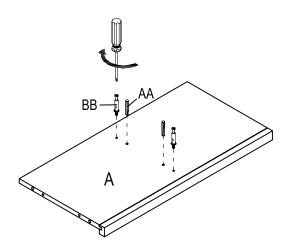


□ b) Insert lock (CC) into panel (B).

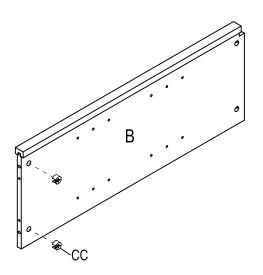

□ c) Join partition (B) to the panel (A) with dowel (AA).

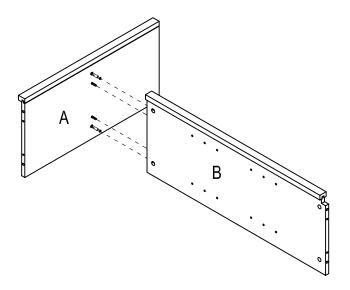

 d) Tighten bolt (BB) with lock (CC) in the predrilled holes.

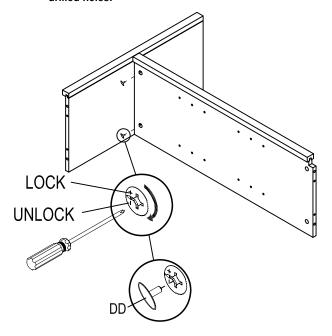

 \Box e) Cover the cam holes with the cover (DD).

 
Wood dowel Cam lock bolt Cam lock Plastic cover Small head Large head

(AA) x 2 (BB) x 2 (CC) x 2 (DD) x 2











2 Attaching the bottom panel and left side panel


□ a) Install dowel (AA) and bolt (BB) into panel (C).

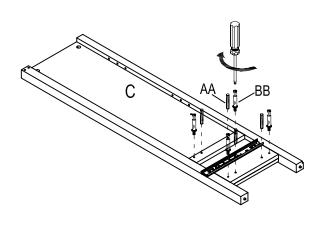


□ b) Insert lock (CC) into panels (A) and (D).

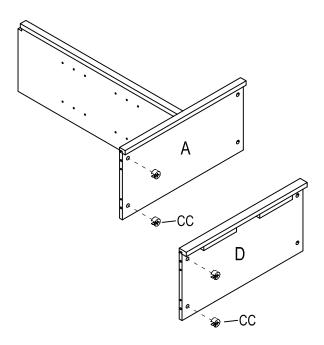

□ c) Join panels (A) and (D) to the panel (C) with dowel (AA).

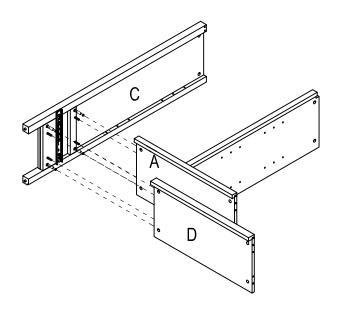

d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

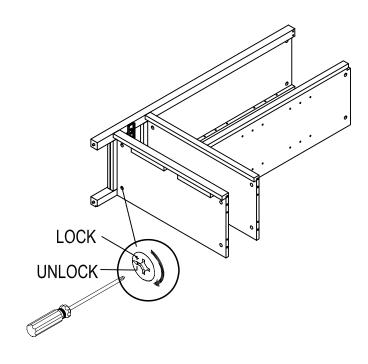

Wood dowel Cam

Cam lock bolt

Cam lock Small head

Large head

 $(AA) \times 4$

(BB) x 4

 
 $(CC) \times 4$













3 Attaching the right side panel and the crossbar


a) Install dowel (AA) and bolt (BB) into panel (E).

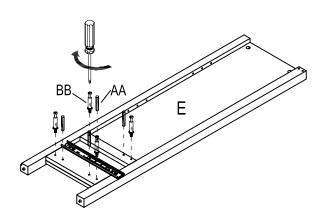


□ b) Insert lock (CC) into panels (A) and (D).

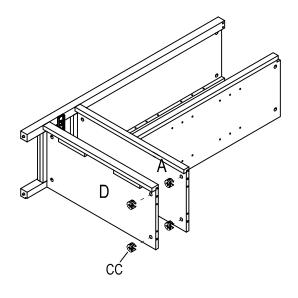

 $\hfill\Box$ c) Join panel (E) and bar (F) to the assembled body with dowel (AA).

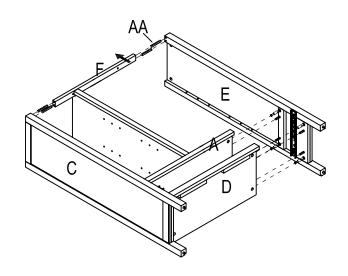

d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.

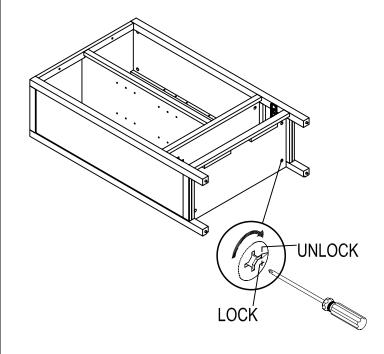


Wood dowel Cam lock bolt Cam lock Small head Large head


(AA) x 8 (BB) x 4 (CC) x 4

4 Attaching the top panel


□ a) Install dowel (AA) and bolt (BB) into panel (G).

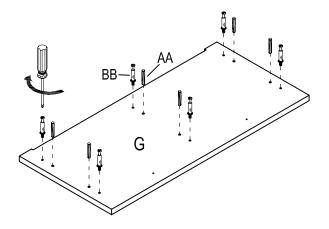


□ b) Insert lock (CC) into panels (C), (B) and (E).

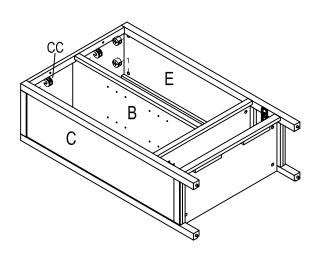

□ c) Join panel (G) to the assembled body with dowel (AA).

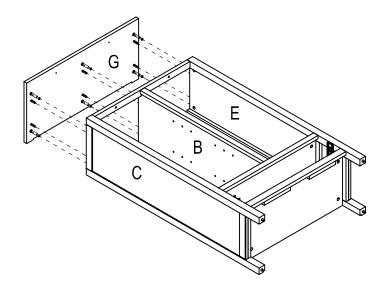

d) Tighten bolt (BB) with lock (CC) in the pre-drilled holes.
 Tighten bar (F) with screw (EE).

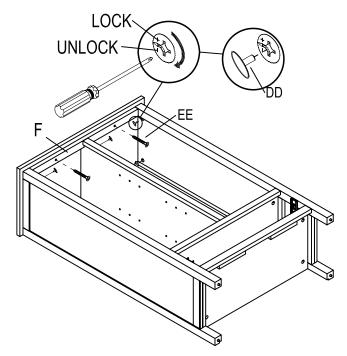


e) Cover the cam holes with the cover (DD).

Wood dowel Cam lock bolt Cam lock Plastic cover 1 in. Flat head screw Small head Large head

(AA) x 6 (BB) x 6 (CC) x 6 (DD) x 6 (EE) x 2

5 Attaching the back panel

□ Tighten panel (H) with screws (FF) and plates (GG) as shown.

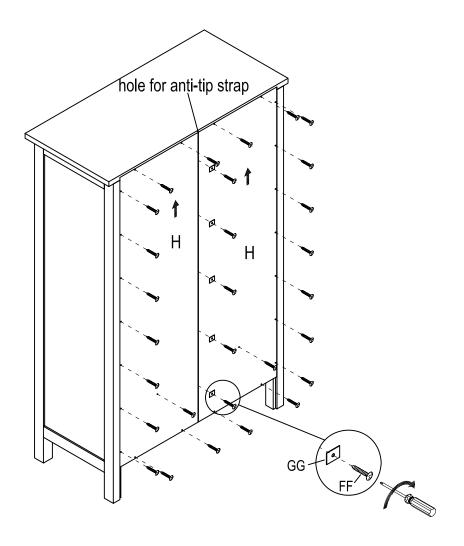

5/8 in. Round head

Metal plate

Small head

screw (**FF**) x 29

(**GG**) x 5






6

Attaching the adjustable shelf

 $\hfill \square$ Insert shelf supports (HH) in desired positions and place shelf (I) on the supports.

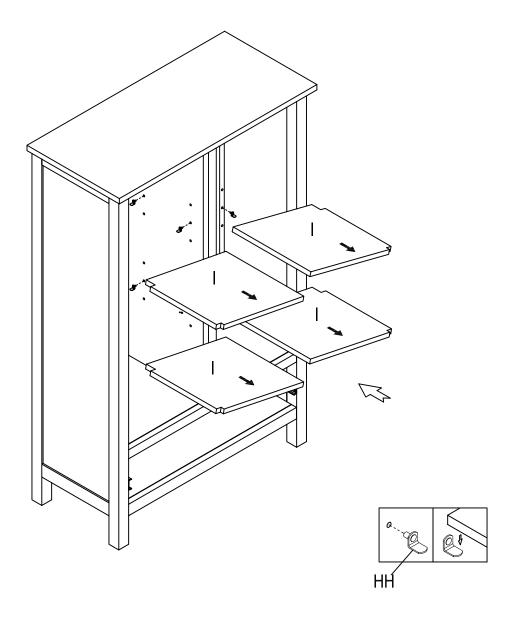


Shelf support

(HH) x 16




7 Attaching the door

□ a) Attach hinge (JJ) to door (J) with screw (II).

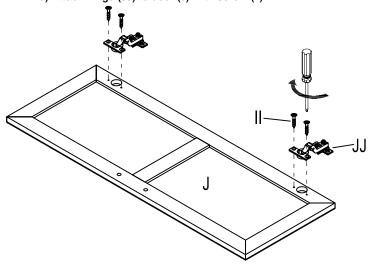


b) Attach door (J) to the assembled body with screw (II) as shown.
 Attach handle (KK) to door (J) with the long handle bolt (LL).

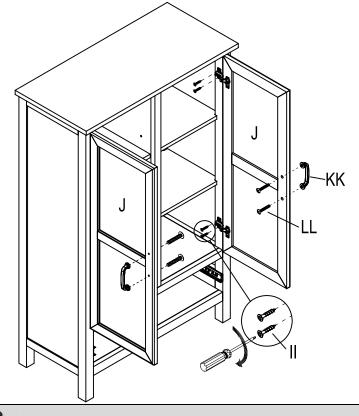

NOTE: A helper who can hold the door in position makes the door installation easier.

 DOOR FITTING



To adjust in width



To adjust in height



To adjust in depth

5/8 in. Flat head screw

Hinge

Handle

Long handle Small head

bolt

(II) x 16

/ I I) v /

(**KK**) x 2

(LL) x 4













8 Assembling the drawer

a) Install dowel (AA) and bolt (BB) into panel (K).

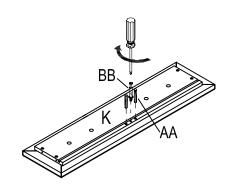


 □ b) Insert lock (CC) into support bar (L).




c) Tighten panels (M) and (N) to the panel (K) with screw (EE).


Join bar (L) to the panel (K) with dowel (AA).

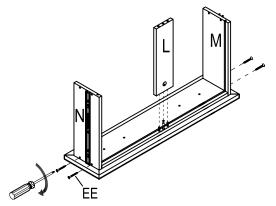


d) Slide panel (0) into the grooves on panels (M) and (N).
 Tighten bolt (BB) with lock (CC) in the pre-drilled hole.

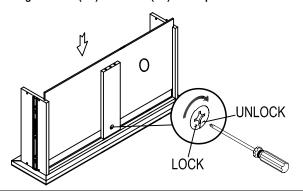

e) Tighten panel (P) to the assembled body with screw (EE) and dowel (AA).

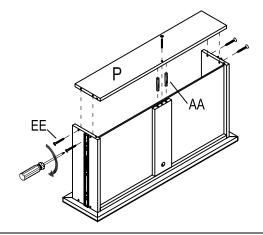

f) Tighten handle (KK) to panel (K) with short bolt (MM).

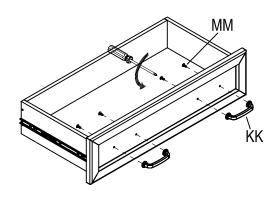

Wood dowel C

Cam lock bolt Cam lock

1 in. Flat head screw

Handle Short handle

Small head

Large head

(**AA**) x 4

(BB) x 1

(CC) x 1

 
(**EE**) x 9

(**KK**) x 2

bolt < 2 (**MM**) x 4













9 Inserting the drawer

 $\ \square$ Insert the drawer into the assembled body as shown.

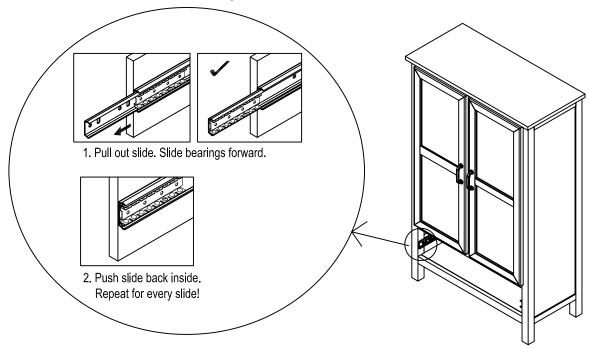





NOTE: Make sure the slide piece is at the front end of the glide when installing the drawer into the body.

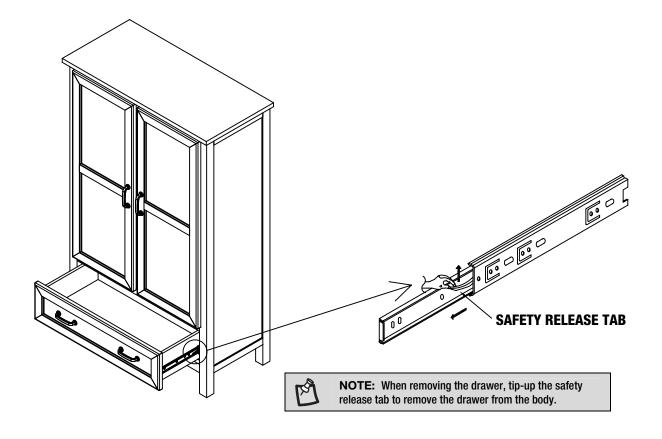

10 Finalizing the assembly

 $\hfill\Box$ Install the anti-tipping hardware as shown.

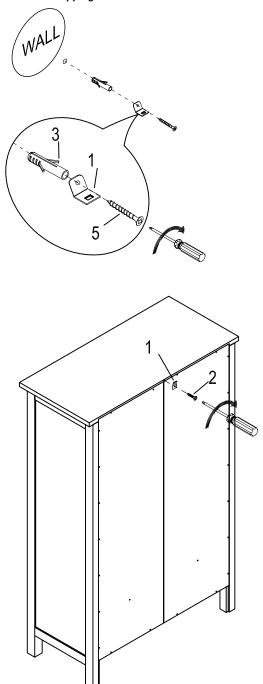

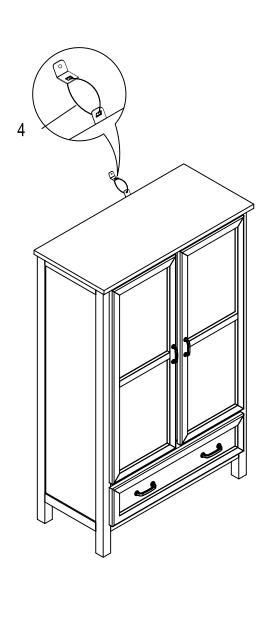

 Rectangle metal plate	1/2 in. Flat head screw	Plastic anchor	Plastic band	1-1/2 in. Flat head screw	Small head
(1) x 2	(2) x 1	(3) x 1	(4) x 1	(5) x 1	
	MANG			Comming	—NN
				-9C1	

StyleWell.

Questions, problems, missing parts?

Before returning to the store, call Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.