




Madison Pre-Lit Christmas Staircase Swag-26''
Item # DCSW2601



To set up:

- 1) Place the staircase swag on a flat surface. Straighten and separate all branch tips. To achieve maximum fullness, tips should not touch one another. To shape the bow, slip fingers into the loop molding the loop into a rounded shape, straighten tails so they are hanging down.
- 2) From back of the staircase swag, find the battery box and open it. Insert 3 AA cell batteries into the battery box then close it (see Figure A, B, C, D & E). **When using outdoors, locations with temperatures -10 or colder we recommend using lithium batteries. Suitable for indoor and outdoor use.*
- 3) Each battery box is featured with a 3-position switch: Timer – On – Off (see Figure F: 1- Timer, 2- continuous on, 3-Off)). The timer enables the LED lights to remain on for 6 hours, then off for the next 18 hours. This will repeat daily.

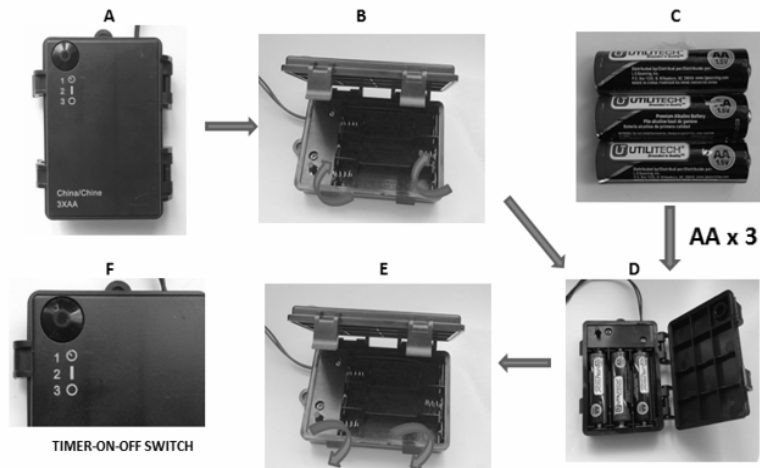

- 4) Locate the two sets of brown ties on the back of the swag. Separate the ties so that each set of ties looks like a V. Place the Staircase Swag on the baluster and wrap each set of ties tightly around it.

ATTENTION:

1. Adult supervision is necessary when changing and disposing of batteries.
2. Slide switch to "OFF" position when changing batteries.
3. Confirm proper polarity when inserting batteries (See Fig. 1).
4. Do not attempt to charge non-rechargeable batteries. Only recharge rechargeable batteries and do it under adult supervision.
5. Do not mix old and new batteries or batteries of different types.
6. Replace batteries when the light is faint.
7. Replace all batteries at the same time.
8. Remove dead batteries from unit.
9. Do not short-circuit terminals under any circumstances.
10. Do not allow the bottom of the unit to come into contact with heat.
11. Never throw batteries in a fire or attempt to open batteries. Batteries may explode or leak.
12. Remove all batteries from unit before storage.
13. Batteries are harmful if swallowed. Keep away from young children.

Made in China
0520RevA

THANK YOU FOR YOUR PURCHASE
Comments or questions?
Call us at 1-877-359-0115 or
Contact us at customerservice@haute-decor.com

Haute Decor
PO Box 1594
Allen, TX 75013

