

 
420x216mm



Item #1000 000 000
Model #LG-58/LG-58S

Use and Care Guide Grey Plastic Solar Lantern

PACKAGE CONTENTS

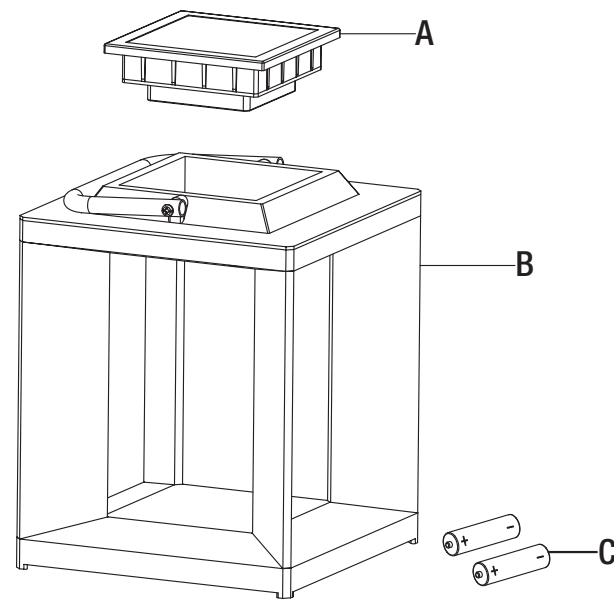

Part	Description	Quantity
A	Solar top (preassembled)	1
B	Plastic lantern body	1
C	AA 1.2 V 1200 mAh Ni-Mh Rechargeable battery (preinstalled)	2

Assembly and Installation

1 Choosing a location for charging

- Choose a location that gets a full day of direct sunlight to charge the solar lantern. Avoid shaded areas.
- Ensure the lantern receives a minimum of 8 hours of sunlight per day to ensure optimal performance at night.

3 Installing the lantern

- Place the solar lantern in your desired location after the batteries have been fully charged for 12 hours. Your solar lantern then is ready for use.

CAUTION: Always dispose of recyclable batteries at a proper battery disposal facility. Do not dispose of in fire or attempt to open a sealed battery. Use only a similar rating and type of battery as the one that comes with the fixture (AA 1.2 V 1200 mAh Ni-Mh rechargeable). Do not mix old and new batteries. Do not mix battery type.

 
WARNING: Do not open, short circuit, or mutilate batteries as injury may occur.

NOTE: Battery performance is affected by weather and temperature. Expect reduced performance in adverse conditions of cold, extreme cold, extreme heat plus humidity and dampness.

NOTE: To allow the batteries to reach full capacity and perform correctly, switch ON and place the solar lantern in full sunlight for the first 12 hours. Failure to do so can shorten the life of the batteries or operation of the lantern. On cloudy or rainy days it may take several days for the batteries to fully charge.


2 Preparing for installation

- Take the lantern out of the package.
- Pull the solar top (A) out from the lantern by taking the pull-tab and holding the plastic lantern body (B).
- Slide the switch underneath the solar top (A) to ON to activate the battery.
- Reassemble the solar top (A) to the top of the plastic lantern body (B).

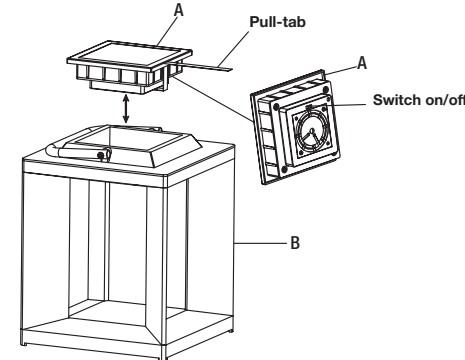

4 Replacing the battery

 - Pull the solar top (A) out from the lantern by taking the pull-tab and holding the plastic lantern body (B).
- Slide the switch underneath the solar top lantern (A) to OFF.
- Remove the battery cover (1) by removing the four screws (2) with a Phillips screwdriver.
- Remove the old batteries (C).
- Clean the battery contacts on the new batteries and the solar top (A).
- Replace with two new rechargeable AA 1.2 V 1200 mAh Ni-Mh batteries.
- Reassemble the battery cover (1) using the screws (2) and reinstall the solar top (A) to the plastic lantern body (B).

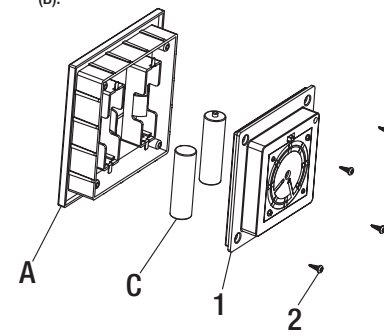

Care and Cleaning

- It is recommended that solar lights not be used in freezing conditions. Monitor weather and take solar items indoors for storage as needed. Keep snow or other buildup off the solar panel so that the batteries can be recharged.
- Remove batteries from equipment that will not be used for an extended period of time.

Troubleshooting

Problem	Possible Cause	Solution
The solar light does not turn on at night or the amount of time that it operates during the night is shorter.	The battery is not fully charged.	Ensure the solar light is located in an area where it can receive the maximum amount of full, direct sunlight everyday. If the solar light does not receive enough sunlight during a day (e.g. due to cloudy or overcast weather conditions), it will be recharged on the next sunny day and resume normal operation. Keeping the solar panel clean is equally important to ensure the maximum charging performance.
	The solar light is installed close to other light sources which are causing the photocell to turn the fixture off.	Relocate the fixture to a place with no other light sources, or remove the other light sources from the fixture location.
	The batteries are reaching the end of their useful life.	Replace the rechargeable batteries with two rechargeable batteries that have a similar rating and type. Do not use a non-rechargeable battery.
	There is not enough direct sunlight.	Ensure the solar light is not installed in a shaded area, such as in the shadows, the trees, or a house.
	The switch may not be slide to ON.	Slide the switch to ON position.

Warranty

WHAT IS COVERED

This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling.

WHAT IS NOT COVERED

This warranty shall not apply to any product that is found to have been improperly installed, set up, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and /or weathering, as this is considered normal wear and tear.

Contact the Customer Service Team at 1-855-HD-HAMPTON or visit HAMPTONBAY.COM