

## Yakatori Grill

Instructions for use, maintenance and assembly

Item 60450 Rectangle Yakatori

Item 60449 Round Yakatori



### Distributed By:

Well Traveled Living

 
PO Box 4

Amelia Island, FL 32035

Tel: 866-985-7877 Fax: 904-261-6769

Email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net)

Website: [www.wtliving.com](http://www.wtliving.com)



## English

READ THE INSTRUCTIONS BEFORE USE.  
Distributed by:  
Well Traveled Living  
PO Box 4, Amelia Island, FL 32035  
Tel: 866-985-7877  
Fax: 904-261-6769 email: cservice@welltraveled.net

### COOKING STYLES:

#### Use charcoal briquettes

1. Open the air-vent fully.
2. Simply stack the charcoal briquettes inside of the grill and add lighter fluid.
3. Immediately light the charcoal briquettes in several places by using a long match or stick lighter and keep the grill uncovered.
4. The flames will die out in 5-10 minutes, wait until the charcoal briquettes completely ash over, then with a cooking tool spread the briquettes evenly and begin cooking.

### IMPORTANT SAFETY TIPS:

Failure to obey these safety rules may result in bodily injury and household appliance property damage or DEATH

#### DANGER!

DO NOT use diatomite grill for indoor cooking or heating in home, vehicle and tents.  
TOXIC carbon monoxide fumes can accumulate and cause asphyxiation.  
LIVE hot briquettes can create a fire hazard.

#### WARNING!

- DO NOT use gasoline, kerosene, or alcohol for lighting charcoal briquettes.
- ALWAYS handle a hot grill carefully as the heat and steam within the grill can severely burn you.
- ALWAYS place the grill on a hard, level surface far away from combustibles and children.
- This is NOT a tabletop grill!! Therefore, DO NOT place this grill on any type of tabletop surface.
- DO NOT attempt to move the grill once the charcoal briquettes have been lit.
- DO NOT leave a lit grill unattended, especially around children and pets.
- DO NOT touch metal parts of grill until it has completely cooled to avoid burns, unless you are wearing protective gear (potholders, cotton gloves, BBQ mittens, hot pads etc.)
- DO NOT remove the ashes until all briquettes are completely and fully extinguished.
- KEEP all electrical cords away from a hot grill.
- DO NOT use grill in high winds.
- DO NOT use the grill unless it is completely assembled and make sure all parts are securely fastened and tightened.

WARNING: Fuels used in wood or charcoal burning appliances, and the products of combustion of such fuels, contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm.

Here are a few helpful hints for the safe and effective operation of your new grill.

- Allow 25-30 minutes for the briquettes to light before cooking. The briquettes should have a light coating of ash on top of them when ready.
- When using lighter fluid allow ample time for liquid to soak into briquettes before lighting and light briquettes in several places to ensure maximum ignition.
- Store your briquettes in a dry place. If storing outside, seal in a waterproof container.
- A diatomite grill is fragile. Be careful of the grill when attempting to store or move it.
- When cleaning your grill, DO NOT use abrasive cleaners as they may damage the parts of this product. Clean all grates and pans with mild detergent. Rinse clean with water. Remove all ash and dispose properly.
- Be careful of sharp edges before cooking.

 
## SAFETY INSTRUCTIONS

For your safety:

- 1 Read the assembly instructions carefully and retain for future reference.
- 2 Place the barbeque on a hard and flat surface prior to use.
- 3 DO NOT use indoors or under a shelter and do not use the barbeque near flammable materials.
- 4 CAUTION! Do not use gasoline, kerosene or alcohol for lighting or re-lighting! Only use lighter fluid available in stores.
- 5 Lighter fluid must be completely consumed before placing food to be grilled. Keep lighter fluid away from children.
- 6 ATTENTION! This barbecue will become very hot. Do not move it during operation
- 7 WARNING! Keep children and pets away.
- 8 Do not overfill the bowl of your barbeque. It should be filled to a maximum of 70% of its capacity with charcoal briquettes.
- 9 Before the first use with food, let the charcoal burn for 30 minutes in the barbecue and let it cool down
- 10 Only use approved charcoal briquettes and lighter fluid as found in stores.
- 11 How to light the barbeque:  
  
Place the cahrccoal briquettes in the middle of the bowl in a pyramid shape. If using lighter fluid, allow lighter fluid to soak into briquettes then use a long match or stick lighter to light.
- 12 After lighting, charcoal should burn completely for 30 minutes and until a thin layer of ash is formed on top of the fuel before placing the food on the grill.  
  
Do not cook before the fuel has a coating of ash.
- 13 After grilling the food, wait until the glow is completely extinct and for greater safety sprinkle with water to extinguish completely.
- 14 After use of the barbeque clean the barbeque and all the barbeque tools.
  - ATTENTION! This barbeque will become very hot. DO NOT not move it during operation.
  - Do not use indoors!
  - CAUTION! Do not use gasoline, kerosene or alcohol for lighting or re-lighting!
  - WARNING! Keep children and pets away

Caution!

- 1 Barbecues release a strong heat and for this reason must be placed on a non-flammable, flat surface.
- 2 To handle the grill, use with the wooden handles only (where applicable) or tool kits provided (where applicable).
- 3 Wait until the charcoal is completely put out before moving the barbecue.
- 4 Keep these instructions in a safe place to refer to them whenever needed.



**Distributed By:**

Well Traveled Living  
716 S 8<sup>th</sup> Street  
Amelia Island, FL 32034  
Toll Free: 866-WTL-SUPP



Web: [www.wtliving.com](http://www.wtliving.com)  
Email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net)

**1 YEAR LIMITED WARRANTY – Customers in the Continental US**

All components are warranted for a period of 1 year after date of purchase by the original owner against defects in materials and workmanship under normal use. This warranty does NOT cover normal wear and weathering, assembly and/or maintenance OR use in a commercial application. At Well Traveled Living's sole discretion, products under warranty will be repaired and/or replaced at no charge to the customer. Any returns sent back to Well Traveled Living must be sent via prepaid freight and in the original retail packaging.

For warranty service contact Well Traveled Living at the address, phone numbers or internet site and email listed in this owner's manual. Be sure to have your sales receipt, date of purchase and catalogue/model numbers available when calling. All warranty service will be coordinated by the Well Traveled Living's, Amelia Island, Florida service center.

This warranty is extended only to the original purchaser. Proof of purchase will be required before warranty service is rendered. The sales receipt is the only valid proof of purchase. This warranty only covers failures due to defects in materials or workmanship which occur during normal use. Failures and/or damage which result from accident, negligence, misuse, abuse, neglect, mishandling, alteration or modification, failure to maintain, improper assembly or maintenance, service by unauthorized agency or use of unauthorized components or damage that is attributable to acts of God are NOT covered.

**\*\*\*THERE ARE NO EXPRESS WARRANTIES EXCEPT AS LISTED ABOVE\*\*\***

**\*\*\*PURCHASER ASSUMES ALL RISKS IN THE ASSEMBLY AND OPERATION OF THIS UNIT\*\*\***

**\*\*\*FAILURE TO FOLLOW WARNINGS AND OPERATIONAL INSTRUCTIONS CONTAINED IN THIS MANUAL CAN RESULT IN SEVERE PROPERTY DAMAGE AND/OR PERSONAL INJURY\*\*\***

IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS DIRECTORS, OFFICERS OR AGENTS BE LIABLE TO THE PURCHASER OR ANY THIRD PARTY, WHETHER IN CONTRACT, IN TORT, OR ON ANY OTHER BASIS, FOR ANY INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, CONSEQUENTIAL, OR INCIDENTAL LOSS, COST, OR DAMAGE ARISING OUT OF OR IN CONNECTION WITH THE SALE, MAINTENANCE, USE, OR INABILITY TO USE THE PRODUCT, EVEN IF WELL TRAVELED LIVING OR ITS DIRECTORS, OFFICERS OR AGENTS HAVE BEEN ADVISED OF THE POSSIBILITY OF SUCH LOSSES, COSTS OR DAMAGES, OR IF SUCH LOSSES, COSTS, OR DAMAGES ARE FORESEEABLE. IN NO EVENT WILL WELL TRAVELED LIVING, OR ITS OFFICERS, DIRECTORS, OR AGENTS BE LIABLE FOR ANY DIRECT LOSSES, COSTS OR DAMAGES THAT EXCEED THE PURCHASE PRICE OF THE PRODUCT.

SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO THE PURCHASER.

This limited warranty gives you specific legal rights and you may also have other rights which vary from jurisdiction to jurisdiction. The provisions of the United Nations Convention on Contracts for the Sales of Goods shall not apply to this limited warranty or the sale of products covered by this limited warranty.

**\*\*\*IMPORTANT NOTICE\*\*\***

-Do **NOT** return to place of purchase-  
For customer service and warranty issues  
contact our Customer Service Center at:  
(866)-985-7877 OR

Email: [cservice@welltraveled.net](mailto:cservice@welltraveled.net)

Customer Service Hours: Mon. – Fri. 9:00 a.m. – 6:00 p.m. (EST)