

## Warranty and Support

This product is warranted to be free from defects in material and workmanship under normal use and service for a period of 2 years from the date of sale to the customer. Warranty will not apply to defects resulting from abuse, accidents, or misuse. If a defect that is covered by this warranty arises during the warranty period, promptly return the clock (postage prepaid) with proof of purchase showing the date the clock was purchased to the following address and such defects will be repaired, or the products will be replaced at La Crosse Clock Company option without charge.

La Crosse Clock Company  
Warranty Department  
2830 South 26th Street.  
La Crosse, WI 54601

[www.lacrossetechnology.com/support](http://www.lacrossetechnology.com/support)

Made in China - Printed in China


## 5.7” Decorative Tabletop Alarm



Model: 617-3014  
DC: 010218

## Power up

1. Insert 1 fresh AA battery into your clock according to the polarity markings.
2. Turn the Time Set Button to set your time.

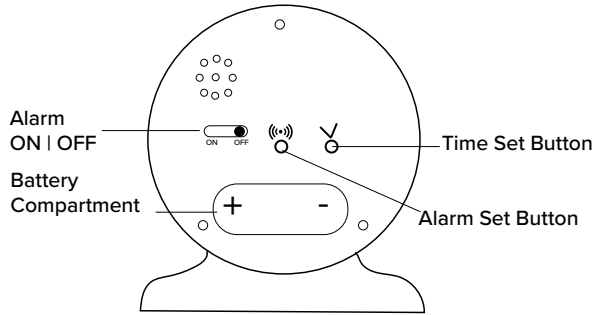

## Time Alarm

1. Turn the Alarm Set Button to set alarm time.
2. Move the slide switch to ON to activate your alarm.  
Move the slide switch to OFF to deactivate your alarm.

## Position

- Place your clock on your desk or counter top.

## Let's Be Social!

Follow us on our social media outlets for the latest promotions, product support, and awesome giveaways.



## Specifications

**Battery Requirements:** 1 AA (IEC LR6) required in movement (Alkaline recommended)

**Battery life:** over 12 months

## Care and Maintenance

- Always purchase the correct size and grade of battery most suitable for intended use.
- Clean the battery contacts and also those of your clock prior to battery installation.
- Ensure the battery is installed with correct polarity (+ and -).
- Remove battery from equipment when it is not used for an extended period of time.
- Promptly remove an expired battery.