

Power Mod & Uni-PAK

Multifamily Metering Accessories & Replacement Parts



2
METER
CENTERS

Amperage	10K AIC	22K AIC	42K AIC	65K AIC	100K AIC
	Type QP	Type QPH	—	Type HQP	—

For use in 125 Amp and 225^② Amp single phase output WMM, WML, WMT, WP, WPC, WEP, WPL metering^④

Amperage	Q260	Q260H	Q260HH	Q260HH	—
60	Q260	Q260H	Q260HH	Q260HH	—
70	Q270	Q270H	Q270HH	Q270HH	—
80	Q280	Q280H	Q280HH	Q280HH	—
90	Q290	Q290H	Q290HH	Q290HH	—
100	Q2100	Q2100H	Q2100HH	Q2100HH	HQS2100H ^①
110	Q2110	Q2110H	Q2110HH	Q2110HH	HQS2110H
125	Q2125	Q2125H	Q2125HH	Q2125HH	HQS2125H ^①

For use in 100 Amp, 3- phase output WML meter stacks only

Amperage	Q360	Q360H	Q360HH	Q360HH	—
60	Q360	Q360H	Q360HH	Q360HH	—
70	Q370	Q370H	Q370HH	Q370HH	—
80	Q380	Q380H	Q380HH	Q380HH	—
90	Q390	Q390H	Q390HH	Q390HH	—
100	Q3100	Q3100H	Q3100HH	Q3100HH	—

For use in 225^② Amp single phase output WMM, WML, WMT, WP, WPC, WEP, WPL metering^④

Amperage	Type QS ^③	Type QSH ^③	Type QSHH	Type HQS ^③	Type HQSH ^③
100	QS2100	QS2100H	QSH2100	QS2100HH	HQS2100H
125	QS2125	QS2125H	QSH2125	QS2125HH	HQS2125H
150	QS2150	QS2150H	QSH2150	QS2150HH	HQS2150H
175	QS2175	QS2175H	QSH2175	QS2175HH	HQS2175H
200	QS2200	QS2200H	QSH2200	QS2200HH	HQS2200H
225	QS2225	QS2225H	QSH2225	QS2225HH	HQS2225H

For use in 225 Amp 3-phase output WML & WMT meter stacks only

Amperage	Type QR2	Type QRH2	Type HQR2	Type HQR2H
100	QR23B100	QRH23B100	HQR23B100	HQR23B100H
125	QR23B125	QRH23B125	HQR23B125	HQR23B125H
150	QR23B150	QRH23B150	HQR23B150	HQR23B150H
175	QR23B175	QRH23B175	HQR23B175	HQR23B175H
200	QR23B200	QRH23B200	HQR23B200	HQR23B200H
225	QR23B225	QRH23B225	HQR23B225	HQR23B225H

① HQSH breakers require the use of 225 Amp WMM meter stacks or 225 Amp per position Uni-PAK metering.

② QP Breakers will fit in 225A WMM, WML, & WMT meter stacks.

③ QS series rates with Murray circuit breakers.

④ Breaker selection (when applied to Uni-PAK) applies to WP, WPC, WEP, WPL, Uni-PAK metering only. QS breakers will not fit in SP or MP series.

Multi-family
Metering