

Operating Instruction

CMC-A5 Series (cETL approved)
ICOOK A5 PREMIUM & SUPERIOR

CUCKOO
always new

happiness

KOREA NO.1
CUCKOO
Electric Multi Pressure Cooker

emotion

love

design



- ※ Pictures may look different from the actual product.
- ※ 图片可能与实际产品不同。
- ※ Los dibujos pueden verse diferentes al producto actual.
- ※ 사진은 실제 현물과 다를 수 있습니다.

Thank you very much for purchasing “CUCKOO” Electric Multi Pressure Cooker

Read the following instruction manual carefully before use or when facing problems.

在使用产品之前或是使用过程中出现任何问题, 请仔细阅读该产品的说明书.

Lea atentamente a las siguientes instrucciones antes de su uso o en caso de cualquier mal funcion.

CUCKOO ELECTRONICS CO., LTD.

CONTENTS

CONTENTS

BEFORE USING

IMPORTANT SAFEGUARDS	3
HOW TO USE EXTENSION CORD	5
SPECIFICATIONS	5
SAFETY PRECAUTIONS	6~7
NAME OF EACH PART	10
HOW TO CLEAN	11~16
FUNCTION OPERATING PART	17

WHEN USING

HOW TO SET FUNCTION	18
HOW TO PRESET COOKING	19
COOKER SETTINGS OVERVIEW	20
PREPARATION BEFORE COOKING	21
HOW TO COOK	22~24
KEEP WARM / REHEAT FUNCTION AND VOLTAGE SAG PROTECTION FUNCTION	25

PROBLEM CHECKLIST

PLEASE CHECK BEFORE CALLING FOR SUPPORT ...	26~28
---	-------

TABLA DE CONTENIDOS

ANTES DE USAR

IMPORTANT SAFEGUARDS	3
ESPECIFICACIONES	5
NOMBRE DE LAS PIEZAS	50
CÓMO LIMPIAR	51~56
PANEL DE CONTROL Y PANTALLA	57

CUANDO USAS

CÓMO CONFIGURAR	58
CÓMO PRECONFIGURAR LA COCCIÓN	59
TABLA DE RESUMEN	60
PREPARACIÓN ANTES DE COCINAR	61
CÓMO COCINAR	62~64
MANTENER CALIENTE, RECALENTAR, PROTECCIÓN DE CAÍDA DE VOLTAJE	65

LISTA DE COMPROBACIÓN DE PROBLEMAS

POR FAVOR VERIFIQUE ANTES DE PEDIR SOPORTE ...	66~68
--	-------

目录

使用前

IMPORTANT SAFEGUARDS	3
规格	5
产品部件名称	30
清洁保养方法	31~36
控制&显示板	37

使用时

设定功能	38
预约煮饭方法	39
压力锅设置概览	40
煮饭前准备事项	41
煮饭方法	42~44
保温/再加热功能及保温温度设定	45

问题检查表

常见故障及处理方法	46~48
-----------------	-------

TABLE DES MATIÈRES

AVANT L'UTILISATION

MESURES DE PROTECTION IMPORTANTES	4
COMMENT UTILISER UNE RALLONGE	5
SPÉCIFICATIONS.....	5
MESURES DE SÉCURITÉ	8~9

IMPORTANT SAFEGUARDS

1. Read all instructions before using this appliance.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and / or injury to persons do not immerse cord, plugs, or Pressure Cooker Body in water or any other liquid.
4. Close supervision is necessary when this appliance is used by or near children. This appliance is not intended for use by young children without supervision.
5. Unplug cord from outlet when not in use and before cleaning. Allow appliance to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug, after the appliance malfunctions, or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, and / or injury to persons.
8. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or your service agent.
9. Do not use outdoors.
10. Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas, electric burner, or in a heated oven.
12. Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, or set all control to "off", then remove the plug from the wall outlet.
13. Do not use this appliance for other than its intended use.
14. Extreme caution must be used when moving an appliance containing hot oil or any hot liquids.
15. Oversized foods, metal foil packages, or utensils must not be inserted into the appliance as they are a risk of fire or electric shock.
16. Fire may occur if the appliance is covered or touching flammable material, including curtains, draperies, walls, etc while in operation.
17. To reduce the risk of electric shock, cook only in the provided removable container.
18. This appliance cooks under pressure. Improper use may result in scalding injury. Before operating the unit, properly secure and close the unit. See "Operating Instructions."
19. Before use always check the pressure releasing device for clogging.
20. Do not use this pressure cooker to fry in oil.
21. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
22. Never immerse the appliance in water while cleaning.

SAVE THESE INSTRUCTIONS THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

ADDITIONAL IMPORTANT SAFEGUARDS

WARNING : This appliance generates heat and releases steam during use. Use proper precaution to prevent risk of burns, fires, other injuries, or damage to property.

1. Keep hands and face away from the Pressure Release Valve when releasing pressure.
2. Take extreme caution when opening the Lid after cooking. Severe burns can result from steam inside.
3. Never open the Lid while the unit is in operation.
4. Do not use without the inner Pot in place.
5. Do not cover the Pressure Valve with anything as an explosion may occur.
6. Do not touch the inner pot nor any heating parts, immediately after use.

Allow the unit to cool down completely first.

This appliance is intended to be used in household and similar applications such as :

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

MESURES DE PROTECTION IMPORTANTES

1. Lisez toutes les instructions avant d'utiliser cet appareil.
2. Ne touchez pas les surfaces chaudes. Utilisez les poignées ou les boutons.
3. Pour prévenir les risques d'incendie, les chocs électriques et/ou les blessures, ne plongez pas le cordon, les prises ou le corps autocuiseur dans l'eau ou tout autre liquide.
4. Une surveillance étroite est nécessaire quand cet appareil est utilisé par des enfants ou qu'il se situe à leur portée. Cet appareil n'est pas prévu pour être utilisé par de jeunes enfants sans surveillance.
5. Débranchez le cordon de la prise lorsque vous ne vous servez pas de l'appareil et avant de le nettoyer. Laissez l'appareil refroidir avant de remettre en place ou de retirer des pièces, et avant de le nettoyer.
6. N'utilisez aucun appareil si le cordon ou la fiche est endommagé, s'il ne fonctionne pas correctement ou s'il est endommagé de quelque façon que ce soit. Renvoyez l'appareil à un centre technique agréé le plus proche pour le faire examiner, réparer ou régler.
7. L'utilisation d'accessoires non recommandés par le fabricant peut causer un incendie, un choc électrique et/ou des blessures.
8. Si le cordon d'alimentation est endommagé, il doit être remplacé par un cordon ou ensemble prévu à cet effet, disponible auprès du fabricant ou de réparateurs agréés.
9. N'utilisez pas l'appareil à l'extérieur.
10. Ne laissez pas le cordon pendre d'une table ou d'un comptoir. Ne le laissez pas non plus en contact avec une surface chaude.
11. Ne placez pas l'appareil au-dessus ou près d'un brûleur à gaz, sur une plaque électrique ou dans un four chaud.
12. Branchez toujours la fiche sur l'appareil en premier, puis branchez le cordon dans la prise murale. Pour débrancher, ou désactiver toutes les commandes, retirez la fiche de la prise murale.
13. N'utilisez pas cet appareil à des fins autres que celles pour lesquelles il a été conçu.
14. Une prudence extrême est requise lorsque vous déplacez l'appareil contenant de l'huile chaude ou tout autre liquide chaud.
15. Des denrées alimentaires de taille excessive, les emballages sous feuille métallique, ou les ustensiles ne doivent pas être insérés dans l'appareil car ils constituent un risque d'incendie ou de choc électrique.
16. Un incendie peut se déclarer si l'appareil est couvert ou en contact avec des matériaux inflammables, y compris des rideaux ou des draperies, des murs, etc durant son fonctionnement.
17. Afin de réduire le risque de choc électrique, faites cuire uniquement dans le récipient amovible fourni.
18. Cet appareil cuit sous pression. Un mauvais usage peut entraîner des brûlures. Avant d'utiliser l'appareil, mettez l'appareil bien en place et fermez-le. Reportez-vous à la section « Instructions d'utilisation ».
19. Avant toute utilisation, vérifiez toujours si le dispositif de relâchement de la pression est obstrué.
20. N'utilisez pas cet autocuiseur pour faire frire dans de l'huile.
21. Cet appareil n'est pas conçu pour être manipulé par des personnes (y compris des enfants) dont les capacités physiques sensorielles ou mentales sont réduites ou qui manquent d'expérience et de connaissance, à moins qu'elles n'aient reçu une formation ou des instructions sur l'utilisation de l'appareil par une personne responsable de leur sécurité
22. Ne jamais immerger l'appareil dans l'eau pendant le nettoyage.

CONSERVEZ CES INSTRUCTIONS

CET APPAREIL EST DESTINÉ À UN USAGE DOMESTIQUE UNIQUEMENT

MESURES DE PROTECTION SUPPLÉMENTAIRES

AVERTISSEMENT : Cet appareil génère de la chaleur et libère de la vapeur durant son fonctionnement. Utilisez les protections appropriées pour prévenir le risque de brûlures, d'incendies, de blessures ou de dégâts matériels.

1. Gardez vos mains et votre visage à l'écart de la soupape de décharge lors du relâchement de la pression.
2. Faites extrêmement attention lors de l'ouverture du couvercle après la cuisson. La vapeur à l'intérieur peut provoquer des brûlures graves.
3. N'ouvrez jamais le couvercle lorsque l'appareil est en fonctionnement.
4. N'utilisez pas l'appareil sans la cuve de cuisson à sa place.
5. Ne recouvrez pas la soupape de pression par un objet quelconque, une explosion pourrait survenir.
6. Ne touchez pas la cuve de cuisson ni les éléments chauffants immédiatement après utilisation. Laissez tout d'abord l'appareil refroidir complètement. Cet appareil est prévu pour être utilisé à la maison à des fins telles que :
 - la cuisine pour le personnel dans des magasins, des bureaux et d'autres environnements de travail;
 - les fermes;
 - par des clients dans des hôtels, des motels et autres environnements de type résidentiel;
 - des environnements de type chambres d'hôtes.

HOW TO USE EXTENSION CORD / COMMENT UTILISER UNE RALLONGE

Note:

- A. A short power-supply cord (or cord set) is provided to reduce the hazards from entanglement by a longer cord.
- B. Extension cord should be used properly.
- C. Extension cord usage for the multi cooker:
 - (1) The correct rated voltage should be used for the multi cooker.
 - (2) If the appliance is set on the ground, the extension cord should also be set on the ground.
 - (3) The cord wires and extension cord should always be arranged to prevent hazards to children.

"This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. do not attempt to modify the plug in any way."

Remarque :

- A. Un cordon d'alimentation court (ou câble) est fourni pour réduire les dangers d'emmêlement causés par un cordon plus long.
- B. La rallonge doit être utilisée correctement.
- C. L'utilisation de la rallonge pour le cuiseur à riz :
 - (1) La tension nominale correcte doit être utilisée pour le cuiseur à riz.
 - (2) Si l'appareil est installé sur le sol, la rallonge doit aussi être installée sur le sol.
 - (3) Les câbles et la rallonge doivent toujours être disposés dans le but d'éviter les dangers pour les enfants.






"Cet appareil possède une fiche polarisée (une lame plus large que l'autre). Afin de réduire le risque d'électrocution, cette fiche est conçue pour s'adapter à une prise polarisée dans un seul sens. Si la fiche ne s'emboîte pas complètement dans la prise, inversez la fiche. S'il ne convient toujours pas, veuillez communiquer avec un électricien qualifié. N'essayez pas de modifier la fiche de quelque façon que ce soit."

SPECIFICATIONS / 规格 / ESPECIFICACIONES / SPÉCIFICATIONS / 제품규격

Model name/型号名称/Modelo/모델명	CMC-A5 Series			
	PREMIUM	AC120V~, 60Hz	SUPERIOR	
Power supply/电源/Alimentación eléctrica/전원	1150W			
Power consumption/功耗/Consumo de energía/소비전력	1150W			
MENU	MULTI COOK	-	-	
	STEAM COOK	-	-	
	SLOW COOK	-	-	
	RICE COOK	WHITE RICE	-	STICKY RICE SUSHI RICE GENERAL RICE
		BROWN RICE	-	-
		GABA RICE	-	-
		MULTI GRAIN	-	-
		SUPER GRAIN	-	-
		VEGETABLES	-	-
	MEAT	BEAN & CHILI	-	-
		-	-	-
	SOUP	SOUP	-	-
		PORRIDGE	-	-
		STEW	-	-
	BROWN FRY/SAUTÉ	-	-	
	YOGURT	-	-	
	CANNING	-	-	
	OVEN	-	-	
PASTA/NOODLE	-	-		
STERILIZATION	-	-		
MY RECIPES	-	-		
Power cord length/电源线长度/Longitud del cable eléctrico/전원코드길이	1.3m			
Pressure/压力/Presión/사용압력	78.4KPa(0.8kgf/cm2)			
Weight/重量/Peso/중량	7.5kg		7.2kg	
Dimension/尺寸/Dimensiones/치수	Width/宽度/Anchura/폭	29.4cm		
	Length/长度/Longitud/길이	39.5cm		
	Height/高度/Altura/높이	29cm		

SAFETY PRECAUTIONS

- Read the following product safety guide carefully to prevent any accidents and/or serious danger.
- ‘Warning’ and ‘Caution’ are different as follows.

 Warning This means that the action it describes may result in death or severe injury.	 • This sign is intended to remind and alert that something may cause problems under the certain situation. • Please read and follow the instruction to avoid any harmful situation.
 Caution This means that the action it describes may result in injury or property damage.	 • Indicates a prohibition  • Indicates an instruction

Warning **Do not**

<p>Do not cover the automatic steam outlet or pressure weight with your hand or face.</p> <ul style="list-style-type: none"> • It can cause burns. • Especially be careful to keep it out of children’s reach. 	<p>Do not use it without the inner pot.</p> <ul style="list-style-type: none"> • It can cause electric shock or malfunction. • Do not pour rice or water without the inner pot. • If rice or water gets in then do not turn the product over or shake it, please contact the dealer or service center.
<p>Do not use the cooker near hot things such as stove, gas stove or direct ray of light.</p> <ul style="list-style-type: none"> • It can cause an electric shock, fire, deformation, malfunction, or discoloration. Please check the power cord and plug frequently. 	<p>Do not turn the Lock/Unlock Handle to “Unlock” while cooking.</p> <ul style="list-style-type: none"> • The hot steam or any hot content within the cooker can cause burns. • After you finish the cooking do not try to open the cooker by force until the steam is completely exhausted.
<p>Do not alter, reassemble, disassemble or repair.</p> <ul style="list-style-type: none"> • It can cause fire, electric shock or injury. • For repair, contact dealer or the service center. 	<p>Do not over unplug and plug the power cord over and over.</p> <ul style="list-style-type: none"> • It can cause an electric shock or fire.
<p>Use a single socket with the rated current above 15A.</p> <ul style="list-style-type: none"> • Using several lines in one socket can cause overheating or fire. Please check the power cord and plug frequently. • Use an extension cord with the rated current above 15A. 	<p>Do not insert metal objects such as pins and wires or any other external substances in the automatic steam exhaust outlet or any other slot.</p> <ul style="list-style-type: none"> • It can cause an electric shock or fire. • Especially be careful to keep it out of reach of children.
<p>Please pay careful attention against water and chemicals</p> <ul style="list-style-type: none"> • It can cause an electric shock or fire. 	<p>Keep the cooker out of reach of children.</p> <ul style="list-style-type: none"> • It can cause burns, electric shock or injury.
<p>Do not use a multi cooker at a place where dust is trapped or chemical material is located.</p> <ul style="list-style-type: none"> • Do not use any combustible gas or flammable materials nearby a product. • It can cause explosion or fire. 	<p>Don’t spray or put any insecticides or chemicals.</p> <ul style="list-style-type: none"> • It can cause an electric shock or fire. • If cockroaches or any insects get inside the cooker, please call a dealer or a service center.
<p>Do not use damaged power cord, plug, or loose socket.</p> <ul style="list-style-type: none"> • Please check the power cord frequently for damage. • Serious damage can cause electric shock or fire. • If the plug is damaged, contact the dealer or a service center. 	<p>Don’t let foreign substances such as needle, cleaning pin, or metal get in or block the in let/out let pipe or gape.</p> <ul style="list-style-type: none"> • It can cause an electric shock or fire. • Do not put a cleaning pin in a gap or a hole of the product except when dearing a steam outlet.
<p>Do not clean the product with water or pour water in the product.</p> <ul style="list-style-type: none"> • It can cause an electric shock or fire. • If it contacts water, please separate power cord and contact dealer and service center. 	<p>Do not open the top cover while in heating and cooking.</p> <ul style="list-style-type: none"> • It can cause burns. • If you need to open the lid while cooking, keep pressing the cancel button for 2 seconds and confirm internal steam released completely turning the pressure weight over.
<p>Do not cover the automatic steam outlet or pressure weight with a duster, a towel, or apron, etc.</p> <ul style="list-style-type: none"> • It can cause deformation or a breakdown. • It can cause an explosion by pressure. 	<p>Remove a foreign substance on the cord and plug with a clean cloth.</p> <ul style="list-style-type: none"> • It can cause fire. Please check the power cord and plug frequently.
<p>Do not use pots that are not designed for the cooker. Do not use abnormal pot and do not use without the inner pot.</p> <ul style="list-style-type: none"> • It can cause an electric shock or fire. 	<p>Be careful that both the plug and power cord are not to be shocked by animal attack or sharp metal materials.</p> <ul style="list-style-type: none"> • Damages by impact can cause an electric shock or fire. Please check the power cord and plug frequently.



Caution



Do not

Do not use it on a rice chest or a shelf.

- Do not place the power cord between furniture. It can cause an electric shock resulting in fire. Please check the power cord and plug frequently.
- When using on furniture be cautious of steam release As it can cause damage, fire and and/or electric shock.

Do not press heavy things on the power cord.

- It can cause an electric shock or fire.
- Please check the power cord and plug frequently

Do not change, extend or connect the power cord without the advice of a technical expert.

- It can cause an electric shock or fire.

Clean any dust or external substances off the temperature sensor and inner pot.

- It can cause a system malfunction or fire.

Do not plug or pull out the power cord with wet hands.

- It can cause an electric shock.

Do not move the product by pulling or using the power cord.

- Electric short might cause fire.

Please contact a dealer or service center when there is a strange smell or smoke.

- First pull out the power cord. And contact dealer or the service center.

Do not fill the Inner Pot for more than its maximum capacity.

- It may cause a malfunction leading to issues such as overflow of contents or poor cooking.

Do not touch the metallic surface of the inner pot and pressure weight after cooking or warming.

- It can cause burns.
- Remaining hot steam can cause burns when you tilt the pressure weight while and right after the cooking.

Don't use the cooker near a magnetic field.

- It can cause burns or breakdown.

Do not drop or impact the cooker.

- It can cause a safety problem.

Please surely pull out the plug when not in use.

- It can cause electric shocks or fire.
- Use AC 120V only.

Use product on a flat surface. Do not use on a cushion. Please avoid using it on an unstable location prone to falling down.

- It can cause malfunction or a fire. Please check the power cord and plug frequently.

Don't use for various purpose for inner pot.

And do not heat up the inner pot on the gas stove.

- It can cause deformation of the inner pot.
- It can cause to spill the inner coating.

Please pull out the plug when not in use.

- It can cause electric shocks or fire.

Please use the cooker for it's intended purpose.

- It can cause malfunction or smell.

After you finish cooking, do not try to open the cooker by force until the steam is completely exhausted.

- The hot steam or any hot content within the cooker can cause burns.
- Cautiously open the top cover after cooking is done to avoid dangerous steam and burns.

Do not place on rough top or tilted top.

- It can cause burns or breakdowns.
- Be careful to install the power cord to pass without disruption.

Please call customer service if the inner pot coating peels off.

- Inner pot coating may wear away after long use.
- When cleaning the inner pot, do not use tough scrubber, metallic scrubber, brush, abrasive metallic etc.

Do not hold the cooker by the inner pot handle.

- It can cause problems and danger. There are portable handles on the bottom right and left side of the cooker. Hold the handles with both hands and move it carefully.

Always turn the Lock/Unlock Handle to "Lock" when not in use.

- It can cause deformation by remaining pressure.

Wipe off any excessive water on the cooker after cooking.

- It can cause odor and discoloration.
- Wipe off water that is left behind from dew.

Please contact dealer or service center when either a button of a product or a product itself is not working properly.

In case of a blackout during cooking, steam from a multi cooker will be released automatically.

Thus, the quality of rice is lower than normal.

- Please start cooking with an indicated amount of rice and water.
- Water can overflow if the amount of water in a pot exceeds the indicated level of water usage.
- Please start cooking in a status that steam control cap is installed completely.

Please clean the body and other parts after cooking.

- If you cook rice or use the Keep Warm function after cooking other food, the rice or the food may smell or stink.
- Clean the oven packing, top heater plate, and inner pot every time you cook any of those.
- It can cause alteration or smell.
- Use dry kitchen cleaner or sponge to clean the inner pot, since rough scrub or metallic ones are abrasive to the coating.
- Depending on the using methods or user's circumstances inner pot coating might rise. Please call the customer service for those cases.
- Please, do not pull out the clean steam vent by force.

Be cautious when steam is being released.

- When the steam is released don't be surprised.
- Please keep the cooker out of reach of children.

As the food could go bad, please avoid using the Keep Warm mode for a long time.

When you pull out the power plug, don't pull the power cord. Please, safely pull out the power plug.

- If you inflict impact on power cord, it can cause an electric shock or fire.

MESURES DE SÉCURITÉ

- Lisez attentivement le guide de sécurité du produit qui suit afin d'éviter les accidents et/ou les dangers graves.
- « Avertissement » et « Attention » diffèrent comme suit :



Avertissement

Cela signifie que l'action qui est décrite peut entraîner la mort ou une blessure grave.



Attention

Cela signifie que l'action décrite peut entraîner des blessures ou des dégâts matériels.



• Ce symbole vise à rappeler et à alerter que quelque chose peut entraîner des problèmes dans la situation donnée.

• Veuillez lire et respecter l'instruction afin d'éviter toute situation dangereuse.



• Indique une interdiction.



• Indique une instruction.



Avertissement



Ne pas

Ne recouvrez pas la sortie de vapeur automatique ou le poids de pression avec votre main ou votre visage.

- Cela peut entraîner des brûlures.
- Faites particulièrement attention à le mettre hors de portée des enfants.

N'utilisez pas le cuiseur près de ce qui est chaud comme une cuisinière, une cuisinière à gaz ou la lumière directe du soleil.

- Cela peut causer un choc électrique, un incendie, une déformation, un dysfonctionnement ou une décoloration. Veuillez vérifier régulièrement le cordon d'alimentation et la prise.

Ne modifiez pas, ne remontez pas, ne démontez pas ou ne réparez pas cet appareil.

- Cela peut entraîner un incendie, un choc électrique ou des blessures.
- Pour le faire réparer, contactez le revendeur ou le centre technique.

Utilisez une prise individuelle avec un courant nominal supérieur à 15A.

- L'utilisation de plusieurs lignes sur une seule prise peut provoquer une surchauffe ou un incendie.
- Veuillez vérifier fréquemment le cordon d'alimentation et la prise.
- Utilisez une rallonge avec un courant nominal supérieur à 15A.

Soyez particulièrement attentifs à l'eau ou aux produits chimiques.

- Cela peut causer un choc électrique ou un incendie.

N'utilisez pas le cuiseur à riz dans un endroit qui retient la poussière ou en présence de produits chimiques.

- N'utilisez aucun gaz inflammable ou produit inflammable près du produit.
- Cela peut entraîner une explosion ou un incendie.

N'utilisez pas un cordon d'alimentation endommagé, une fiche ou une prise mal fixée.

- Veuillez vérifier régulièrement si le cordon d'alimentation est endommagé.
- Des dégâts importants peuvent entraîner un choc électrique ou un incendie.
- Si la fiche est endommagée, contactez le revendeur ou un centre technique.

Ne nettoyez pas le produit avec de l'eau ni ne versez de l'eau dans le produit.

- Cela peut entraîner un choc électrique ou un incendie.
- Si le produit est en contact avec de l'eau, veuillez séparer le cordon d'alimentation et contactez le revendeur et le centre technique.

Ne recouvrez pas la sortie de vapeur automatique ou le poids de pression de pression avec un chiffon, une serviette ou un tablier etc.

- Cela peut entraîner une déformation ou une panne.
- Cela peut entraîner une explosion due à la pression.

Ne pliez pas, n'attachez pas et ne tirez pas le cordon d'alimentation de force.

- Cela peut provoquer un choc électrique ou un court-circuit entraînant un incendie. Veuillez vérifier fréquemment le cordon d'alimentation et la prise.

N'utilisez pas de cuves de cuisson qui ne sont pas conçues pour le cuiseur.

N'utilisez pas une cuve de cuisson anormale et n'utilisez pas l'appareil sans la cuve de cuisson.

- Cela peut entraîner un choc électrique ou un incendie.

N'utilisez pas l'appareil sans la cuve de cuisson.

- Cela peut provoquer un choc électrique ou un dysfonctionnement.
- Ne mettez pas de riz ni d'eau sans la cuve de cuisson à l'intérieur.
- Si du riz ou de l'eau s'infiltre, ne retournez pas le produit et ne le secouez pas, veuillez contacter le revendeur ou le centre technique.

Ne mettez pas la poignée Lock/Unlock (verrouiller/déverrouiller) sur « Unlock » durant la cuisson.

- La vapeur chaude ou tout autre élément chaud à l'intérieur de l'autocuiseur peut entraîner des brûlures.
- Après avoir fini la cuisson n'essayez pas d'ouvrir le cuiseur de force avant que la vapeur se soit complètement évacuée.

Ne débranchez pas ni ne branchez sans arrêt le cordon d'alimentation.

- Cela peut entraîner un choc électrique ou un incendie.

N'insérez pas d'objets en métal tels que des épingles et des fils ou toute autre substance extérieure dans la sortie d'évacuation de vapeur automatique ou toute autre ouverture.

- Cela peut entraîner un choc électrique ou un incendie.
- Faites tout particulièrement attention de garder l'appareil hors de portée des enfants.

Gardez le cuiseur hors de portée des enfants.

- Cela peut provoquer des brûlures, un choc électrique ou des blessures.

Ne vaporisez pas et n'utilisez pas d'insecticides ou de produits chimiques.

- Cela peut entraîner un choc électrique ou un incendie.
- Si des cafards ou d'autres insectes pénètrent dans le cuiseur, veuillez contacter un revendeur ou un centre technique.

Ne laissez pas des substances étrangères telles qu'une aiguille, une épingle de nettoyage, ou du métal entrer et ne bloquez pas le conduit d'arrivée/d'évacuation ou l'ouverture.

- Cela peut entraîner un choc électrique ou un incendie.
- Ne mettez pas une épingle de nettoyage dans l'ouverture ou le trou du produit sauf pour nettoyer la sortie de vapeur.

N'ouvrez pas le couvercle supérieur lors de la phase de chauffage et de la cuisson.

- Cela peut entraîner des brûlures.
- Si vous avez besoin d'ouvrir le couvercle lors de la cuisson, maintenez appuyé le bouton cancel (annuler) pendant deux secondes et vérifiez que la vapeur interne s'est complètement évacuée en retournant le poids de pression.

Faites attention à ce que la fiche et le cordon d'alimentation ne soient pas entrechoqués par des attaques d'animaux ou par des matériaux métalliques tranchants.

- Les dégâts dus à des impacts peuvent provoquer un choc électrique ou un incendie. Veuillez vérifier fréquemment le cordon d'alimentation et la prise.



Avertissement



Se rappeler

Retirez une substance étrangère sur le cordon et la fiche à l'aide d'un chiffon propre.

- Cela peut provoquer un incendie. Veuillez vérifier fréquemment le cordon d'alimentation et la fiche.

N'utilisez pas l'appareil sur un coffre à riz ou une étagère.

- Ne placez pas le cordon d'alimentation entre des meubles. Cela peut provoquer un choc électrique entraînant un incendie.
- Veuillez vérifier fréquemment le cordon d'alimentation et la prise.
- En cas d'utilisation sur du mobilier, faites attention à l'évacuation de la vapeur car cela peut provoquer des dégâts, un incendie et/ou un choc électrique.

Ne placez pas de choses lourdes sur le cordon d'alimentation.

- Cela peut entraîner un choc électrique ou un incendie.
- Veuillez vérifier fréquemment le cordon d'alimentation et la fiche.

Ne changez pas, ne rallongez pas ni ne branchez le cordon d'alimentation sans l'avis d'un expert technique.

- Cela peut entraîner un choc électrique ou un incendie.

Nettoyez la poussière ou toute substance étrangère sur le capteur de température et la cuve de cuisson.

- Cela peut provoquer un dysfonctionnement du système ou un incendie.

Ne branchez pas et ne retirez pas le cordon d'alimentation avec les mains mouillées.

- Cela peut provoquer un choc électrique.

Ne déplacez pas le produit en tirant ou en utilisant le cordon d'alimentation.

- Un court-circuit électrique pourrait provoquer un incendie.

Veuillez contacter un revendeur ou un centre technique en cas d'odeur ou de fumée inhabituelle.

- Débranchez tout d'abord le cordon d'alimentation. Puis contactez le revendeur ou le centre technique.

N'utilisez pas l'appareil au-delà de la capacité maximum.

- Cela pourrait provoquer un dysfonctionnement tel que le débordement de contenu ou une tout autre panne.

Ne touchez pas la surface métallique de la cuve de cuisson et le poids de pression après la cuisson et la phase de chauffage.

- Cela peut entraîner des brûlures.
- La vapeur chaude restante peut provoquer des brûlures quand vous appuyez sur le poids de pression durant et juste après la cuisson.

N'utilisez pas le cuiseur près d'un champ magnétique.

- Cela peut provoquer des brûlures ou une panne.

Ne laissez pas tomber le cuiseur et ne le soumettez pas à des chocs.

- Cela peut entraîner un problème de sécurité.

Veuillez vous assurer de débrancher la prise lorsque l'appareil n'est pas utilisé.

- Cela peut provoquer des chocs électriques ou un incendie.
- Utilisez du courant 120V uniquement.

Utilisez le produit sur une surface plane. N'utilisez pas le produit sur un coussin. Veuillez éviter d'utiliser le produit dans un endroit qui n'est pas stable où il risquerait de tomber.

- Cela peut entraîner un dysfonctionnement ou un incendie. Veuillez vérifier fréquemment le cordon d'alimentation et la prise.

Veuillez débrancher la prise lorsque vous n'utilisez pas le produit.

- Cela peut provoquer des chocs électriques ou un incendie.

Veuillez utiliser le cuiseur dans le but dans lequel il a été conçu.

- Cela peut provoquer un dysfonctionnement ou une odeur.

Après avoir fini la cuisson, n'essayez pas d'ouvrir le cuiseur de force avant que la vapeur ne soit complètement évacuée.

- La vapeur chaude ou tout autre élément chaud à l'intérieur du cuiseur peut provoquer des brûlures.
- Ouvrez le couvercle supérieur avec prudence après la cuisson afin d'éviter la vapeur et des brûlures présentant un danger.

Ne placez pas l'appareil sur une surface irrégulière ou inclinée.

- Cela peut provoquer des brûlures ou des pannes.
- Faites attention à installer le cordon d'alimentation de façon à ce qu'il passe sans interruption.

Veuillez contacter le service client si le revêtement de la cuve de cuisson s'enlève.

- Il se peut que le revêtement s'use après une longue utilisation.
- Lors du nettoyage de la cuve de cuisson, n'utilisez pas de tampon à récurer dur ou métallique, de brosse, d'abrasifs métalliques etc.

Ne tenez pas le cuiseur par la poignée de la cuve de cuisson

- Cela peut entraîner des problèmes ou être dangereux. Des poignées amovibles sont disposées en bas à droite et sur le côté gauche du cuiseur. Tenez les poignées à deux mains et déplacez-le avec précaution.

Mettez toujours la poignée Lock/Unlock (verrouillage/déverrouillage) sur « Lock » lorsque vous n'utilisez pas l'appareil n'est pas utilisé.

- Cela peut entraîner une déformation du à la pression restante.

Essuyez toute l'eau en excès sur le cuiseur après la cuisson.

- Cela peut entraîner des odeurs ou une décoloration. Essuyez l'eau résultant de la condensation.

Veuillez contacter un revendeur ou un centre technique lorsqu'un bouton du produit ou le produit lui-même ne fonctionne pas correctement.

En cas de coupure de courant durant la cuisson, la vapeur du cuiseur à riz est évacuée automatiquement. La qualité du riz est par conséquent inférieure à la normale.

- Veuillez démarrer la cuisson avec la quantité d'eau et de riz indiquée.
- L'eau peut déborder si la quantité d'eau dans la cuve de cuisson dépasse le niveau d'eau recommandé.
- Veuillez démarrer la cuisson avec le capot de régulation de la vapeur, complètement mis en place.

Veuillez nettoyer le corps ainsi que les autres parties après la cuisson.

- Une odeur pourrait imprégner le nouveau contenu lorsque vous faites cuire ou réchauffer après une première utilisation.
- Nettoyez le compartiment du four, la plaque supérieure de chauffage et la cuve de cuisson à chaque fois que vous faites cuire avec l'un d'entre eux.
- Cela peut entraîner une altération ou des odeurs.
- Utilisez un essuie-tout sec ou une éponge pour nettoyer la cuve de cuisson, car les surfaces dures rugueuses ou celles en métal sont abrasives pour le revêtement.
- En fonction des méthodes d'utilisation ou des circonstances propres à l'utilisateur, le revêtement de la cuve de cuisson peut se détacher.
- Veuillez contacter le service client dans ces cas de figure. Veuillez ne pas tirer de force l'évent à vapeur propre.

Faites attention lorsque la vapeur est évacuée.

- Ne soyez pas surpris lorsque la vapeur est évacuée.
- Veuillez conserver le cuiseur hors de portée des enfants.

Ne pas réchauffer le contenu pendant trop longtemps sous peine de détérioration ou alteration.

Lorsque vous retirez la fiche d'alimentation, ne tirez pas sur le cordon d'alimentation. Veuillez retirer en toute sécurité la fiche d'alimentation.

- Si vous faites prendre un impact au cordon d'alimentation, cela peut entraîner un choc électrique ou un incendie.

NAME OF EACH PART



ICOOK A5 PREMIUM

Digital Programmed Steam Releaser (Solenoid Valve)

Keep the pressure weight horizontally. It stabilizes steam inside. When the pressure weight spins, it releases steam.

Soft Steam Cap

Automatic Steam Exhaust Outlet

When cooking is finished or in warming mode, steam releases automatically.

Lock/Unlock Handle

The handle has to be in 'Lock' position to operate.

Clamp Knob

Turn handle to 'Unlock', and then press Clamp knob to open.

FND Display

JOG DIAL



ICOOK A5 SUPERIOR

※ Pictures may look different from the actual product



Lid Assy

Dual Motion Packing

Detachable Cover

ICOOK A5 PREMIUM: STS + STS Detachable Cover
ICOOK A5 SUPERIOR: Diecasting(No Detachable Cover)

 
Inner Pot Handle

Inner Pot

Insert the inner pot into multi cooker.
ICOOK A5 PREMIUM: STS+NON STICK COATING
ICOOK A5 SUPERIOR: STS+NO COATING

Drain Dish


Pour out water from drain dish after cooking or during 'Warming' mode. Otherwise, an odor(s) may occurs



Power Cord

Power Plug

 The plug type may differ from the actual. (this is only to explain about how it works.)




Temperature Sensor

Packing



 Accessories



Operating Instruction



 
Cooking Guide



Rice Scoop



Measuring Cup



Steam Plate

 


Cleaning Pin
(Attached on the bottom of the unit)



Volume Gage
(Only applies to ICOOK A5 SUPERIOR)

INNER POT



Wipe the inner, upper, and outer parts of the inner pot of any foreign substance.

TOP COVER



If there is rice water left on the lid, please wipe clean with a wet towel. The center of the lid is made out of metal so beware when cleaning.

※ Pictures may look different from the actual product

OVEN PACKING



Wipe the top cover with a damp cloth. Be careful when cleaning the top heater

 
※ Pictures may look different from the actual product

Moisture dish of the main body



This part is designed to gather the moisture coming through the steam vent during cooking. Once cooking finished, wipe it clean with a well wrung dish cloth.

INNER BODY



If there are foreign substances stuck on the temperature sensor, remove them without damaging the metal plate. Cleanly wipe the foreign substances or any moisture on the heat plate.

CONTROL



In case the cauldron is stained with cooked rice water or foreign matter, wipe the cauldron with damp dishcloth. Using a rough scouring pad, brush, or etc. may damage the cauldron surface. If the buttons are not functioning correctly, please contact our customer care service.

MAIN UNIT



Wipe the main unit with a damp cloth.

LID OPEN BUTTON




Before or after use, please wipe around the Lid Open button and remove rice water or any other foreign substances using a wet towel. Before or after use, if the Lid Open button does not work, please contact customer service.


※ Caution

- Do not clean the inside of the inner pot with any sharp cutlery (fork, spoon, chopsticks, etc.).
- The coating of the inner pot may peel off.


How to Clean Drain Dish

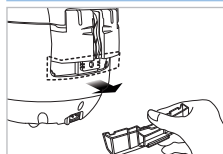


1 Separate the drain dish.

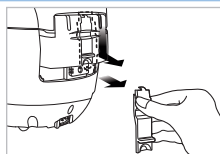


2 Separate the drain dish cap by pushing it down.

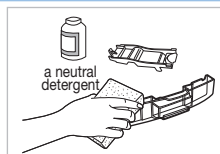

3 Clean the drain dish cap and drain dish with a neutral detergent.

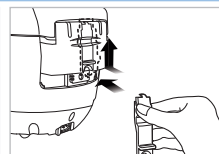

4 Securely put in the drain dish cap after cleaning

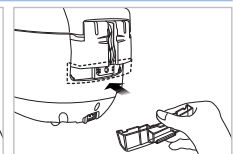

5 Insert the drain dish firmly by pressing it in direction of the arrow (as shown in the picture above).

How to Clean The Pressure Weight Nozzle



If the valve hole underneath the pressure weight is clogged, puncture it with the cleaning pin

- The valve hole of the pressure weight allows steam to release. Check regularly to ensure that it is not blocked. If the valve hole of the pressure weight is blocked, the hot steam and hot content within the cooker can cause serious injury.

※ Do not use the cleaning pin for any other use except to clean the valve hole of the pressure weight.



※ Pictures may look different from the actual product

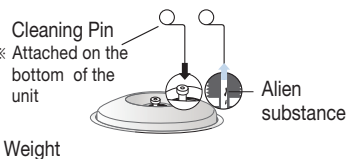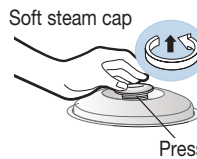

How to Disassemble the Pressure Weight

- ▶ Under the Lock/Unlock handle is the steam cap that guards the pressure weight. To remove the pressure weight, remove the steam cap, turn the pressure weight counter-clockwise while pulling it up, and keep turning until it comes out.
- ▶ Puncture the clogged valve hole with the cleaning pin and reassemble it by turning it clockwise.
- ▶ When the pressure weight is properly assembled, it can freely be turned.

HOW TO CLEAN (ICOOK A5 PREMIUM)

Detachable Cover & Pressure Packing (Only applies to ICOOK A5 PREMIUM)


After cleaning the detachable cover, put it back on the lid.

Unless the detachable cover is mounted, preset cooking cannot be done. The detachable cover must be mounted or the preset cooking options cannot commence. (Alarm may sound while keeping warm.)


-Clean the detachable cover to prevent odors.

-Clean the body and cover with a dry dishtowel. Do not use metallic scrubbers


-Do not put materials like screws into the holes of the detachable cover. Check the back cover and front cover.

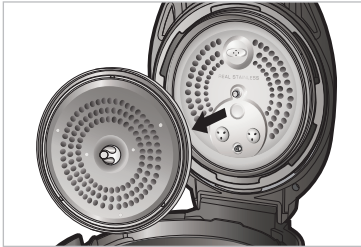


① If you pull out the detachable cover, indicated by the arrow, it can be easily separated.

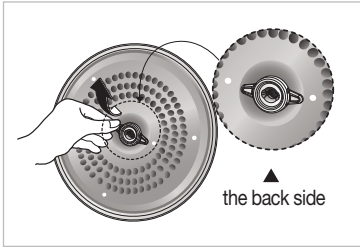


② When cleaning the detachable cover, hold and pull out the both side wing of the cover, and then separate the handle and the rubber packing.

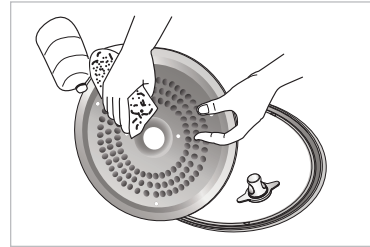


③ Frequently, clean the cover with a sponge and a neutral detergent.

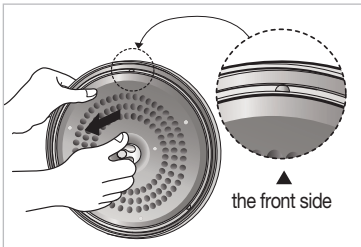

④ Please put the detachable cover.

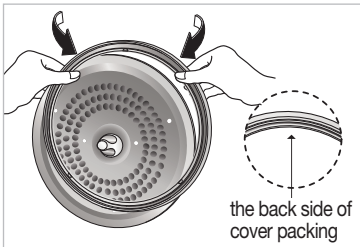

⑤ When you fix the rubber packing along the detachable cover edge, hold it between and put insert the edge of the detachable cover by turning it.

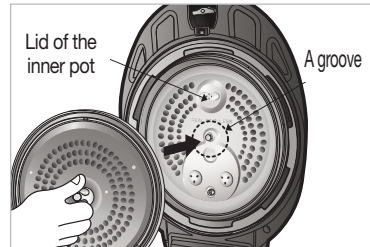

⑥ When putting the cover into the lid, press the cover handle after fitting the handle into the groove indicated by the arrow.


Correct Example



Front of packing



Front of handle

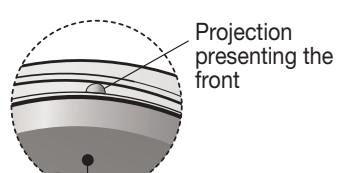


Projection presenting the front



Back of packing



Back of handle

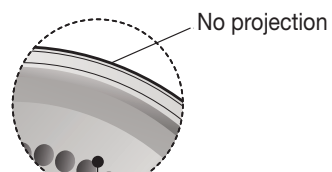

No projection

※ Do not put substances like a screw into hole of detachable cover.

(Do not alter the Detachable Cover holes with substances like screws, nails, ect...)

※ Look in the back cover and the front cover.

The all-stainless cover is not only delamination-free and easy to clean, but it also lasts long, In addition, CUCKOO's special stainless CSV-a CUCKOO's patented technology, improves the product's durability and makes it easier to clean.

How to install the Dual Motion Packing / Packing (ICOOK A5 PREMIUM , SUPERIOR)

- proper maintenance of the pressure packing helps keep the unit airtight. Also, adds durability to packing and ensures the taste of the food.
- Read the directions below carefully to install your packing properly.

※ICOOK A5 SUPERIOR : Pictures may look different from the actual product


1 How to remove and clean the pressure packing



- ① Unplug the power cord and wait until the pot cools down before opening the Top Cover.
- ② To remove the pressure packing, hold it as shown in the picture above and pull it out.
- ③ After hand washing the pressure packing with a neutral cleaning liquid and a sponge, wipe it clean with a well wrung dish cloth.

2 How to reassemble the pressure packing

▶ Figure.1

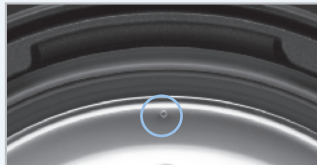


Standard notches on the Inner Pot lid.



Standard points on the pressure packing.

- First match the standard notches on the Inner Pot lid with the standard points on the pressure packing following the numerical order (1, 2, 3, 4, 5, 6). Then, press the outer rim of the packing to insert it into the groove. To reassemble the pressure packing follow the order described below:

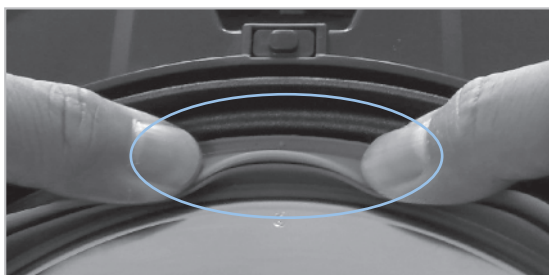

- ① As the Figure 1 shows, put the point #1 on the pressure packing with the standard notch #1 on the Inner Pot lid together before pressing the outer rim of the packing to insert it into the groove. Repeat with points #2 to #6.



- ② After matching the standard points 1 to 6, press the rest of the packing into the groove by pushing on its outer rim.

HOW TO CLEAN

3 How to double check whether the packing is well assembled



Since a badly assembled packing can cause the rice/food to be half-cooked or burned by steam leakage, double check the packing thoroughly as described below.

① Visual inspection



Normal assembly

- check the entire circumference carefully for any crack or damage between the Inner Pot lid and the pressure packing.

※COOK A5 SUPERIOR : Pictures may look different from the actual product.
The method of installation for Dual Motion Packing / Packing is same.
(COOK A5 PREMIUM / SUPERIOR)



Abnormal assembly

(look for parts sticking out of the inner)




(look for parts sticking out of outer rim)



(look for parts sticking out of damaged parts)

② Physical inspection

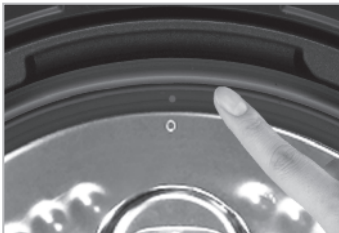

- Check if the pressure packing is thoroughly put into the groove by rubbing the inside rime of the packing with a finger around the entire circumference as shown in the picture above.



- Check if the pressure packing is properly put into the groove of the Inner Pot lid by pushing the outer rim with a finger around the entire circumference as shown in the picture.



- Check if the pressure packing is thoroughly put into the groove by pushing the inside of the rim packing with a finger around the entire circumference as shown in the picture.

③ Water boiling test

- Pour water into the Inner Pot up to water level 2 (for "Rice") and press the Menu/Selection button to select the self-cleaning mode. Then push the Pressure Cook button.
- Within 10 minutes, the pressure regulator weight will start rattling and hissing while emitting steam. If there is no steam coming out from the pot other than through the pressure regulator weight the packing has been properly installed.
- If steam comes out from other parts, stop the test and pull out the power cord. Wait until the pot unit cools down before removing the pressure packing from the lid. Once reinstalled repeat the boiling test.
- For a more precise water boiling test, you can wrap plastic around the circumference of the closed Top Cover. By doing so, you can easily check where the steam leakage is.



Normal assembly



Abnormal assembly


- If you still have a problem with reassembling the packing, please contact our Customer Service.

1. Simple Ways to Clean Stainless Steel Inner Pot

Here is a guide on how to clean burnt food and remove stains from your stainless steel inner pot. Please follow the direction below to preserve your inner pot.
(It is recommended to wash the inner pot in clean water before use.)


OPTION 1

- Put 10g of Citric Acid or Baking Soda (You may put more if you needed) with 3 L of water into the inner pot. Close the Lid and lock "🔒" the handle.
* Please use Food Citric Acid / Baking Soda.
- Select the AUTO CLEAN function using MENU button, and press COOK.
- Wash with warm water once it's done.
* Caution Hot surface: BURN HAZARD. PLEASE BE CAREFUL OF HOT SURFACE.
- Use dry cloth to dry off and desiccated.

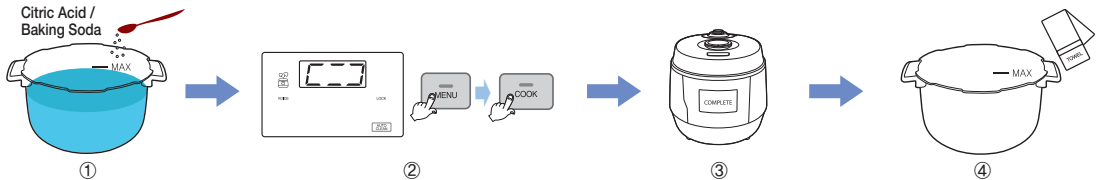


OPTION 2

- Put 3 L of water with 1/3 cup of Vinegar into the inner pot. Close the Lid and lock "🔒" the handle.
- Select the AUTO CLEAN function using MENU button, and press COOK.
- Wash with warm water once it's done.
* Caution Hot surface: BURN HAZARD. PLEASE BE CAREFUL OF HOT SURFACE
- Use dry cloth to dry off and desiccated.

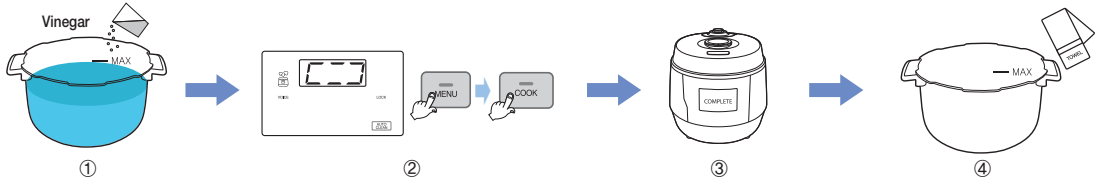

2. Cleaning SUPER stubborn burnt residue

- Put water (3L) into the inner pot. Close the Lid and lock "🔒" the handle.
* You may add baking soda if necessary.
- Select the AUTO CLEAN function using MENU button, and press COOK.
- Once it's done, use the wooden spatula to strip off the burns and wash with warm water.
* You may add baking soda if necessary. Use the wooden spatula to clean burned-on food.
- Use dry cloth to dry off and desiccated.

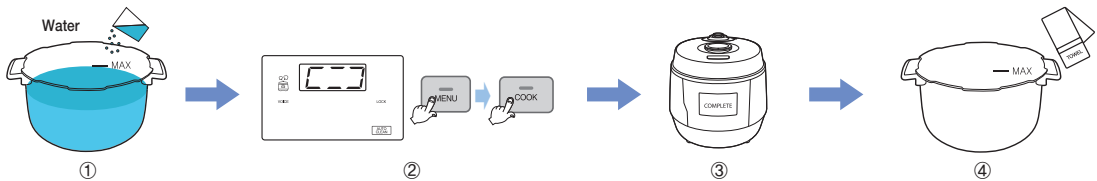

* information

- Transitory change such as rainbow stain or darkness in stainless steel can occur while cooking.
(Mineral phenomenon is a natural phenomenon, that occurs while your cooking which is harmless to the human body)
- Stainless steel discoloring is caused when salt water or acidic fluid settles for a long period of time.
- Please do not use chlorine or any chlorine base detergent to wash stainless steel.

Recommended detergent for inner pot cleaning (inside, outside)


Recommended	Not recommended
Cloth, Sponge, Microfiber sponge, Net sponge	Sting sponge, Scrubbing Sponge, sting or stainless steel material scrubber

• Not recommended: May scratch the coating and cause peeling of the inner pot.


HOW TO CLEAN

How to clean the soft steam cap


※ Do not touch the surface of the soft steam cap right after cooking. You can get burned.

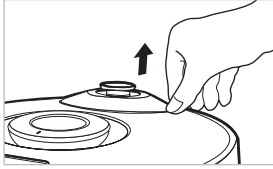


1 Peel off the soft steam cap as shown in the image above by grasping the dented part with your fingers and pulling to the side while lifting gently.

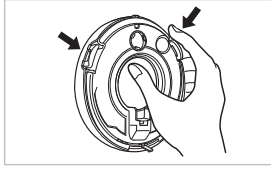


2 Disassemble soft steam cap in the rear by pressing in the direction of arrow and wash it frequently with a neutral detergent of sponge.

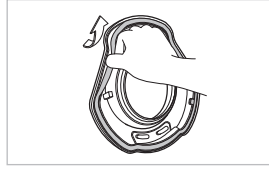


3 Disassemble the rubber packing in the direction of the arrow.

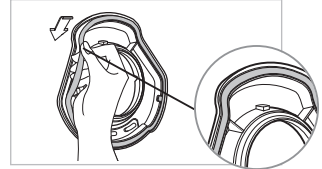

4 When fitting the rubber packing into the plate, please make sure the packing is facing the correct direction.

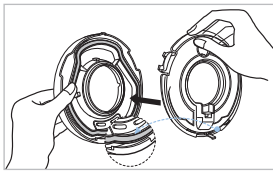

5 When you are putting the soft steam cap together, match the bump on the bottom, press it towards the arrow and make sure the hook in the front is locked.

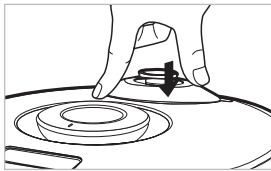

6 When installing the soft steam cap, insert the cap firmly by pressing it in the direction as shown above.

How to check if your packing has installed properly



Correct



Wrong

※ Carefully insert the packing the correct way.

How to use the handle

1. After cooking, turn the handle from “Lock” to “Unlock” to open
2. If there is unreleased steam in the Inner pot it maybe difficult to turn the handle. In this case, twist (cautiously pull up) the pressure weight and let the excess steam out. (See more detail of the pressure weight on page 11.) Do not open by force.
3. Handle must be turned to “Unlock” to open and close the lid.

• If the lamp does not turn on, it would not operate the “Cook” and “Preset” buttons. Make sure the handle is located in “Lock”.

 


When top cover does not close perfectly

Do not try to close the top cover by force. It may damage your cooker and cause problems.




1. Make sure the inner pot is place correctly inside the main body.
2. To close the top cover turn the handle to unlock shown in the picture on the right. (Make sure to turn the handle to "unlock".)




3. If there is excess steam inside the inner pot, it may be difficult to lock the handle. Cautiously pull up the pressure weight and allow the excess steam to release. Then try to turn the handle again.

※ Pictures may look different from the actual product

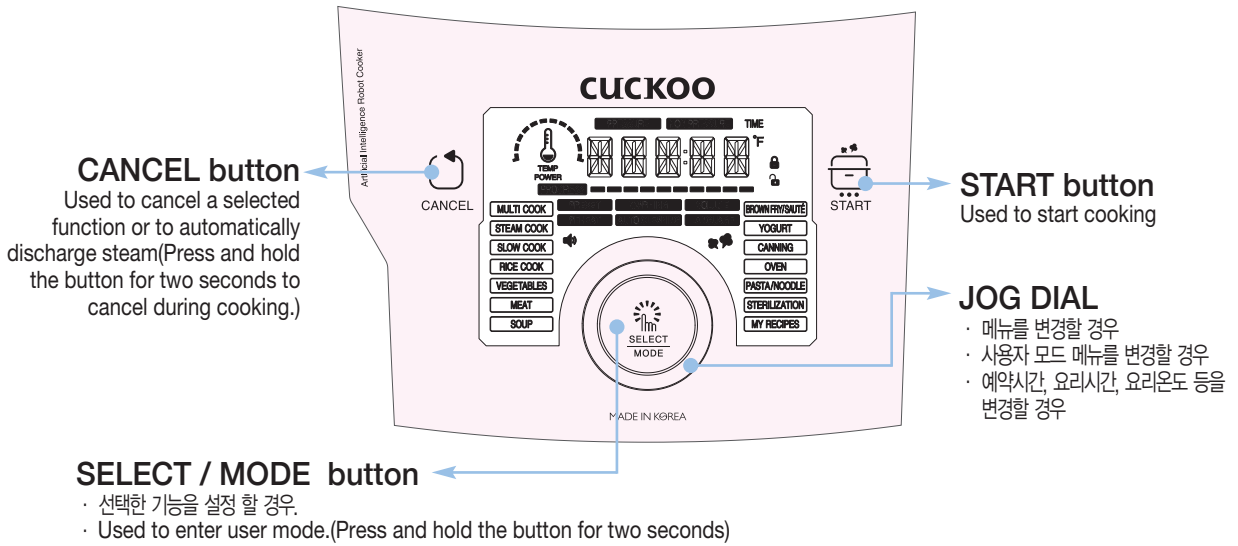

※ Pictures may look different from the actual product

- ※ When the product is plugged in and no operation is being conducted, the product is in Standby Mode. The in screen image showing on the right indicates Standby mode. (The options of the Standby mode display and presence of the voice are different according to user setting.)
- ※ When operating functions, press the CANCEL button to enter the Standby mode.
- ※ Press the button until you hear the buzzer sound. The design of the plate may differ in reality.

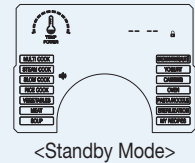

Error Inspection Function of Display Panel

For any incorrect use or when the product is not properly working, the Display Panel will display the below signs to alert you. If a sign keeps showing even in normal conditions or after proper action has been taken, please contact our customer service center.



This appears when the Inner Pot is not mounted.



This indicates that the Temperature Sensor is malfunctioning.
Contact our customer service center.



This appears when you press the COOK or PRESET button without completely turning the Cover Handle. Completely turn the Cover Handle to “” (Lock).



This appears when the Cover Handle is not turned to “” (Open) in the Keep Warm mode after cooking is done and you press the COOK or the PRESET button again after entering into Standby mode. This function is to check the operation of the Cover Fastening Sensor. Turn the Cover Handle to “” (Open) and then turn it to “” (Lock). If the problem persists, contact our customer service center.



This indicates that the Environmental Sensor fails to work. Contact our customer service center.



This indicates that there is an error with the external memory of MICOM. Contact our customer service center.



This indicates that there is an error with the internal memory of MICOM. Contact our customer service center.




This appears when you boil only water continuously or there is a malfunction with the product. Contact our customer service center.


HOW TO SET FUNCTION(LANGUAGE, VOLUME, KEEP WARM TEMPERATURE)

How to Set Language

영어, 중국어, 스페인어 음성을 선택하는 기능으로 원하시는 음성설정이 가능합니다. 제품의 초기 상태는 영어음성 상태입니다.

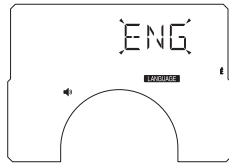

e.g.) English voice guided

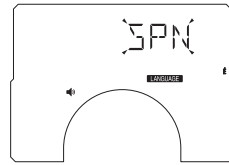


e.g.) Spanish voice guided

1. 대기상태에서 SELECT / MODE 버튼을 2초 이상 누르면 사용자 설정모드에 진입합니다.
 - ▶ CANCEL 버튼을 누르거나 아무런 버튼 입력없이 7초가 경과되면 기능이 설정되지 않고 취소되며, 대기모드로 돌아갑니다.
2. 사용자 설정모드에서 다이얼을 이용하여 "LANGUAGE" 를 선택하고, SELECT / MODE 버튼을 누르면 음성안내 언어 설정 모드로 진입합니다.
3. 음성안내 언어 설정 모드에서 다이얼을 이용하여 영어, 중국어, 스페인어중 원하시는 언어를 선택한 후 SELECT / MODE 버튼을 누르면 언어가 변경됩니다.
 - ▶ 음성안내 언어가 설정되면, 사용자 설정모드로 돌아갑니다.


How to Adjust Voice Volume (To reset the Voice function or adjust the voice volume)



e.g.) volume : 3 Step

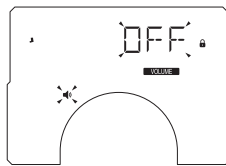

e.g.) volume off

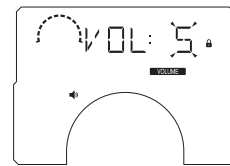

e.g.) volume : 5 Step


1. 대기상태에서 SELECT / MODE 버튼을 2초 이상 누르면 사용자 설정모드에 진입합니다.
 - ▶ CANCEL 버튼을 누르거나 아무런 버튼 입력없이 7초가 경과되면 기능이 설정되지 않고 취소되며, 대기모드로 돌아갑니다.
2. 사용자 설정모드에서 다이얼을 이용하여 "VOLUME" 를 선택하고, SELECT / MODE 버튼을 누르면 음성안내 언어 설정 모드로 진입합니다.
3. 음성 볼륨 설정 모드에서 다이얼을 이용하여 1 ~ 5 및 OFF 단계의 음성 볼륨을 설정할 수 있습니다.
4. 원하시는 음성안내 볼륨 단계를 선택한 후 SELECT / MODE 버튼을 누르면 음성안내 볼륨이 설정되고, 사용자 설정모드로 돌아갑니다.

How to Adjust Keep Warm Temperature and Automatic Keep Warm

Food may go bad or smell if the Keep Warm temperature is not proper, so adjust the Keep Warm temperature.



e.g.) 보온온도 설정 165°F

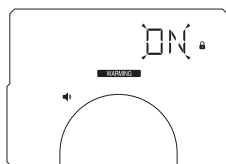


e.g.) 자동보온 설정 ON 상태


- ① 대기상태에서 SELECT / MODE 버튼을 2초 이상 누르면 사용자 설정모드에 진입합니다.
 - ▶ CANCEL 버튼을 누르거나 아무런 버튼 입력없이 7초가 경과되면 기능이 설정되지 않고 취소되며, 대기모드로 돌아갑니다.
- ② 사용자 설정모드에서 다이얼 이용하여 "WARMING" 를 선택하고, SELECT / MODE 버튼을 누르면 보온온도 설정 모드로 진입합니다.
- ③ 보온온도 설정 모드에서 다이얼을 이용하여 원하시는 보온온도를 선택한 후 SELECT / MODE 버튼을 누르면 보온온도 설정이 저장되고 자동보온 설정 모드로 진입합니다.
 - 보온 설정 가능 온도 : 153°F ~ 176°F
 - Default 보온온도 : 165°F
- ④ 자동보온 설정 모드에서 다이얼을 이용하여 ON 이나 OFF를 선택하고 SELECT / MODE 버튼을 누르면 설정 저장되고, 사용자 설정모드로 돌아갑니다.
 - (* 자동보온이란, 요리 완료 후 자동으로 보온이 진행되는것을 말합니다.)

How to Preset Cooking


- 1 뚜껑 결합 손잡이를 “**⊞**” (잠김)으로 맞춘 후 화면에 “**⊞**” 램프 표시가 뜨면 대기모드에서 SELECT/MODE 버튼을 2초간 눌러 사용자 설정모드로 진입합니다.
- 2 사용자 설정모드에서 다이얼을 이용하여 “PRESET” 을 선택하고 SELECT/MODE 버튼을 누르면 예약 설정모드로 진입합니다.
- 3 다이얼을 이용하여 원하시는 메뉴를 선택하고 SELECT/MODE 버튼을 누르면 해당 메뉴의 설정모드로 진입합니다.
▶ BROWN FRY/SAUTÉ, GABA RICE, SUPER GRAIN메뉴는 예약메뉴에서 제외됩니다.
- 4 예약 메뉴의 설정(요리시간, 요리온도, 압력/비압력 등)을 완료하고 SELECT/MODE을 누르면, 예약 시간 설정 모드로 진입합니다.
- 5 예약 시간 설정 모드에서 다이얼을 이용하여 원하시는 시간을 설정한 후 START 버튼을 누르면 예약요리가 시작됩니다.
▶ 뚜껑 결합 손잡이를 “**⊞**” (잠김)으로 맞추지 않고 START 버튼을 누르면 E01에러 표시가 뜨고 예약요리 시작이 되지 않습니다.
▶ 예약 시간 설정 후 SELECT/MODE를 누르면 설정 된 값들이 저장되고, 사용자 설정모드로 돌아옵니다.
▶ 보온 중에 예약 요리를 설정 하실 경우 CANCEL 버튼을 눌러 보온을 취소한 후 예약요리를 설정해주세요.
▶ 예약 시간은 10분 부터 13시간까지 설정이 가능합니다. (10분씩 조절 가능)
▶ 예약 설정 된 시간은 예약 취소 완료까지 남은 시간입니다.
(요리 용량 및 사용조건에 따라 완료 시간이 다소 차이가 날수 있습니다.)
▶ 예약 설정 시간을 요리시간보다 짧게 설정하여 START 버튼을 누르면 요리가 바로 시작됩니다.
▶ 예약 요리 진행 시 “:” 표시가 깜박거립니다.

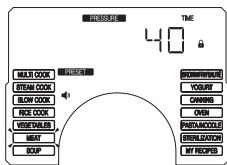

e.g) 예약 메뉴(MEAT) 선택 시

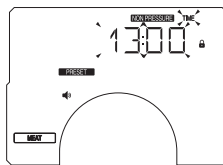

e.g) 예약 시간 선택 시

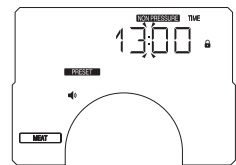

e.g) 예약 요리 진행 중

예약 요리 시 유의사항

- 1 예약 요리를 할 경우
▶ 쌀이 개봉된 지 오래되어 매우 말라버린 경우에는 충باب이 되는 수도 있습니다.
▶ 예약 요리 용량이 많거나 장시간 예약 취사를 설정하실 경우 멜라노이징(미세 밥 눌음) 현상이 증가 할 수 있습니다.
- 2 예약 설정 변경
▶ 예약 설정 (예약 메뉴, 예약 시간, 예약 메뉴온도등) 을 변경할 경우 CANCEL 버튼을 1초간 눌러 취소시킨 후 다시 설정하십시오.

COOKER SETTINGS OVERVIEW

COOKING MODE	ADJUSTABLE	요리시간 설정 범위	요리온도 설정 범위	Pressure	RECIPES
MULTI COOK	Cooking Time & Temperature & Pressure	15 ~ 90 minute	160°F ~ 250°F	Pressure or Non Pressure	
MY RECIPES					
STEAM COOK	Cooking Time & Temperature		210°F ~ 260°F	Pressure	
VEGETABLES	Cooking Time		-	Pressure	
BEAN / CHILI	Cooking Time		-	Pressure	
STERILIZATION	Time		-	Pressure	
MEAT	Cooking Time	25 ~ 90 minute	-	Pressure	
STEW	Cooking Time		-	Pressure	
OVEN	Cooking Time & Temperature	10 ~ 90 minute	230°F ~ 250°F	Non Pressure	
SOUP	Cooking Time	30 ~ 90 minute	-	Pressure	
CANNING	Cooking Time	40 minute ~ 2 hour	-	Pressure	
PASTA / NOODLE	Cooking Time	15 minute ~ 1 hour	-	Pressure	
BROWN FRY / SAUTÉ	Cooking Time & Temperature	1 minute ~ 30 minute	230°F ~ 290°F	Non Pressure	
SLOW COOK	Cooking Time & Temperature	15 minute ~ 12 hour	140°F ~ 210°F	Non Pressure	
YOGURT	Cooking Time	1 ~ 12 hour	-	Pressure	
SUPER GRAIN	불림시간	0 or 3 hour	-	Pressure	


상세 요리 레시피는
간편 요리북을 참고해 주십시오.

* All the pressure cook mode pressure range goes up to 80kPa.

* PRESET (Delay cooking timer offers up to 13:00 hour. You can preset the time when you want the multi cooker to start cooking.)
FIND MORE DEICIOUS RECIPES ON CUCKOOMULTICOOKER.COM

* Control Temperature may have difference from actual food temperature

PREPARATION BEFORE COOKING

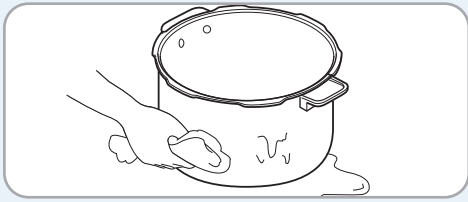

1

Wash the inner pot and wipe out excess moisture.

- ▶ Use a soft dishcloth when washing the inner pot.
- ▶ If you use a strong scrubber, the inner surface of the inner pot may peel off.
- ▶ Do not wash the inner pot with sharp utensils (fork, spoon, or chopsticks, etc).
 - The coating of the inner pot may peel off.




2

Put food in the container by using the measuring cup.

- ▶ One cup of food means the measuring cup filled with food up to its top.
(There are gradations of $\frac{1}{4}$, $\frac{1}{2}$, and $\frac{3}{4}$ on an external surface of the measuring cup.)

3

Adjust the water volume in accordance with the dish you want to prepare.

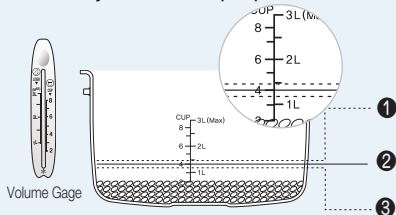

※VOLUME GAGE Only applies to ICOOK A5 SUPERIOR

- ▶ Put the inner pot on a flat surface, and adjust the water volume by using the gradations on the inner pot.

- ▶ The liter gradations on the inner pot (ICOOK A5 PREMIUM) show the gradations for water when water is poured in.
- ▶ The liter gradations on the Volume Gage(ICOOK A5 SUPERIOR) show the gradations for water when water is poured in.
- ▶ The cup gradations on the inner pot(ICOOK A5 PREMIUM) show the gradations for water when jasmine rice and water are added together.
- ▶ The cup gradations on the Volume Gage(ICOOK A5 SUPERIOR) show the gradations for water when jasmine rice and water are added together.
 - ❶ When you cook old rice or want the rice watery: Add more water than the standard.
 - ❷ In case of four portions of rice (four measuring cups of rice), pour water up to the 4-cup gradation on the inner pot. (We recommend cooking four servings or less of rice at one time)
 - ❸ When you have soaked rice enough in water or want the rice hard-boiled: Put less water than the standard.
- ▶ The quality of cooking may vary according to the type of rice, so adjust the water volume or the steaming time.

4

Please make sure to plug in the product before placing the inner pot in the main body.

Put the inner pot completely in the main body.


- ▶ If there are foreign substances on the bottom of the inner pot, this may lead to a problem in cooking or a malfunction.
- ▶ If the inner pot is not precisely put in the main body, the cover won't be able to be closed. (Put the handle of the inner pot into the groove of the main body.)



5

After closing the cover, "🔒"(lock) the cover handle.

- ▶ If the display panel shows "🔒", it means that the cover is properly locked.

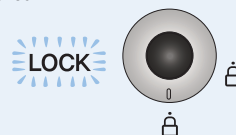

HOW TO COOK (MANUAL COOK MODE)

1 뚜껑 결합 손잡이를 “” (잠김)으로 맞춘 후 화면에 “” 램프 표시가 뜨면 다이얼을 돌려 원하시는 메뉴를 선택하십시오.

▶ 분리형 커버가 장착되어 있는지 확인하여 주십시오

▶ Before cooking, ensure that the Pressure Weight is properly aligned horizontally.

▶ 다이얼을 왼쪽으로 돌릴때마다 MULTI COOK → STEAM COOK → SLOW COOK → RICE COOK → VEGETABLES → MEAT → SOUP → MY RECIPES → STERILIZATION → PASTA/NOODLE → OVEN → CANNING → YOUGURT → BROWN FRY/SAUTÉ 순서대로 연속으로 변합니다.


▶ If cooking is completed once, the menu is remembered. So if you use the same menu repeatedly, you don't need to select the menu.

▶ Do not fill 2/3 or more of the Inner Pot with cooked food or liquid food such as meat broth and soup.

▶ Do not fill two-thirds or more of the Inner Pot with dry food such as rice and beans

▶ Do not fill 2/3 or more of the Inner Pot with food.

※ Do not put excess food in the Inner Pot that goes over its maximum capacity.

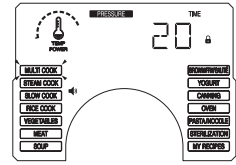

e.g.) When MULTI COOK is selected


▶ The voice says “MULTI COOK, Press [Select] button”.

2 요리시간 설정모드 진입 후 다이얼을 돌려 원하시는 요리시간을 선택하십시오.

▶ 원하시는 메뉴 선택 후 [SELECT/MODE] 버튼을 누르면 요리시간 설정모드로 진입합니다.

▶ RICE COOK 메뉴는 자동요리라서 요리시간 설정모드가 없습니다.

▶ 단, SUPER GRAIN 메뉴의 경우 불림 시간 설정모드가 있습니다.

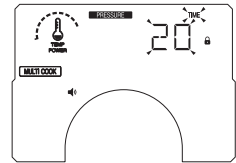

e.g.) MULTI COOK 요리시간 설정시

3 요리온도 설정모드 진입 후 다이얼을 돌려 원하시는 요리온도를 선택하십시오.

▶ 원하시는 요리시간 선택 후 [SELECT/MODE] 버튼을 누르면 요리온도 설정모드로 진입합니다.

▶ 요리온도 조절 가능 메뉴 : MULTI COOK, STEAM COOK, SLOW COOK, BROWN FRY/SAUTÉ, OVEN, MY RECIPES


4 압력/비압력 설정모드 진입 후 다이얼을 돌려 압력 이나 비압력을 선택하십시오.

▶ 원하시는 요리온도 선택 후 [SELECT/MODE] 버튼을 누르면 압력/비압력 설정모드로 진입합니다.


▶ 압력/비압력 조절 가능 메뉴 : MULTI COOK, MY RECIPES

5 Press the START button to start cooking

▶ Before cooking, always turn the Cover Handle to “” (Lock). Then, Press the COOK

▶ If you press the COOK button without turning the Cover Handle to “” (Lock), “E01 ” appears with a warning sound and the voice saying “Turn the handle to the lock position”, and cooking will not commence.

▶ The “” lamp is blinked on during cooking.

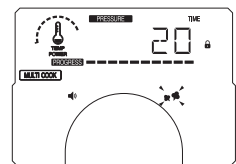

e.g.) MULTI COOK 요리중

6 Cooking Completed


▶ When the cooking ends, an ending alarm rings, and the Keep Warm function begins with the voice saying “Cooking has been completed”.

▶ If you don't want the Keep Warm function, press the CANCEL button to cancel the Keep Warm function.

▶ If the Cover Handle won't turn smoothly, cautiously bend the Pressure Weight to completely discharge the inside steam. Then, turn the Cover Handle again.

▶ Do not press the CANCEL button during cooking. Cooking will be canceled.

▶ 요리 시간, 요리 온도 설정이 가능한 메뉴는 요리 중 SELECT/MODE 버튼을 2초간 누르면 요리시간 설정모드, 요리온도 설정모드로 진입하여 요리중에도 변경 가능합니다. (요리시간, 요리온도 설정가능 메뉴 : 20쪽 참고)

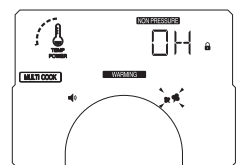

e.g.) MULTI COOK 완료 후 자동보온 상태

HOW TO COOK (AUTO COOK MODE, RICE COOK)

1 뚜껑 결합 손잡이를 “**△**”(잠김)으로 맞춘 후 화면에 “**🔒**”램프 표시가 뜨면 다이얼을 돌려 RICE COOK을 선택하고 SELECT/MODE 버튼을 누르시면 하위메뉴 선택이 가능합니다.

- ▶ 하위 메뉴 : WHITE RICE, GABA RICE, BROWN RICE, MULTI GRAIN, SUPER GRAIN
(WHITE RICE 하위 메뉴 : STICKY RICE, SUSHI RICE, GENERAL RICE)
- ▶ 하위메뉴 이름은 화면 오른쪽에서 왼쪽으로 이동하면서 표시됩니다.

2 원하시는 RICE COOK 메뉴를 선택한 후 START 버튼을 눌러 취사를 시작합니다.

3 뜸들이기

- ▶ 뜸 진행부터는 “Steaming is starting” 하는 음성과 함께 표시부에 남은 취사시간을 표시합니다.
메뉴에 따라 남은 시간은 차이가 있습니다.
- ▶ 뜸 완료 3분 전에 증기배출 효과음(기차소리)이 나오고 “steam Release will begin” 하는 음성과 함께 증기가 자동배출되므로 놀라거나 화상을 입지 않도록 주의하십시오.

4 Cooking Completed (22page 6항 참조)

RICE COOK 메뉴별 물량 및 취사시간								
Type \ Menu	STICKY RICE	SUSHI RICE	GENERAL RICE	GABA RICE	BROWN RICE	MULTI GRAIN	SUPER GRAIN	AUTO CLEANING
Cooking Capacity	2 servings~ 10 servings	2 servings~ 8 servings	2 servings~ 6 servings	2 servings~ 6 servings	2 servings~ 6 servings	2 servings~ 8 servings	2 servings~ 8 servings	-
Water Quantity (Grain:Water ratios)	1: 1.3~1.4 (단립미) 1: 1.4~1.5 (장립미)	1: 1.3~1.5 (단립미) 1: 1.4~1.6 (장립미)	1: 1.4~1.5 (단립미) 1: 1.5~1.6 (장립미)	1: 1.5~1.6	1: 1.5~1.6	1: 1.3~1.5	1: 1.3~1.5	3+1/2 CUP
Cooking Time	About 28min ~ 45min	About 29min ~ 51min	About 40min ~ 61min	About 44min ~ 63min (+GABA 3H)	About 50min ~ 70min	About 45min ~ 62min	About 34min ~ 53min	About 24min

※ Example) 쌀 300g 기준 STICKY RICE 취사시, 물량은 쌀량 대비 1.3~1.4 비율이므로, 기호에 따라 195g~210g로 넣어 취사하시면 됩니다.


※ Cooking time by menus may vary to some degree depending on the using environment of the product.

※ 취사 관련 주의사항은 P.21 참고하여 주십시오.

HOW TO COOK

MY RECIPES

※ MY RECIPES란, MULTI COOK에서 사용자가 원하는 설정을 저장하고 사용 할 수 있는 메뉴입니다.

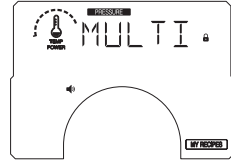


e.g.) 레시피 선택모드 진입 시

- 1 뚜껑 결합 손잡이를 “△”(잠김)으로 맞춘 후 화면에 “🔒”램프 표시가 뜨면 다이얼을 돌려 MY RECIPES를 선택하고 SELECT/MODE 버튼을 누르면 레시피 선택모드로 진입합니다.
 - ▶ 레시피 선택 모드에서 다이얼(오른쪽) 동작 시 MULTI → AAAAA → BBBBB → ... → SSSSS → MULTI 순으로 선택됩니다.
 - ▶ MULTI 레시피는 전에 MULTI COOK에서 설정하고 요리한 값이 저장됩니다.
- 2 다이얼을 이용하여 원하시는 레시피 선택 한 후 SELECT/MODE 버튼을 누르면 해당 레시피의 요리시간 설정모드로 진입합니다.
 - ▶ 설정 가능 시간 : 15분 ~ 1시간30분
- 3 다이얼을 이용하여 원하시는 요리시간을 선택 한 후 SELECT/MODE 버튼을 누르면 요리온도 설정모드로 진입합니다.
 - ▶ 설정 가능 온도 : 160°F ~ 250°C
- 4 다이얼을 이용하여 원하시는 요리온도를 선택 한 후 SELECT/MODE 버튼을 누르면 압력, 비압력 설정모드로 진입합니다.
- 5 다이얼을 이용하여 압력/비압력을 선택한 후 SELECT/MODE 버튼을 누르면 레시피 이름 설정모드로 진입합니다.
 - ▶ 레시피 이름 설정모드에서 다이얼을 돌리면 한 문자씩 선택가능하며, 원하시는 문자를 선택하고 SELECT/MODE 버튼을 누르면 알파벳 및 숫자, “_” 선택모드로 진입합니다.
 - ▶ 다이얼을 돌려 알파벳 및 숫자, “_” 표시를 선택한 후 SELECT/MODE 버튼을 누르면 설정이 저장되고 문자 선택모드로 돌아갑니다.
 - ▶ 원하시는 레시피 이름을 설정한 후 다이얼을 돌려 전체 레시피가 점멸 할 때 SELECT/MODE 버튼을 누르면 레시피 이름이 저장되고 레시피 선택모드로 돌아갑니다.
 - ▶ MULTI 레시피에 레시피 이름을 바꿔서 저장 시 다음 번지 저장공간에 저장됩니다. (MULTI 레시피는 이름 변경 안됨)



e.g.) AAAA레시피에서 레시피이름 설정모드 진입 시

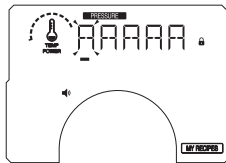


e.g.) 레시피 이름 설정모드에서 다이얼을 돌리면 한 문자가 점멸함



e.g.) 알파벳 및 숫자, “_” 선택모드 진입시


- 6 레시피를 삭제 할 때에는 문자 선택 모드(한 문자가 점멸)에서 SELECT/MODE 버튼을 3초 이상 누르면 DEL과 레시피 이름이 번갈아 표시 됩니다.
 - ▶ DEL과 레시피 이름이 번갈아 표시되는 상태에서 SELECT/MODE 버튼을 누르면 레시피가 삭제됩니다.
 - ▶ DEL과 레시피 이름이 번갈아 표시되는 상태에서 CANCEL 버튼을 누르면 삭제 없이 대기 상태로 돌아옵니다.

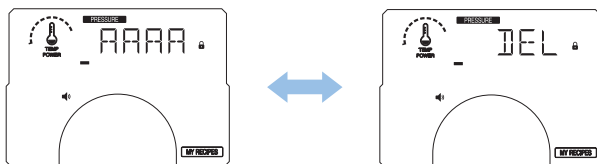

e.g) 레시피 삭제 모드 진입 시

When you serve your meal

▶ If you want to serve your meal during the Keep Warm mode and want the food hot, press the KEEP WARM / REHEAT button, and then the Keep Warm / Reheat function begins with the voice saying “REHEATING is starting”. Reheating will conclude in 10 minutes.

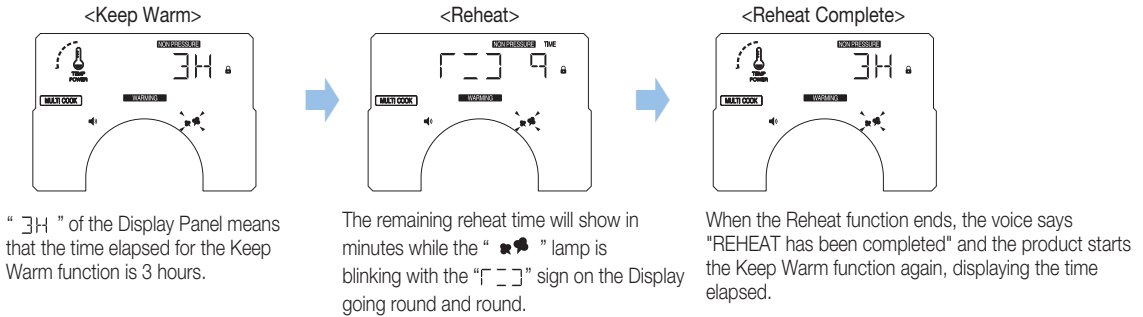

- ▶ If you use the Reheat function too often, the food may burn or become dry.
- ▶ 보온중에 SELECT/MODE 버튼을 누르면 보온온도 설정모드로 진입하여 보온온도 설정이 가능합니다.

Cautions for Keeping Warm

- ▶ When you open the cover right after cooking or during the Keep Warm function, the cover may not open properly due to pressure. Always use caution when you bend back the pressure weight to completely remove the pressure before opening the cover.
- ▶ Always lock the cover handle when keeping warm or reheating food. (If not, there may be damage caused to the Cover Open button and the Keep Warm function.)
- ▶ If there is no food in the inner pot during the Keep Warm function or if you are not using the product, press the Cancel button to cancel the Keep Warm function or remove the power cord from the power outlet.
- ▶ Do not use the Keep Warm function with a rice spatula left in the inner pot. In particular, a wooden spatula may generate germs and odors.

When it smells during The Keep Warm mode

- ▶ Clean the product often. In particular, if the Cover is not cleaned completely, germs may grow, which can cause smell during the Keep Warm mode.
- ▶ Even if the product looks clean outside, germs may grow anywhere, which can cause smell during the Keep Warm mode. Thus, if the product smells, clean the product by using the AUTO CLEANING function. After the AUTO CLEANING function is completed, the Inner Pot must be washed completely.
- ▶ If you don't wash the Inner Pot after cooking and then use the Keep Warm function, the food may smell or stink.

Voltage Sag Protection Function?

- ▶ This product remembers its status even when a blackout occurs, so if electricity gets back again within around 2 minutes, this product will normally work again. (There may be differences according to the product.)
- ▶ If cooking is canceled because of a blackout, you need to press the COOK button again to resume cooking.
- ▶ If a blackout occurs during cooking, the cooking time is delayed for the duration of the blackout, and the status of cooking may differ to some extent according to the time of the blackout.
- ▶ If a blackout occurs The Keep Warm function and when the food becomes cold, the Keep Warm function is canceled.

PLEASE CHECK BEFORE CALLING FOR SUPPORT

▼ When there is a malfunction with the product, check the following matters before contacting our customer service center.

Problem	Checklist	Recommended Actions
When food is not cooked	<ul style="list-style-type: none"> • Did you press the PRESSURE COOK button? • Did a blackout occur during cooking? 	<ul style="list-style-type: none"> • After selecting the desired menu, always press the PRESSURE COOK button once to check if “E 03” appears in the Display Panel. • Refer to page 24 for the Voltage Sap Protection function.
When beans (mixed rice/brown rice) are half-cooked	<ul style="list-style-type: none"> • Are the beans (mixed rice/brown rice) too dry? 	<ul style="list-style-type: none"> • Soak the beans (mixed rice/brown rice) in water or boil them before cooking. The mixed rice may be half-cooked according to their type.
When the food is half-cooked or scorched	<ul style="list-style-type: none"> • Did you properly select the menu? • Did you precisely adjust the quantity of ingredients? • Did you open the Cover during steaming? 	<ul style="list-style-type: none"> • Properly select the desired menu. • Adjust the time and the heating level for cooking. (See pages 22 and 23.) • After the complete cooking alarm rings and the pressure is completely removed, open the Cover and blend the food.
When the food overflows during cooking	<ul style="list-style-type: none"> • Did you use a measuring cup? • Did you precisely adjust the quantity of ingredients? • Did you precisely select the menu? 	
When it smells during the Keep Warm mode	<ul style="list-style-type: none"> • Is the Cover closed completely? • Is the power cord pulled out from the socket during the Keep Warm mode? • Did you use the Keep Warm mode for 12 hours straight or longer? 	<ul style="list-style-type: none"> • Close the Cover completely. • Always keep the product plugged in during the Keep Warm mode. • Use the Keep Warm mode only for 12 hours or less.
When “E 00” appears	<ul style="list-style-type: none"> • This indicates that the Temperature Sensor fails to work properly. 	<ul style="list-style-type: none"> • Shut off the power supply, and contact our customer service center.
When the Keep Warm Time sign blinks during the Keep Warm mode	<ul style="list-style-type: none"> • Have 24 hours elapsed since the Keep Warm mode began? 	<ul style="list-style-type: none"> • After 24 hours have elapsed since the Keep Warm mode began, the Keep Warm Time sign blinks to let you know that the Keep Warm mode has been used for too long.
When “E 00” appears	<ul style="list-style-type: none"> • Did you press the PRESSURE COOK button with the Keep Warm mode canceled and the product in the Standby mode without turning the Cover Handle to “Open” after cooking is completed with the power supplied? 	<ul style="list-style-type: none"> • Turn the Cover Handle to “Open” and then turn it to “Lock”.
When the warning alarm rings during the Keep Warm mode or the Reheat function won't work during the Keep Warm mode *This only applies to ICOOK A5 PREMIUM	<ul style="list-style-type: none"> • Is the Removable Cover mounted? 	<ul style="list-style-type: none"> • Mount the Removable Cover. (See page 12.)
When cooking is not completed even in a long time and when “E 03” appears	<ul style="list-style-type: none"> • Did you use the power properly? • Did you use the proper power voltage? 	<ul style="list-style-type: none"> • This appears when there is a malfunction with the product (heater disconnection, insufficient quantity of heat, etc.) and cooking is not completed in a long time. Shut off the power supply, and contact our customer service center. • If you just put in water and heat it for a long time, it is normal that “E 03” appears. • This product is exclusively for 120V. Use the power properly.

PLEASE CHECK BEFORE CALLING FOR SUPPORT

▼ When there is a malfunction with the product, check the following matters before contacting our customer service center.

Problem	Checklist	Recommended Actions
When “ LJ ” appears when you press a button	<ul style="list-style-type: none"> Is the Inner Pot put in the product? Did you use the power properly? Did you use the proper power supply? 	<ul style="list-style-type: none"> The buttons will not work without the Inner Pot inside in the product. Put the Inner Pot inside the product. This product is exclusively for 120V. Use the power properly. use the proper power voltage.
When a button such as the PRESSURE COOK button or the PRESET button won't work and “ E01 ” appears	<ul style="list-style-type: none"> Did you turn the Cover Handle to “🔒” (Lock)? Is the Lock lamp turned on? 	<ul style="list-style-type: none"> Completely turn the Cover Handle to “🔒” (Lock). If the Cover Handle is not completely fastened, the PRESSURE COOK button and the PRESET button will not work.
When the product smells odd right after cooking or during the Keep Warm mode <small>※This only applies to ICOOK A5 PREMIUM</small>	<ul style="list-style-type: none"> Did you completely clean the product after cooking? 	<ul style="list-style-type: none"> Refer to page 12, 13 and completely clean the Removable Cover and the pressure packing before use.
When the Cover won't be closed	<ul style="list-style-type: none"> Is the Cover handle completely turned to “🔒” (Open)? Is there hot food in the Inner Pot? Is the Inner Pot completely in the Main Frame? 	<ul style="list-style-type: none"> Completely turn the Cover Handle to “🔒” (Open) and then close the Cover again. Bend the Pressure Weight, and then close the Cover. Turn the Inner Pot Handle attached to the Inner Pot to both left and right sides, and secure it on the Main Frame completely.
When “ E_P ” appears	<ul style="list-style-type: none"> This indicates that the Environmental Sensor fails to work. 	<ul style="list-style-type: none"> Shut off the power supply, and contact our customer service center.
When “ E_LF ” appears	<ul style="list-style-type: none"> This indicates that there is an error with the internal memory of MICOM. 	<ul style="list-style-type: none"> Shut off the power supply, and contact our customer service center.
When “ E_EP ” appears	<ul style="list-style-type: none"> This indicates that there is an error with the internal memory of MICOM. 	<ul style="list-style-type: none"> Shut off the power supply, and contact our customer service center.

PLEASE CHECK BEFORE CALLING FOR SUPPORT

▼ When there is a malfunction with the product, check the following matters before contacting our customer service center.

Problem	Checklist	Recommended Actions
When the Cover Handle won't "●" (Open)	<ul style="list-style-type: none"> • Did you turn the Cover Handle during cooking? • Did you turn the Cover Handle without completely discharging the steam? 	<ul style="list-style-type: none"> • The Cover will not open during cooking. Do not forcibly open the Cover. If you have to open the Cover, press and hold the CANCEL button for 2 seconds to cancel, cautiously bend the Pressure Weight to completely discharge the steam, and then open the Cover. • Cautiously Bend the Pressure Weight to completely discharge the steam, and then open the Cover.
When the Cover Handle is completely turned to "●" (Open) but the Cover won't open		<ul style="list-style-type: none"> • It is because of the pressure. • Cautiously Bend the Pressure Weight to completely discharge the steam, and then open the Cover.
When the steam is leaked through the Cover and a the product makes a whistle-like sound	<ul style="list-style-type: none"> • Are there any foreign substances (rice, etc.) on the packing? • Is the packing worn out? 	<ul style="list-style-type: none"> • Wipe out the packing with a dishcloth or a soft cloth before use. • Always keep the parts around the packing clean. • If steam is leaked, immediately press and hold the CANCEL button for 2 seconds to discharge the steam, and pull out the power cord. Then discontinue using the product, and contact our customer service center. • Use packing for 1 to 3 years according to the method or frequency of use and then replace it with a new one. If you continue to use worn-out packing, steam may be leaked out during use, and the pressure cooking won't be operational.
When the CANCEL button won't work during cooking	<ul style="list-style-type: none"> • Is the Inner Pot hot inside? 	<ul style="list-style-type: none"> • If you have to cancel during cooking and the temperature in the Inner Pot is high, you need to press and hold the CANCEL button for 2 seconds to cancel cooking for safety purposes. • If cooking is canceled, the steam is discharged through the Auto Steam Discharger, and the content may spill or splatter. Thus, please be cautious since you might get burned in your face or on your hands.