 


TV Ceiling Mount

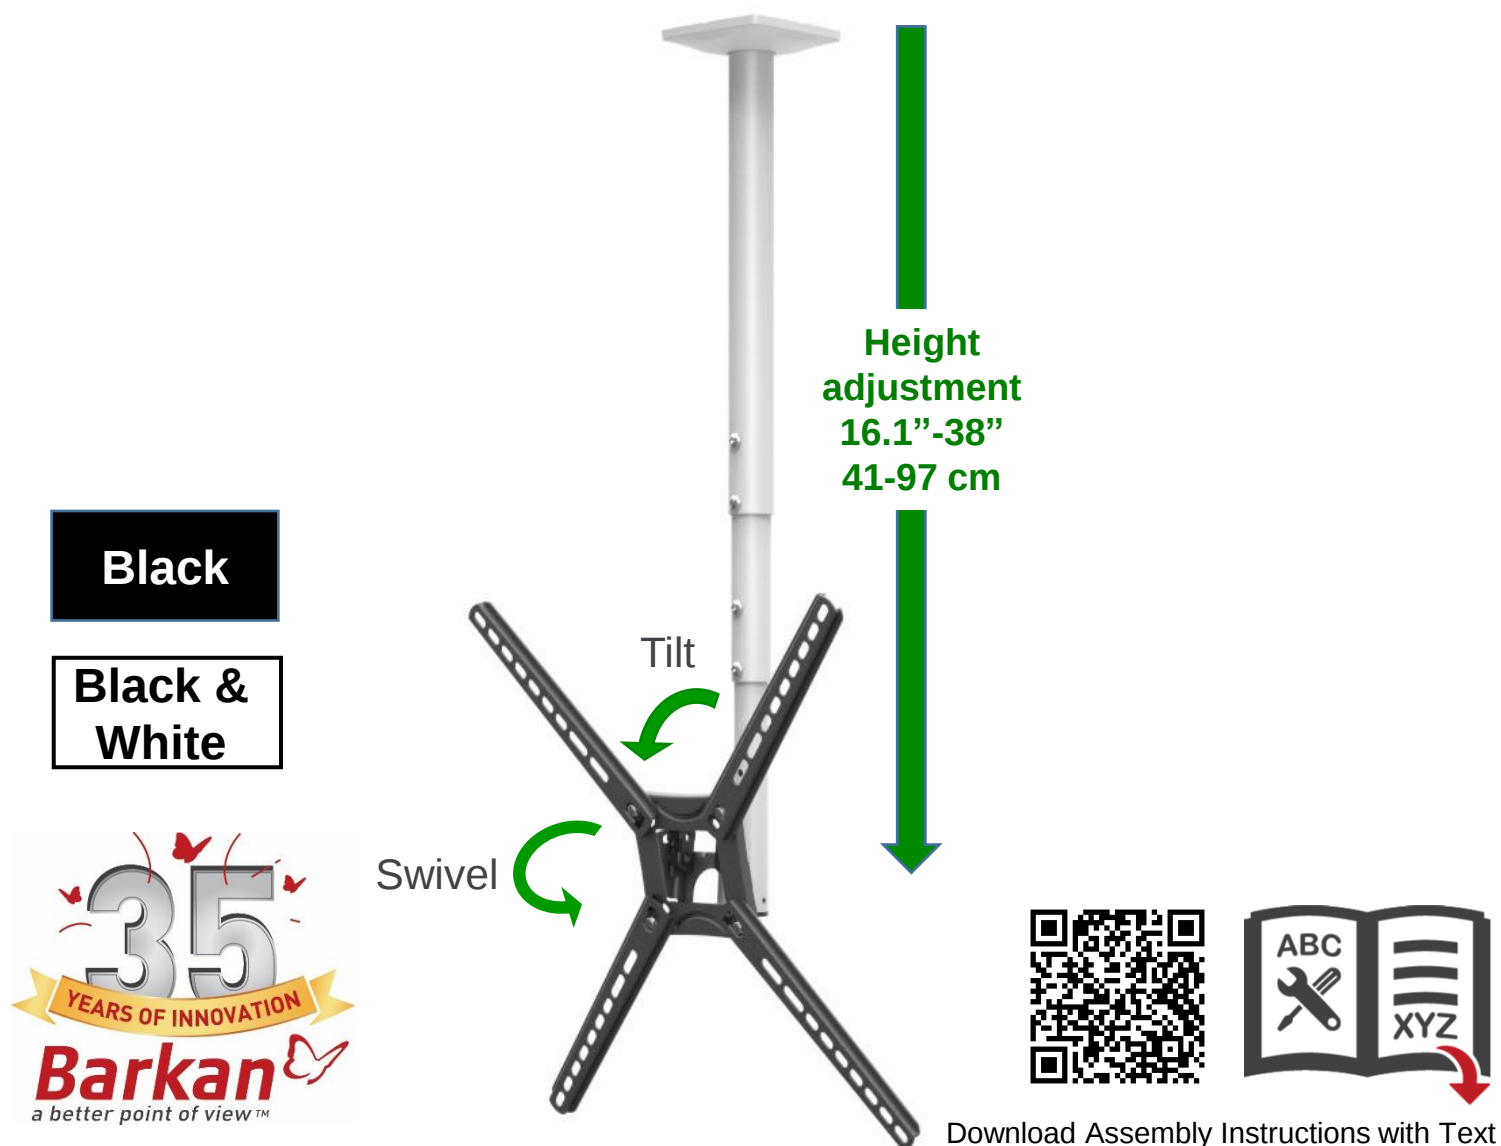

For more information: barkanmounts.com

If you are satisfied with the product, please give us a 5 stars ★★★★★ rating on the website you bought it from. If you are not satisfied please contact us at <https://www.barkanmounts.com/support> and we will solve the problem for you.

TV Weight		
US	Max	EU
88lbs		40kg

TV Size	
13"-65"	
33cm-165cm	

Also fits screens up to 77" with
400X400mm VESA connections



 
**Safety instructions and installation warnings (provided separately)
must be read in full, prior to assembly.**

A


B

C


x1

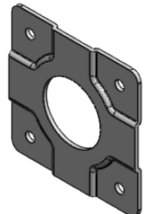D

 x1

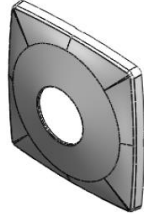E

 x1

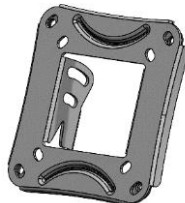F

x1

G

 
x4

Z6

x8

Z7


x4

Z8

x4

Y1

 
x4

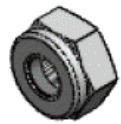Y2

x4

W1

 x4

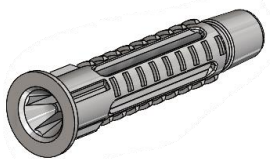
W2

x4


W3

 x4




P1

 x4

P2

 
x2

P3

x2


#	M	L mm	L inch	pcs
Z1	4	20	3/4	4
Z2	6	16	5/8	4
Z3	6	25	1	4
Z4	8	25	1	4
Z5	8	45	1 3/4	4

 Required Tools

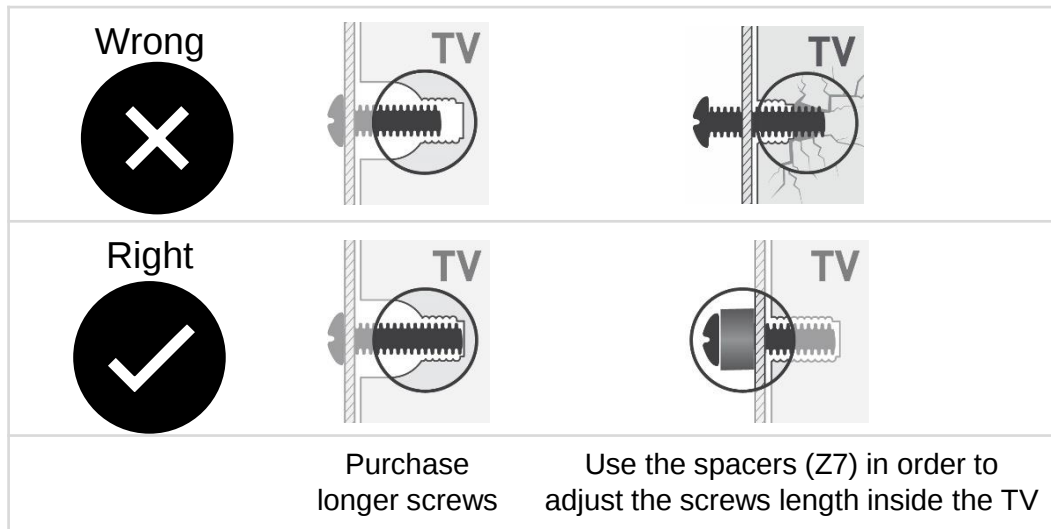


1

 Continue according to your TV mounting hole pattern

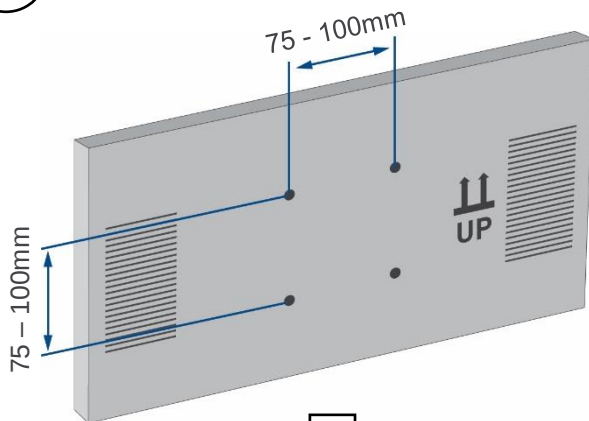


1a

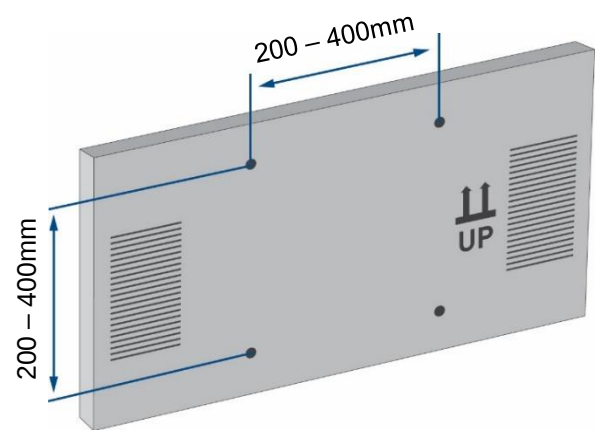 

1b

 
1a 75x75 mm – 100X100 mm hole pattern

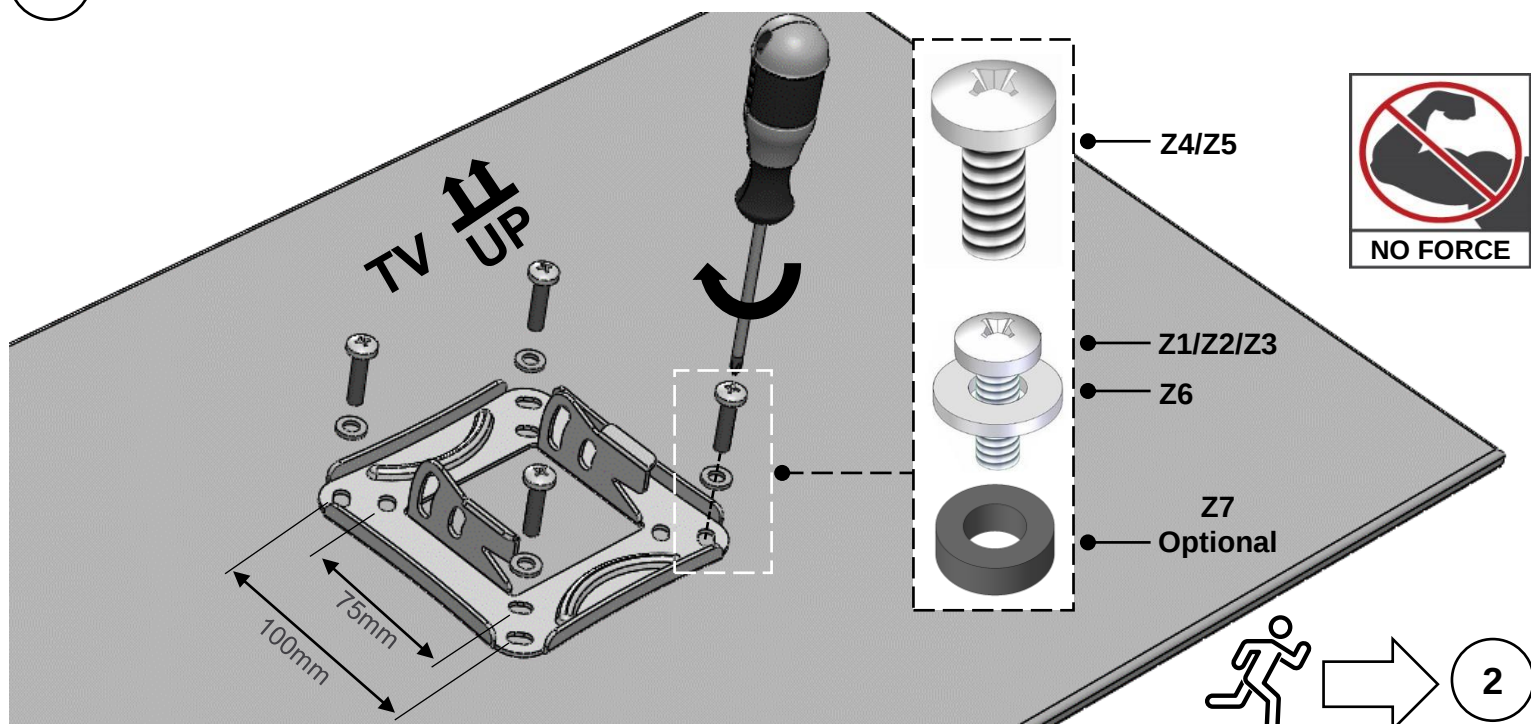

1b Hole pattern 100x200 mm up to 400x400 mm:

Disassemble the screws, connect the 4 Adaptors to the TV Plate and reassemble the screws.


 
A

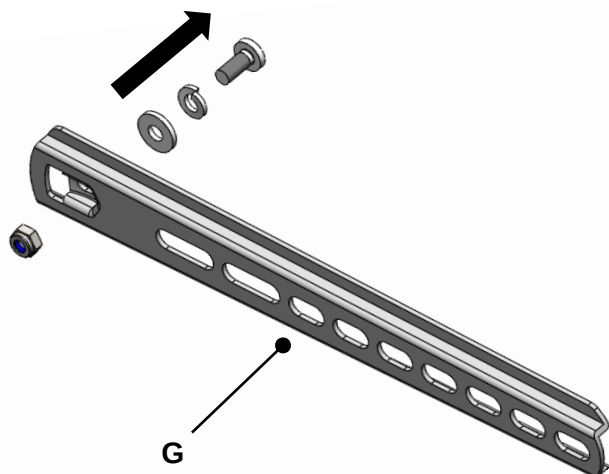



B

Flat TV

  
Curved TV

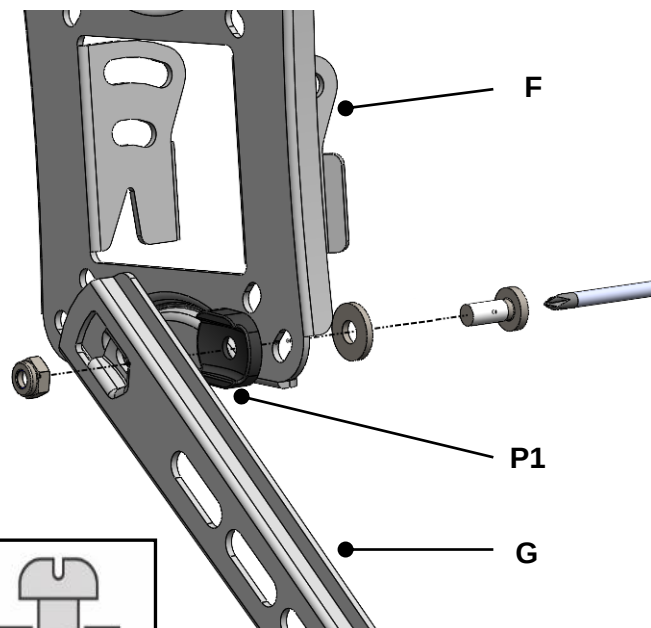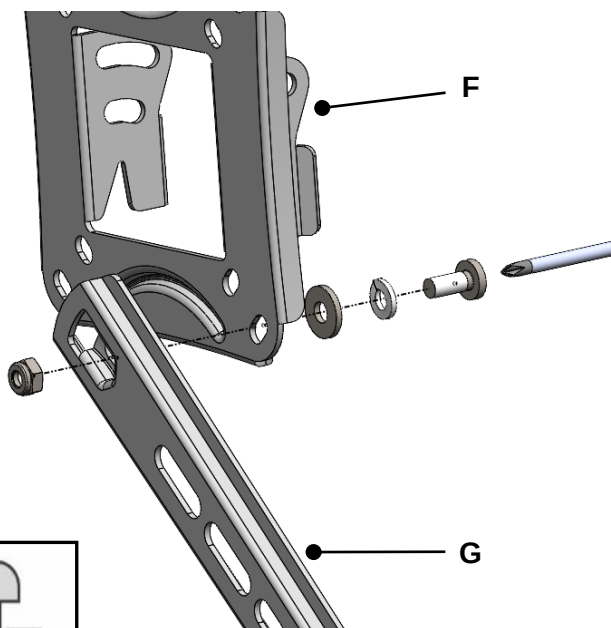


PARTIAL
TIGHTENING

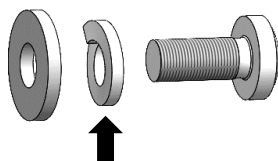  

PARTIAL
TIGHTENING

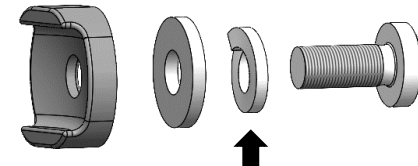 


 Position the Adaptors according to your TV's hole pattern.

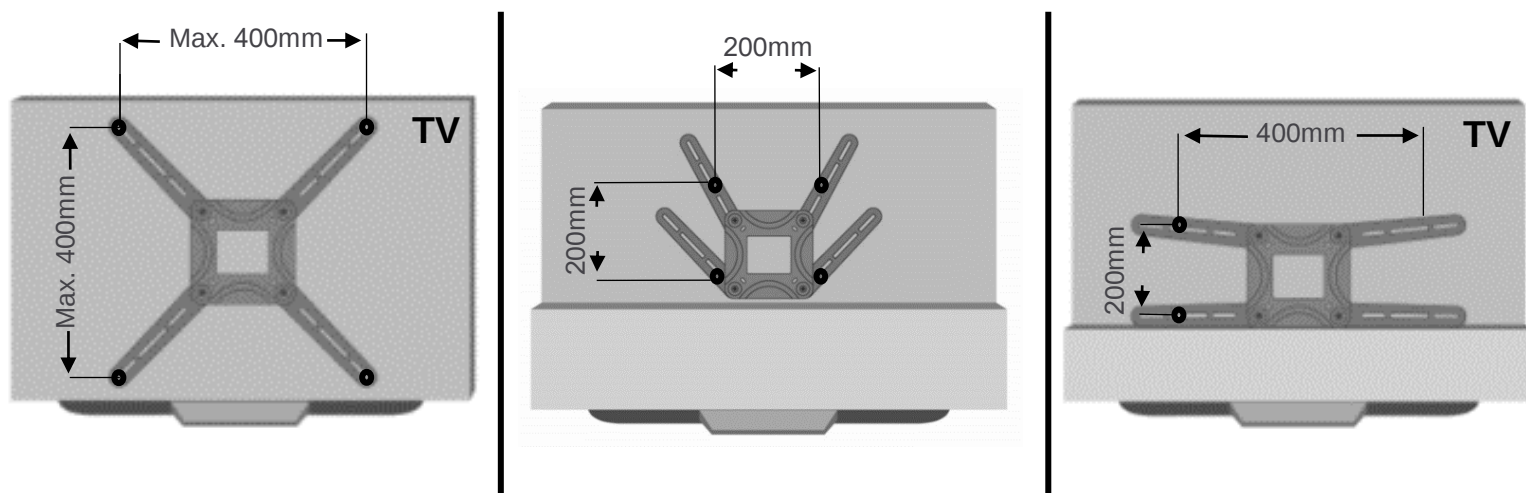




For more positioning options turn to the last page.

 1c Connect the TV Plate with the Adaptors to the TV in all 4 connection holes.

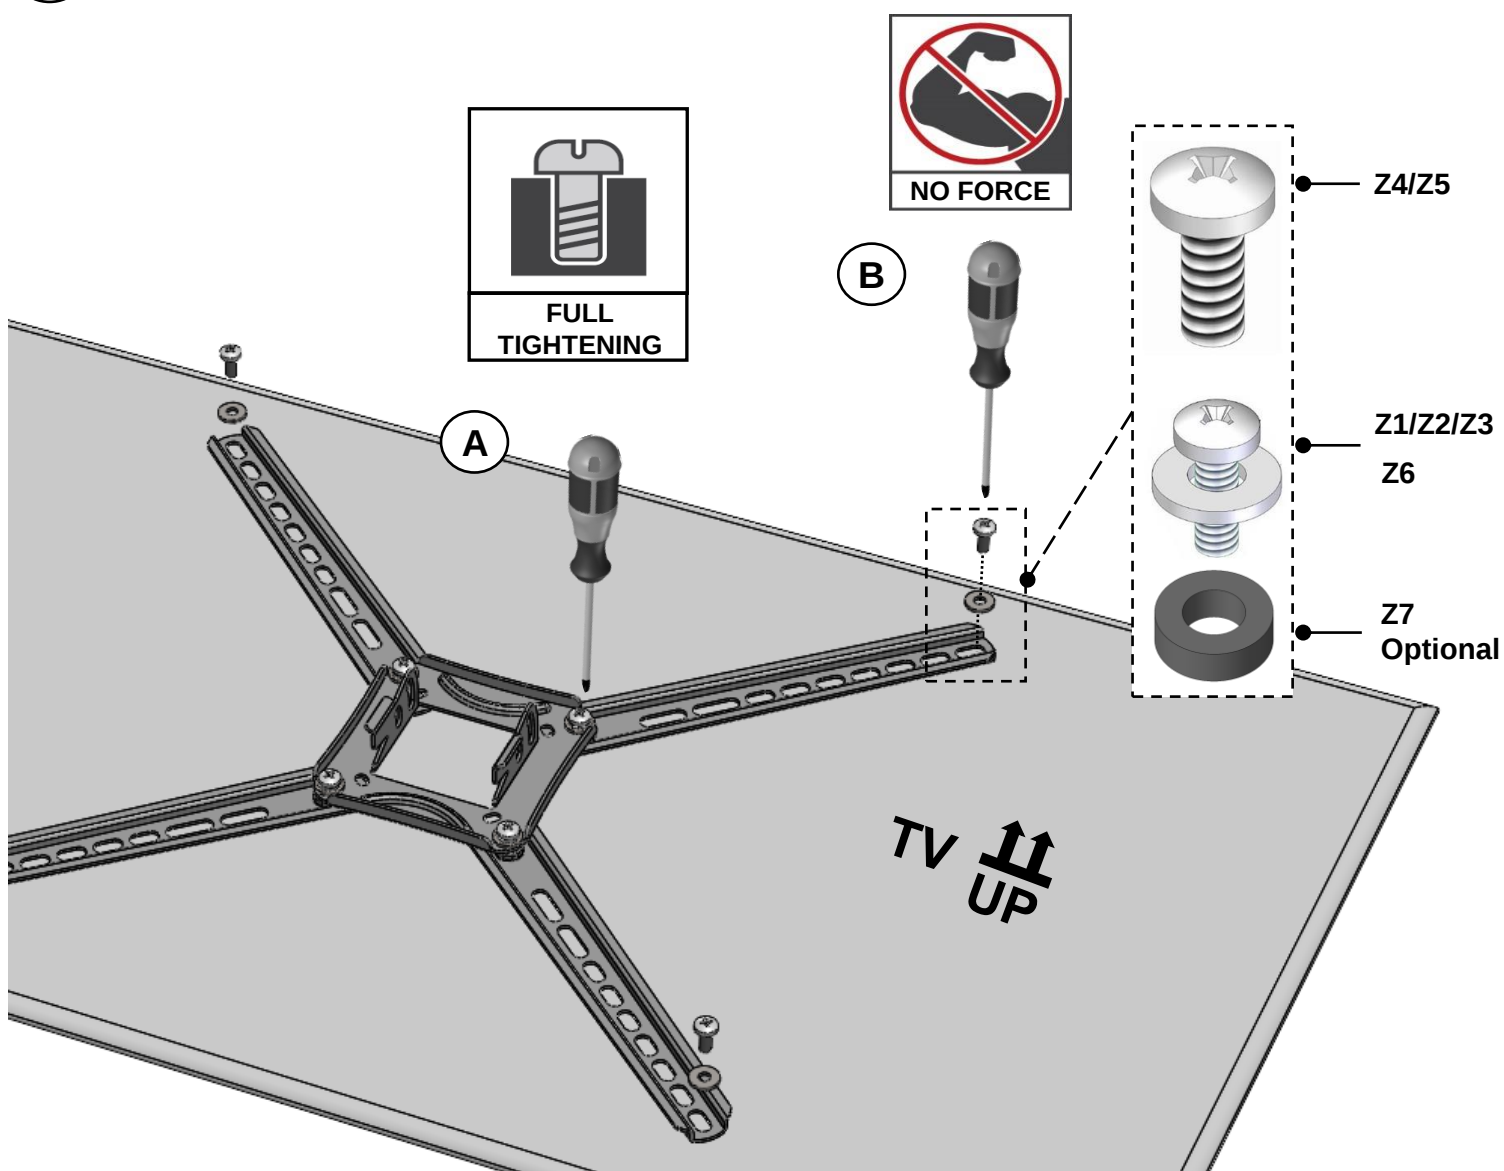


2

   Follow the steps according to your ceiling type

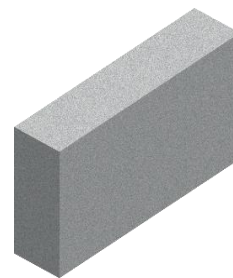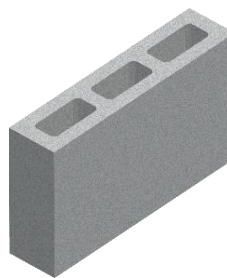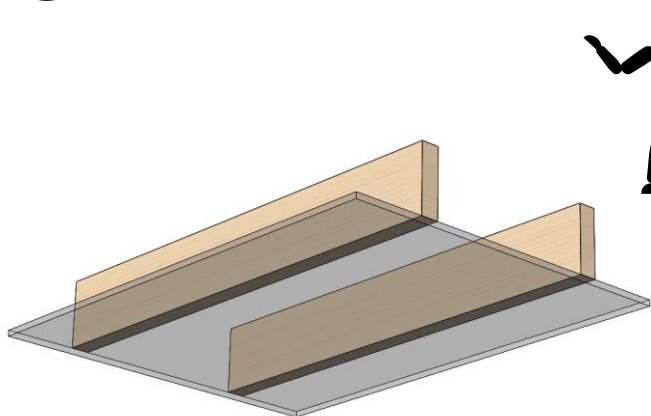

 
2a Make sure all holes are drilled inside the joist/ stud

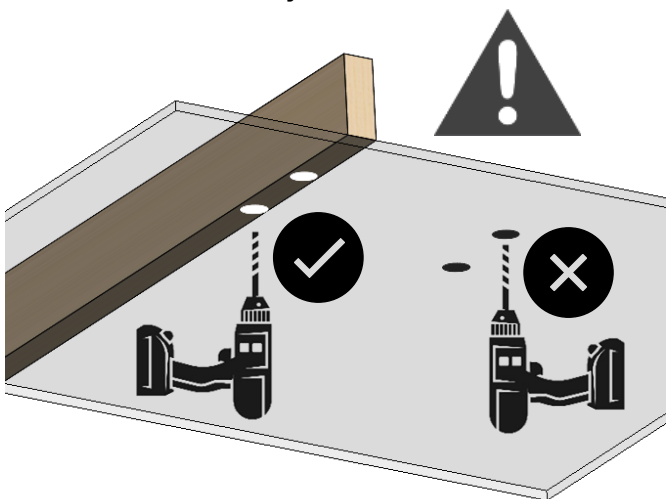

2b




 Make sure there are no electrical/water lines in the ceiling before drilling and then drill according to the markings

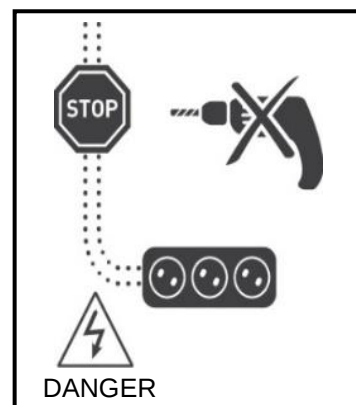







Mark the holes on the ceiling according to the required position

 3a

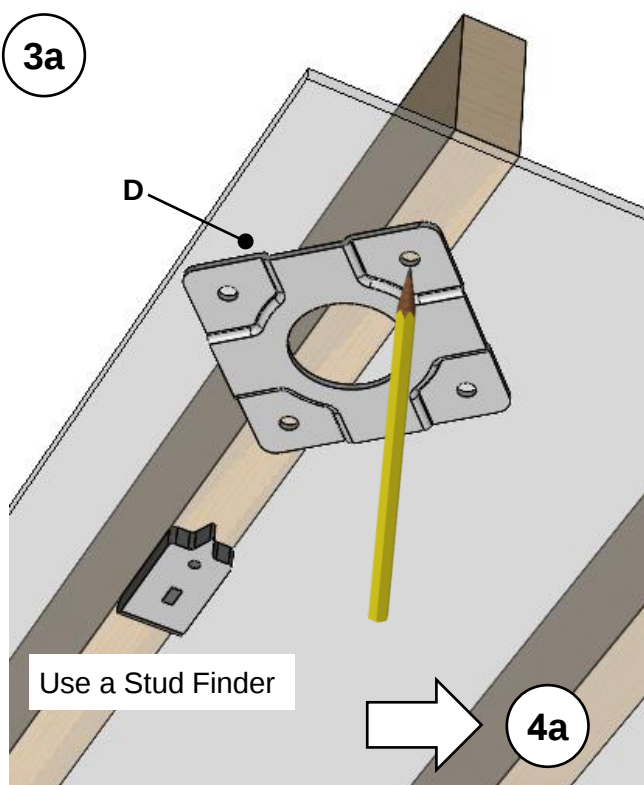



3b

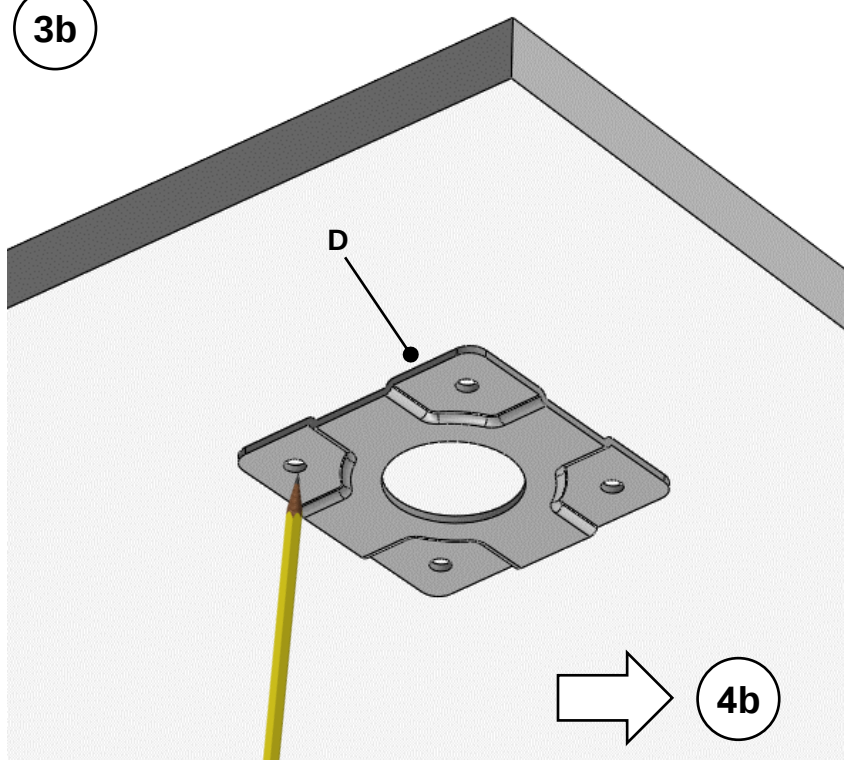 

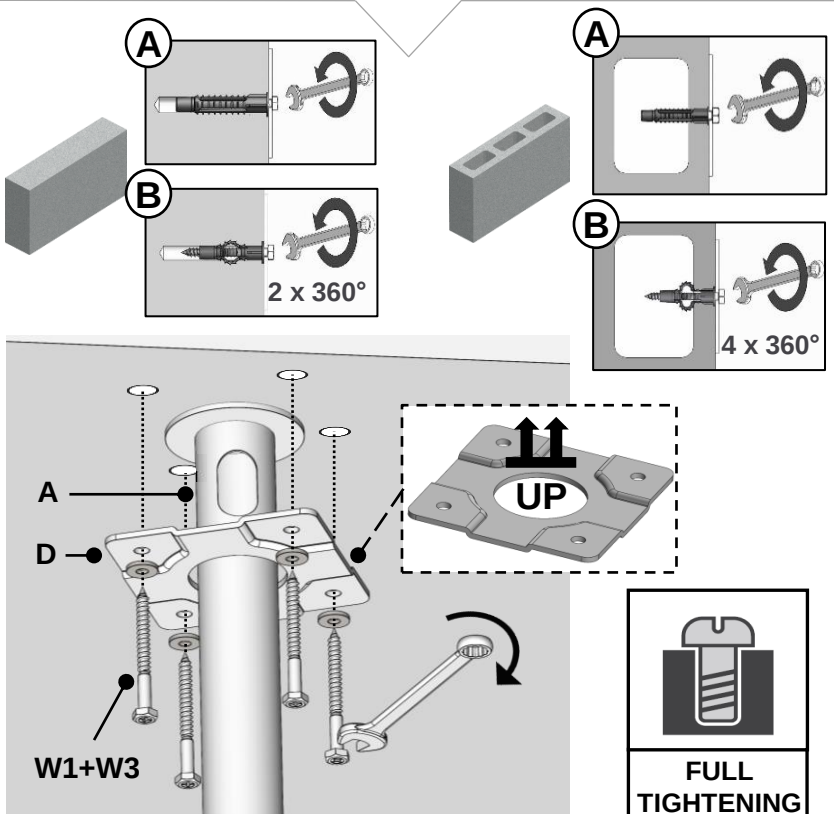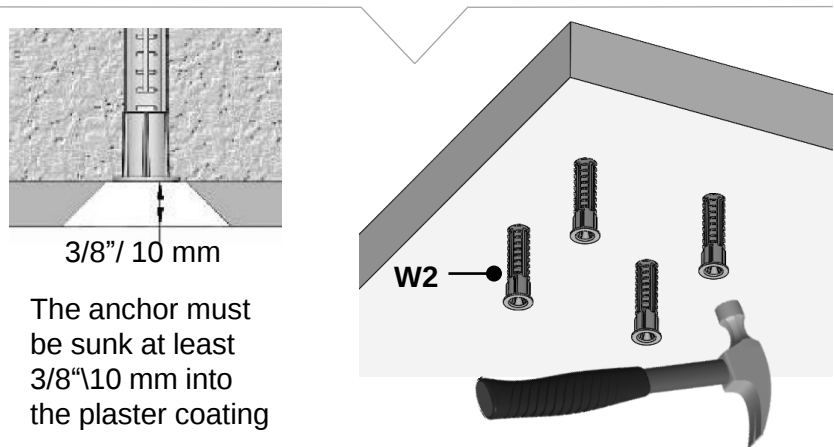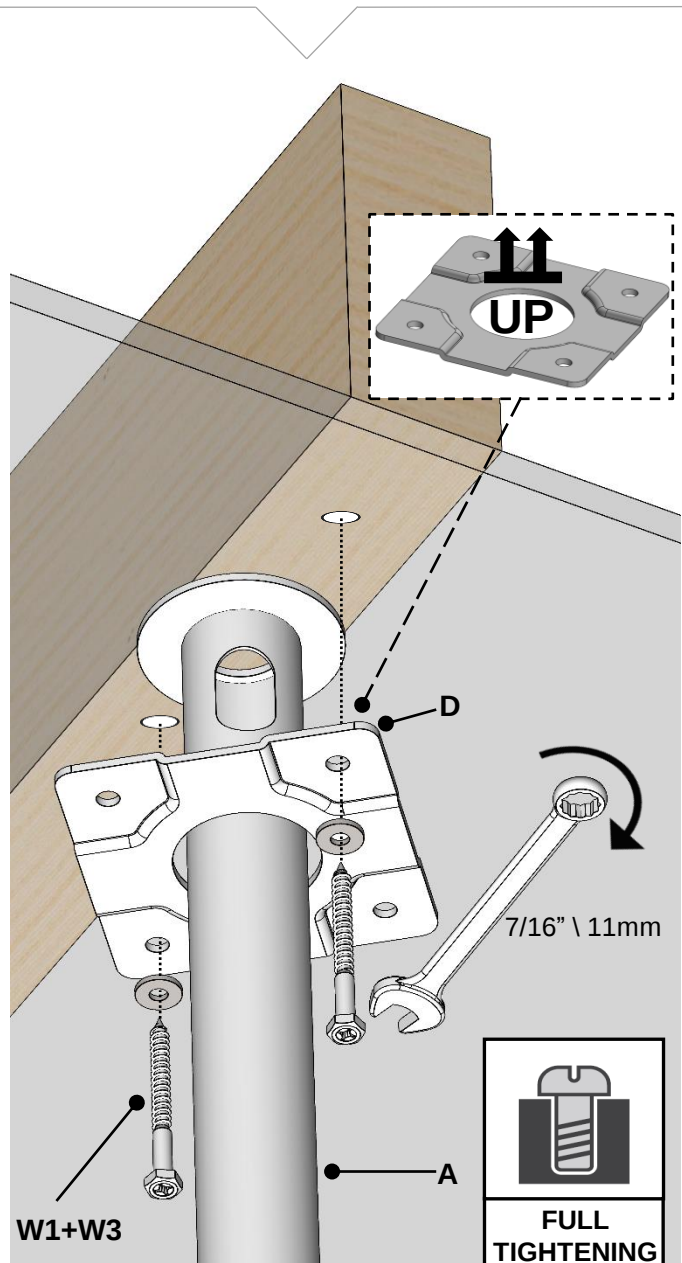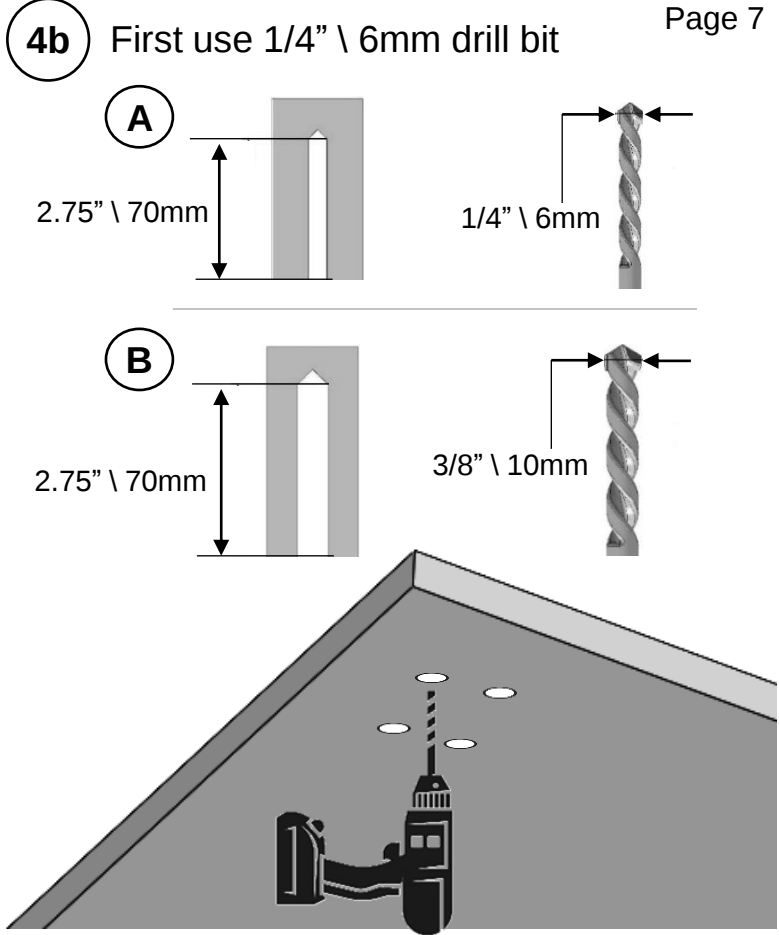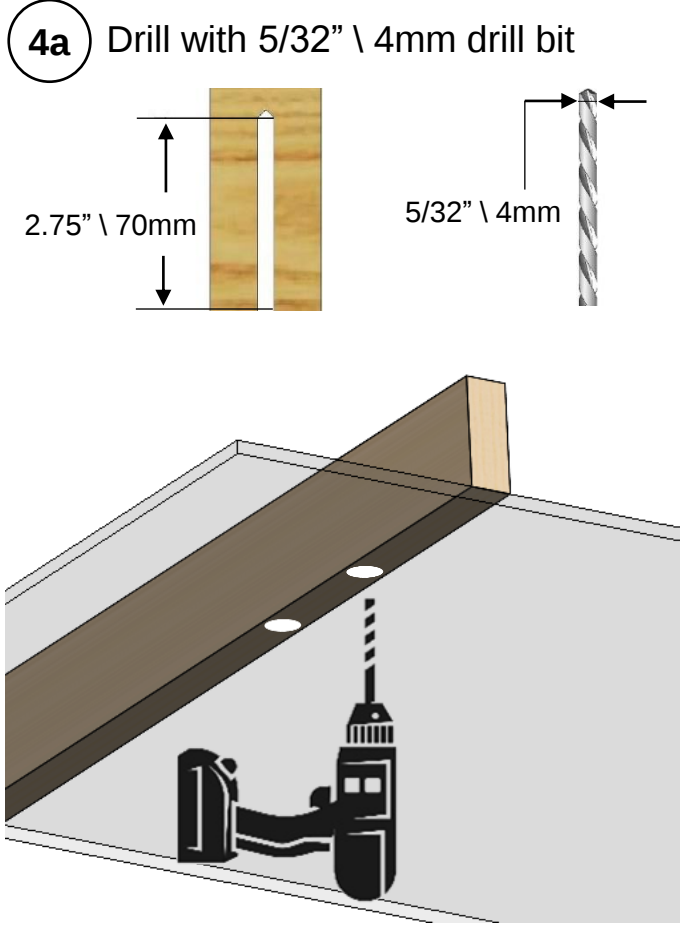     


5 Weight test

  Apply force on the upper pipe and make sure it is well connected

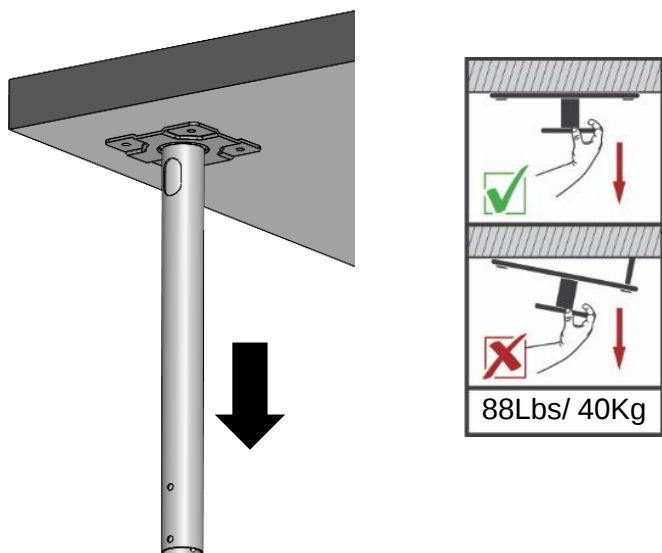
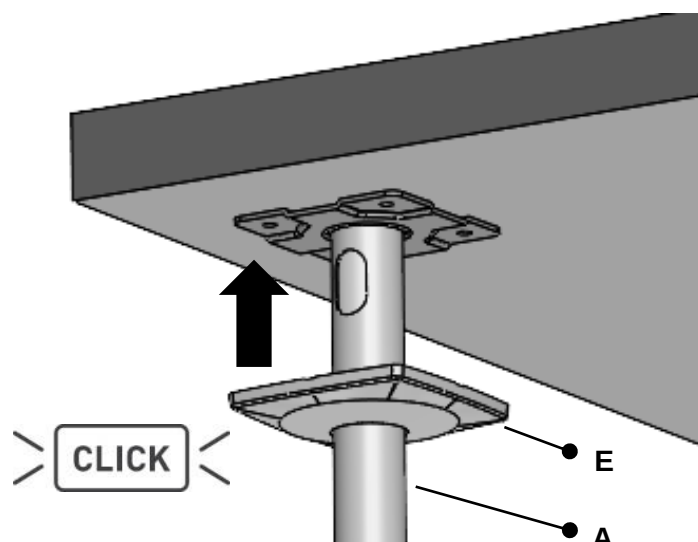
**6** Assemble the ceiling plate plastic cover**7** Connect the three tubes according to the desired length.

Each connection is made with two Y1 screws and Y2 nuts.

 
Important – You Must use all three tubes, you can't omit the middle tube B. You may insert all the middle tube B into the upper tube A if needed.

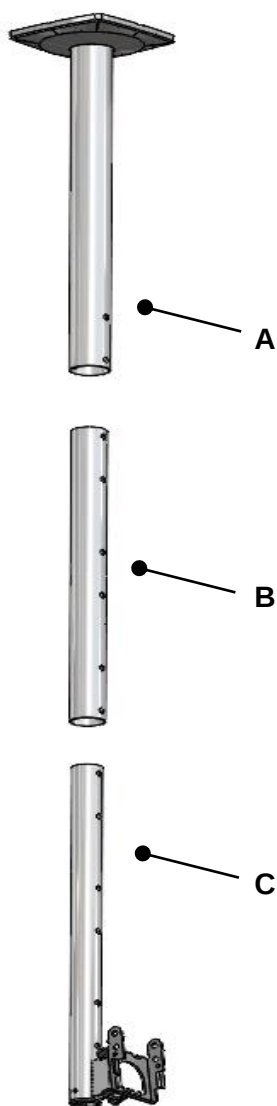A**5 optional height levels:**


Level	Height (inch)	Height (cm)
1	16.1"	41
2	21"	53.3
3	27"	68.6
4	32"	81.2
5	38"	96.5

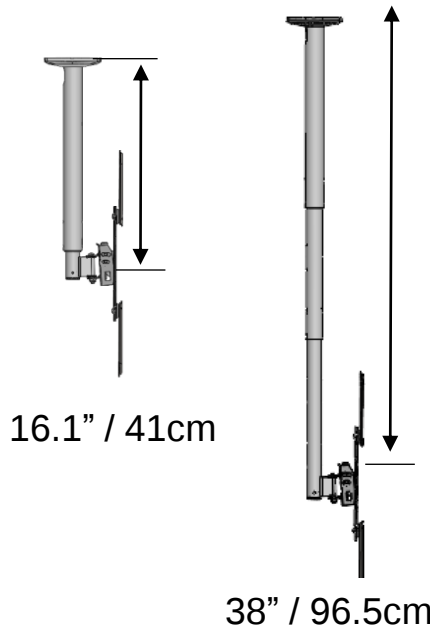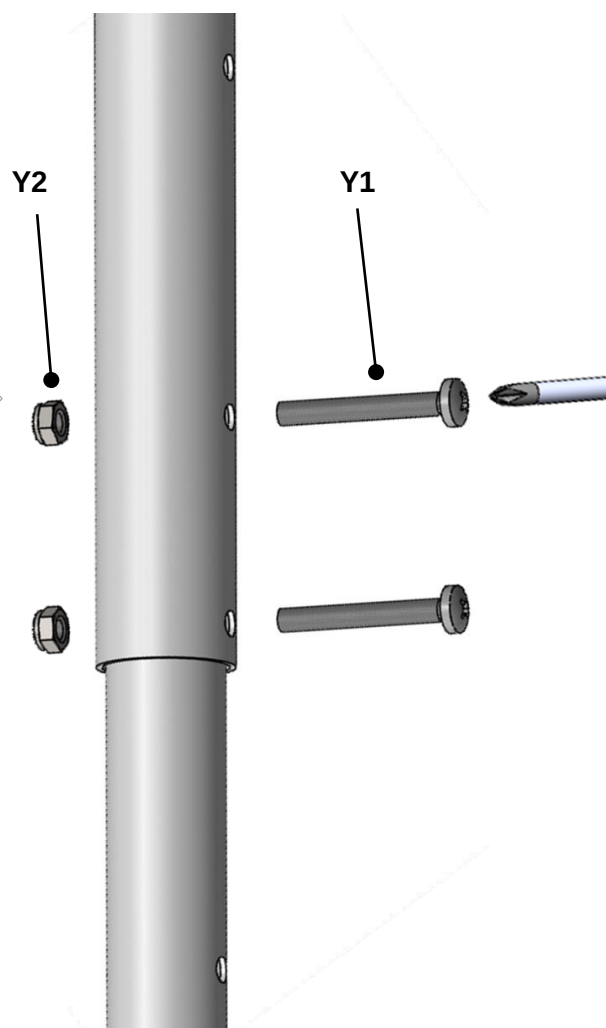  Minimum**Maximum****B**


 
- 8** Pass the cables through the pipes.

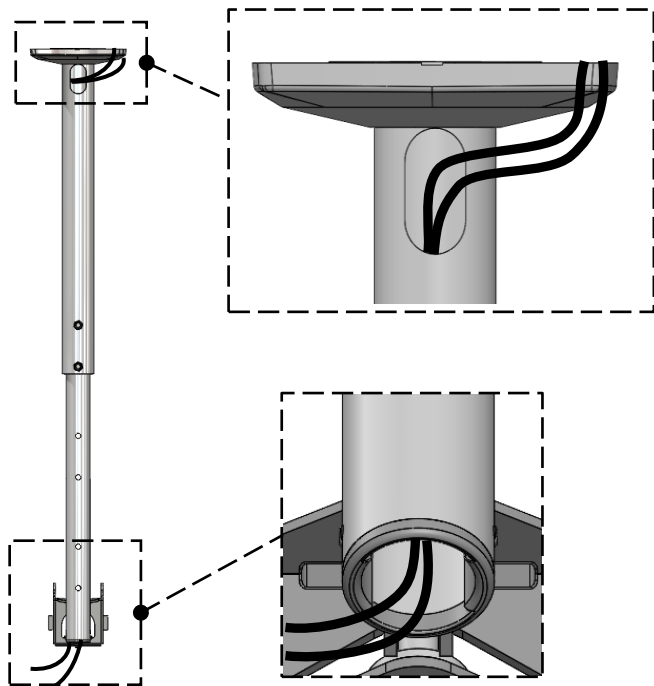

 
- 9** Place two nuts (Z8) in the nut housing (P2).

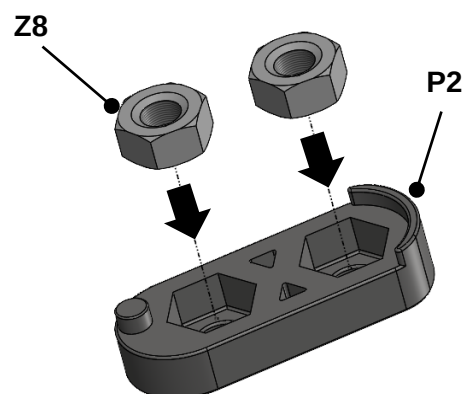

 
 
- 10** Attach the nut-housings (P2). Make sure that the tab is inserted into the slot.

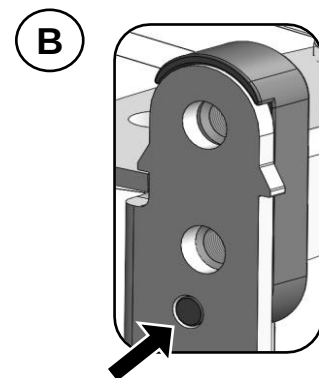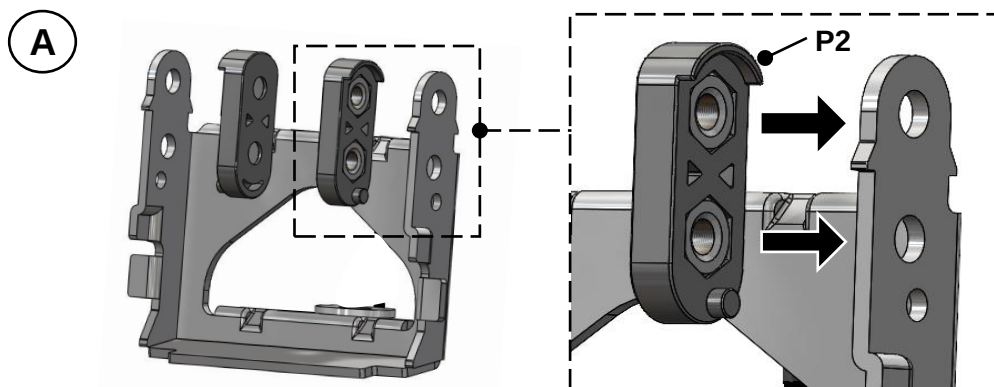


 
- 11** Push parts P3 down on the nut-housings (P2). The upside down "T" must pass the protruding tooth (shown below).

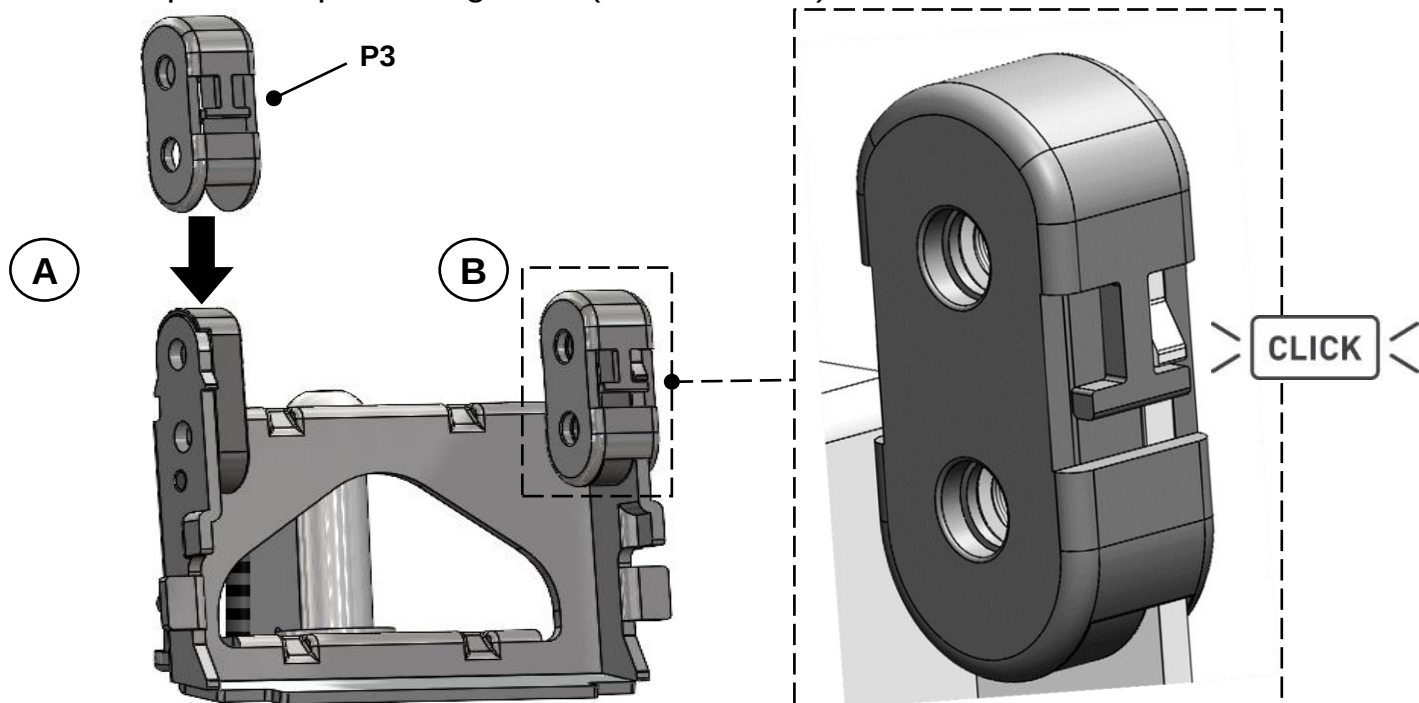

  
12a Connect the TV with the TV plate to the bracket

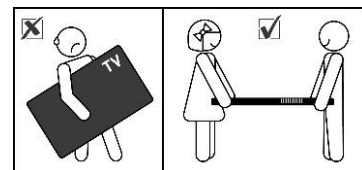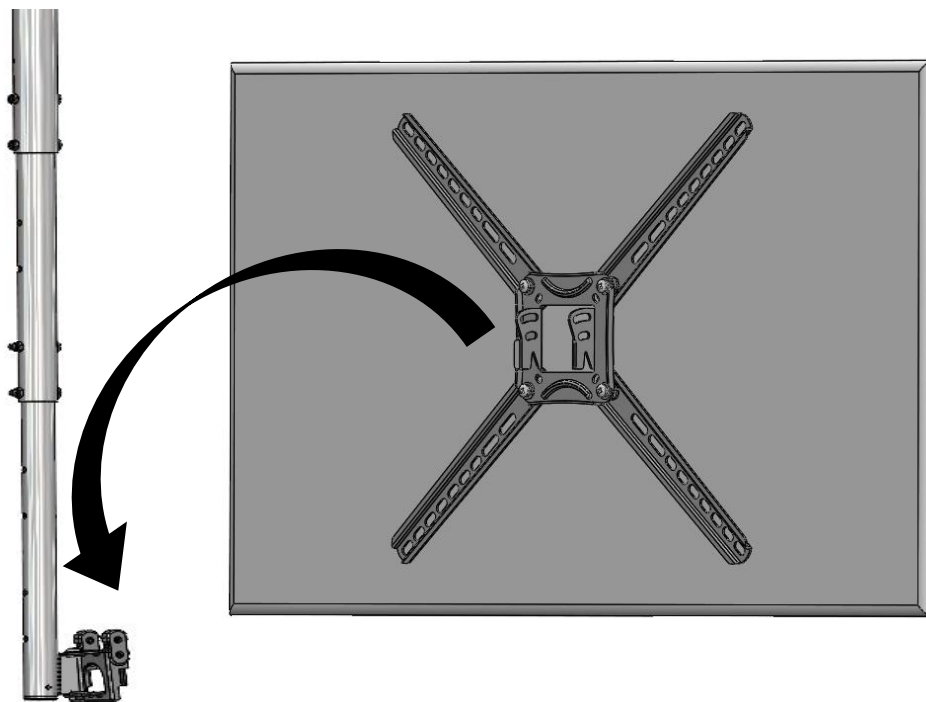

  
12b Insert and tighten the screws from both sides to create friction for the tilt mechanism. Adjust the TV tilt angle carefully.

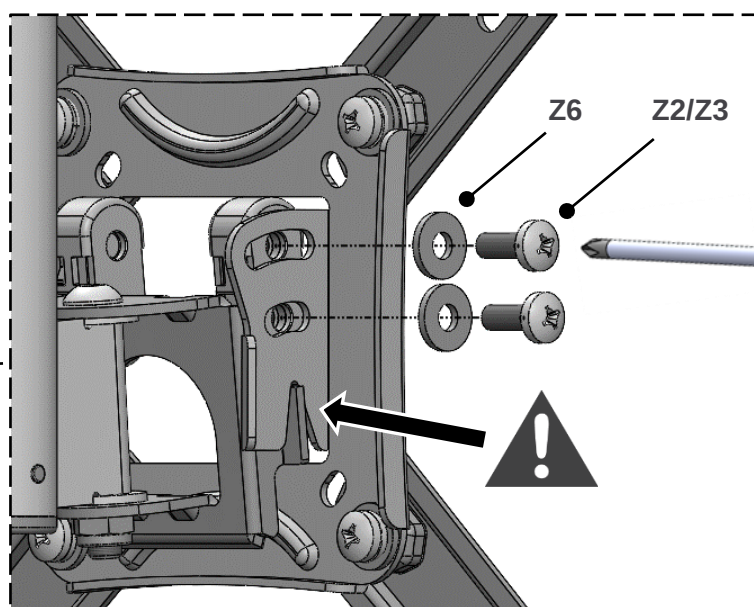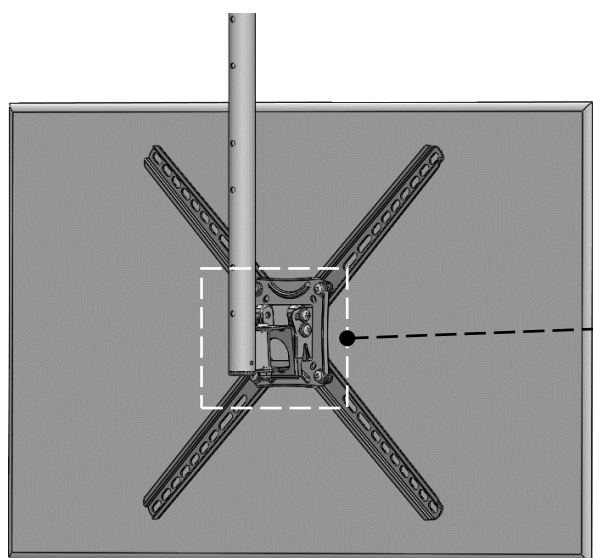

13 Level the TV.

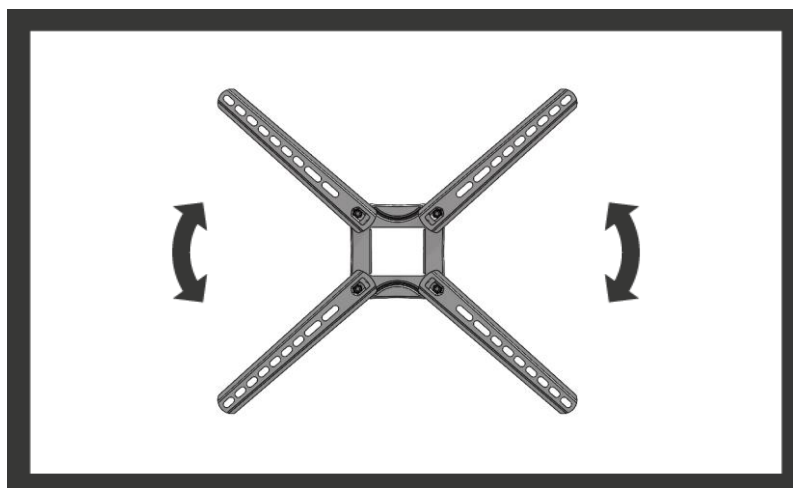 

 Disconnect the TV, remove the screws and lift the TV

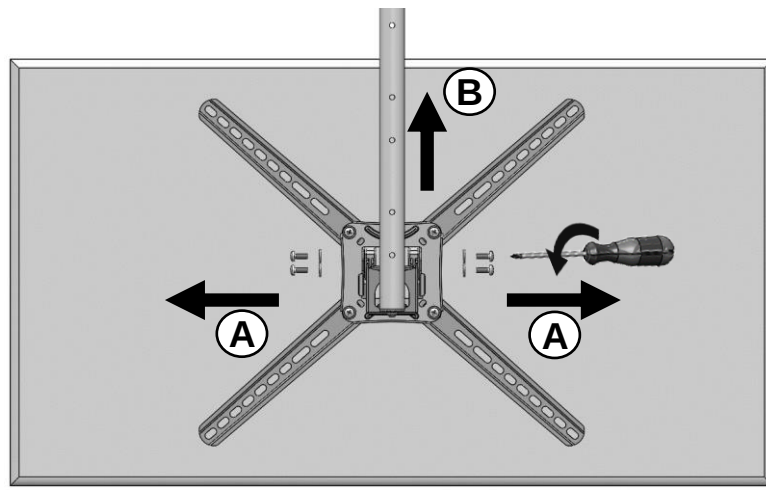

DISCONNECT

 
BACKSCREEN CONNECTION POSITIONING OPTIONS

All TV backscreen connections are in millimeters (Width x Height).


There are a few sizes of TV plates available.

The backscreen connections in position 1 are included in some of the different TV plates, according to their size, and do not require the use of the 4 adapters (marked in blue).


1 75x75, 100x100,
100x200, 200x100, 200x200

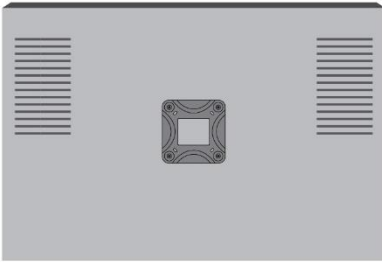


2 200x100, 300x200,
400x200, 600x200

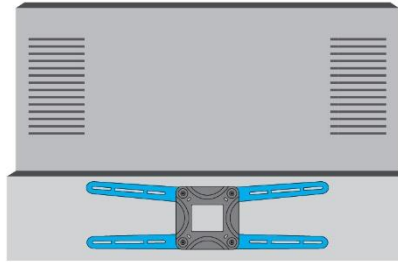 

 
3 200x100, 300x200, 300x300,
400x200, 400x300, 600x200, 600x300

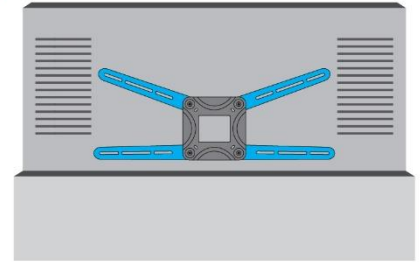

 
4 100x100, 200x200, 300x300
*Less stable than option 5

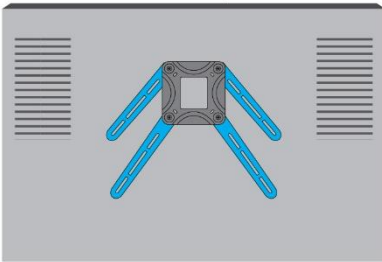


5 100x100, 200x200, 300x300

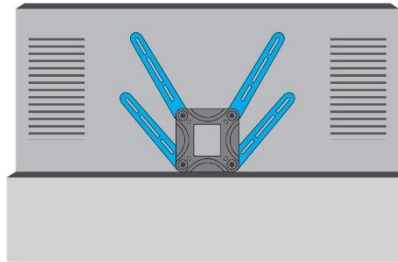 


6 100x200, 200x300

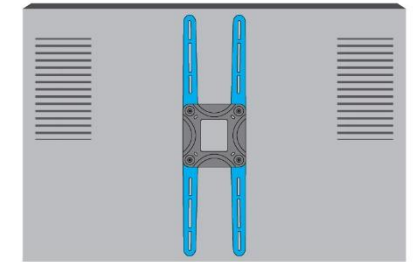 

 7 100x100, 200x200, 300x300,
300x400, 400x400, 600x400

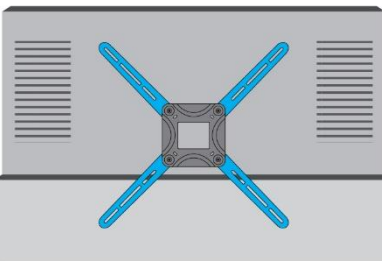

 8 200x100, 300x200,
400x200, 400x300, 600x400

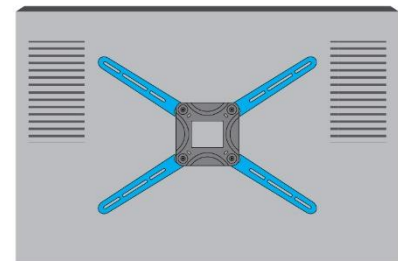

If your backscreen connections are not included in any of the positions, please contact us

www.barkanmounts.com/support

