



INSTRUCTION MANUAL

MegaChef 30 Liter Electric Counter Top Toaster Oven

Model: MCOV-3500

120V, 60Hz, 1500 Watts.



Read this booklet and follow all the instructions carefully

IMPORTANT SAFETY INSTRUCTIONS

When using your *Electric Oven*, basic safety precautions should always be observed, including the following:

1. Read all instructions.

2. Do not touch hot surfaces, use handles or knobs.

3. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or any other liquids.

4. Do not let cord hang over edge of table or counter, or touch hot surfaces.

5. Do not operate appliance with damaged cord or plug or after the appliance malfunctions or has been damage in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

6. The use of accessory attachments not recommended by the appliance manufacturer may cause hazard or injury.

7. Do not place on or near a hot gas or electric burner.

8. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.

9. To disconnect, turn the timer to OFF, then remove the plug. Always hold the plug, and never pull the cord.

10. Do not cover crumb tray or any part of the oven with metal foil. This may cause the oven to overheat.

11. Use extreme caution when removing the tray, racks or disposing of hot grease or other hot liquids.

12. Do not clean the inside of the oven with metal scouring pads, pieces can break off the pad and touch electrical parts, creating a risk of electric shock.

13. Oversized foods or metal utensils must not be inserted in an electric oven as they may create a fire or risk of electric risk.

14. A fire may occur if the oven is covered or touching flammable material, including the curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.

15. Extreme cautions should be exercised when using cooking or baking containers constructed of anything other than metal or ovenproof glass.

16. Be sure that nothing touches the top or bottom elements of the oven.

17. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
18. Do not store any materials other than manufacturer's recommended accessories in this oven when not in use.

19. Always wear protective, insulated oven gloves or use a special handle when inserting or removing items from the hot oven

20. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can still break around edges. Avoid scratching door surface or nicking edges.

21. Do not use outdoors.

22. Do not use appliance for other than intended use.

23. The appliance can be used by children aged from 13 years and above and persons with reduced physical sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

24. Children shall not play with the appliance.

25. Cleaning and user maintenance shall not be made by children unless they are old than 8 and supervised.

26. Keep the appliance and its cord out of reach of children less than 8 years.

27. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

28. This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

29. Children should be supervised to ensure that they do not play with the appliance.

30. The temperature of accessible surfaces may be high when the appliance is operating.

31. The appliances are not intended to be operated by means of an external timer or separate remote-control system.

32. The rear surface of appliances which, according to the instructions, shall be placed against a wall, and are not accessible with test probe 41 of EN61010-2-01.

Commented [1]: 居中


Commented [2]: is

Commented [3]: 少了两条，原版的 10 和 31

SAVE THESE INSTRUCTIONS, FOR HOUSEHOLD USE ONLY

Getting To Know Your New Oven

MAIN COMPONENT: (Product may vary slightly from what is illustrated)

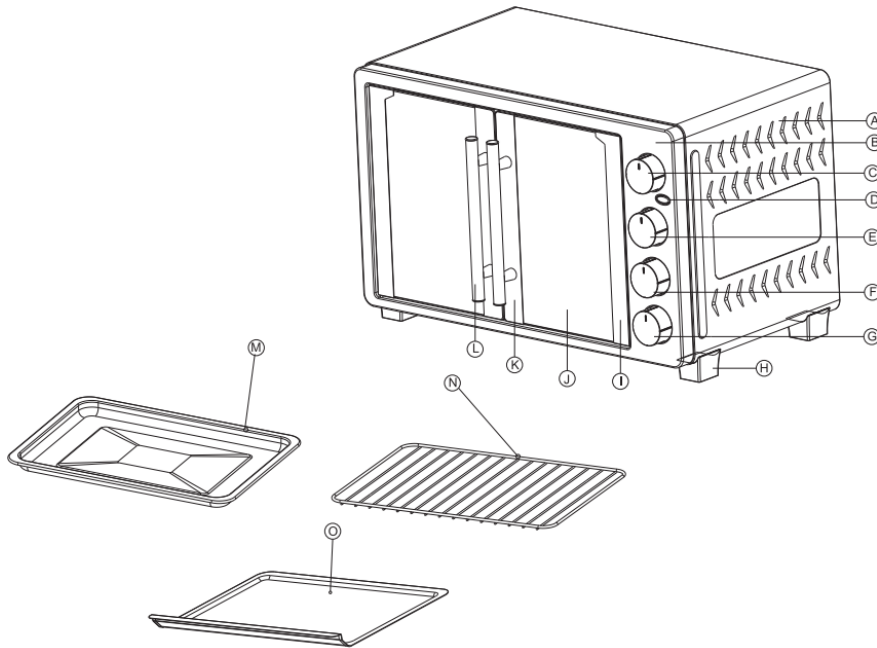

- | | |
|-----------------------------|--------------------------|
| A: Housing | B: Front frame |
| C: Lamp knob | D: Power indicator light |
| E: Temperature control knob | F: Function control knob |
| G: Timer knob | H: Oven foot |
| I: Right door frame | J: Door glass |
| K: Left door frame | L: Door handle |
| M: Bake tray | N: Wire rack |
| O: Crumb Tray | |

Technical Specifications

Voltage: 120V, 60Hz.
Power: 1500W
Capacity: 33 Liters

Commented [4]: Electric Oven?

Commented [5]: 30 Liters?

Before Using Your Oven

▲ Before using your electric oven for the first time, be sure to:

1. Read all of the instruction included in this manual.
2. Make sure that the oven is unplugged and the **Timer Knob** is in the “OFF” position.
3. Wash all the accessories in hot, soapy water or in the dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven, plug oven into outlet and you are ready to use your new oven.
5. After re-assembling your oven, we recommend that you run it at the highest temperature (450°F) on the **Toast**

Function () for approximately 15 minutes to eliminate any packing residue that may remain after shipping. This will also remove all traces of odor initially present.

Please Note: Initial start-up operation may result in minimal smell and smoke (about 15 minutes). This is normal and harmless. It is due to burning of the protective substance applied to the heating elements in the factory.

Please familiarize yourself with the following oven functions and accessories prior to first use:

- **Temperature Control:** choose the desired temperature from 0-200°F to 450°F for cooking.
- **Function Control:** There are 3 function selection and 4 rack positions inside the oven for a variety of cooking needs;

Broil (): Only upper heating elements work, suitable for broiling fish, steak, poultry, pork chops, etc.

Bake (): Only lower heating elements work, suitable for baking cakes, pies, cookies etc. food that don't need browning or crispy surface, or stewing food in a pot.

Toast (): Both upper and lower heating elements work together, suitable for toasting bread, muffins, frozen waffles, pizza, etc.

- **Timer Control:** You could choose up to 60 minutes for cooking. Time can be adjusted during cooking procedure. There is a bell ring at the end of the programmed time.
- **Power “ON” indicator light:** It's illuminated whenever the timer is turned on.
- **Oven Lamp** (): It's illuminated when the lamp is turned on, convenient for observing the cooking procedure.
- **Bake Tray:** For use in broiling and roasting meat, poultry, fish and various other foods. Also to be used as a drip pan to catch the oil drippings.
- **Wire Rack:** For toasting, baking, and general cooking in casserole dishes and standard pans.
- **Crumb Tray:** Allows you to collect the residue of toast, pizza, cake etc. or meat oil drippings.

WARNING: TO AVOID RISK OF INJURY OR BURNS, DO NOT TOUCH HOT SURFACES WHEN OVEN IS IN USE. ALWAYS USE OVEN MITTS.

Commented [6]: 少了个空格



CAUTION: Always use extreme care when removing bake tray, wire rack or any hot container from a hot oven. Always use the tray handle, or an oven mitt when removing hot items from the oven.

Commented [7]: 两处字体应为 TIMES NEW ROMAN

HOW TO USE BROIL

For best results, it is recommended that you preheat the oven for 15 minutes on 450°F.

Operation

- Place food on the wire rack and slide into the top rack position. Food should be placed as close as possible to the top heating element without touching it.
- Put bake tray at the lowest rack position to catch possible dripping.
- To prevent fire hazards, it is suggested to wrap food with aluminum foil
- Set temperature knob to appropriate temperature.
- Brush food with sauces or oil, as desired.
- Set function knob to **Broil Function**. ()
- Turn time knob to your desired cooking time.
- Turn food over midway through the prescribed cooking time.
- When broiling is complete, turn the third knob to “OFF” position.

HOW TO USE BAKE

Please note that the BAKE function uses only the bottom heating elements. For best results, it is recommended that you preheat the oven for 15 minutes on 450°F.

Operation

- Place food on the wire rack or bake tray and slide into the lowest rack position.
- To prevent fire hazards, it is suggested to wrap food with aluminum foil
- Set temperature knob to appropriate temperature.
- Brush food with sauces or oil, as desired.
- Set function knob to **Bake Function**. ()
- Turn time knob to your desired cooking time.
- Turn food over midway through the prescribed cooking time.
- When baking is complete, turn the third knob to “OFF” position.

Positioning of the Wire Racks

Cookies – Use bottom and middle Support Guides.

Layer Cakes – Use bottom Support Guide only (bake one at a time).

Pies – Use bottom and middle Support Guides.

HOW TO USE TOAST

Please note that the TOAST function uses all the heating elements. Large capacity oven allows for toasting 4 to 6 slices of bread, 6 muffins, frozen waffles or frozen pancakes. When toasting only 1 or 2 items, place food on the bake rack in the center of the oven.

Operation

Commented [8]: 放到下一页

- Place food on the wire rack and slide into the middle rack position.
- Set temperature knob to appropriate temperature.
- Set function knob to **Toast Function.** ()
- Make sure the crumb tray is placed at the bottom of inside oven.
- Turn time knob to your desired cooking time.
- When toast is completed, bell will ring to signal the end of the toast cycle.
- Turn the function knob to “OFF” position.

Note: Wire Rack should be positioned in the middle of the oven with the indentations pointing down.

Cleaning & Maintenance

Clean the appliance every time after use.

1. Remove the plug from the wall socket and allow the appliance to cool down completely.
2. Use warm water with a small amount of washing-up liquid to clean the baking tray, the grill and the removal tool. Rinse the items with plenty of water and dry them thoroughly.
3. Use a damp cloth to clean the interior and exterior of the oven and the door. Dry them thoroughly.
4. Place all the items back in the oven and store the oven



- Make sure the plug has been removed from the plug socket before cleaning the appliance.
- Never use corrosive or scouring cleaning agents or sharp objects (such as knives or hard brushes) to clean the appliance.
- Never immerse the appliance, the power cord or the plug in water or any other fluid.



ENVIRONMENT PROTECTION

Dispose the appliance according to the local garbage regulations.
Never throw away with trash, so you will help to the improvement of the environment.

MegaChef Provides a 90 Day Limited Manufacturer Warranty

For warranty information please:

Call: 424-543-1628

Email: support@megachef.com

Or look us up: <http://www.megachef.com>