



Main Components


Canopy Tent




1 x Steel Frame Stand

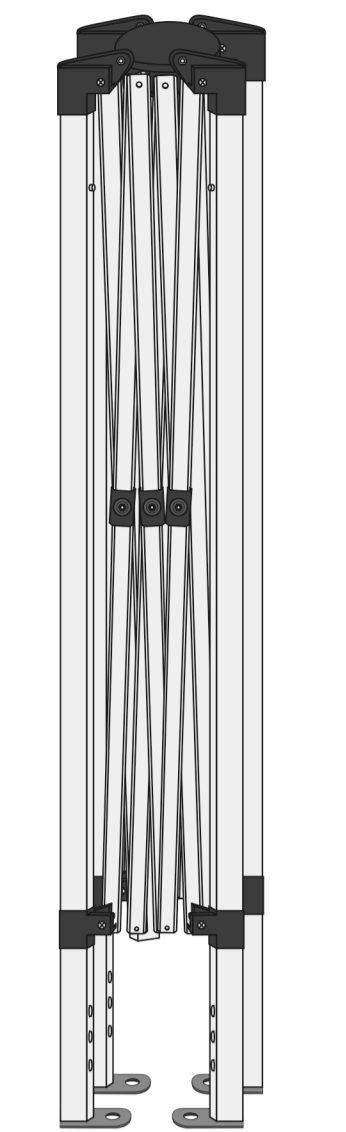


1 x Top Cover

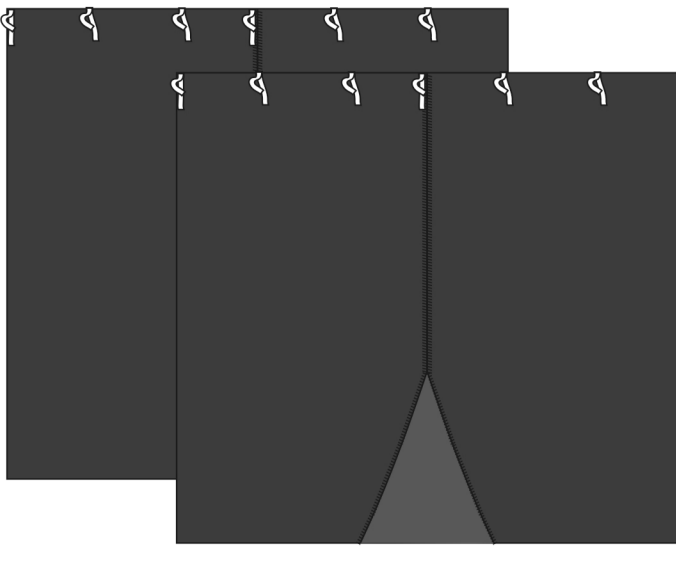


4 x Side Walls Sets

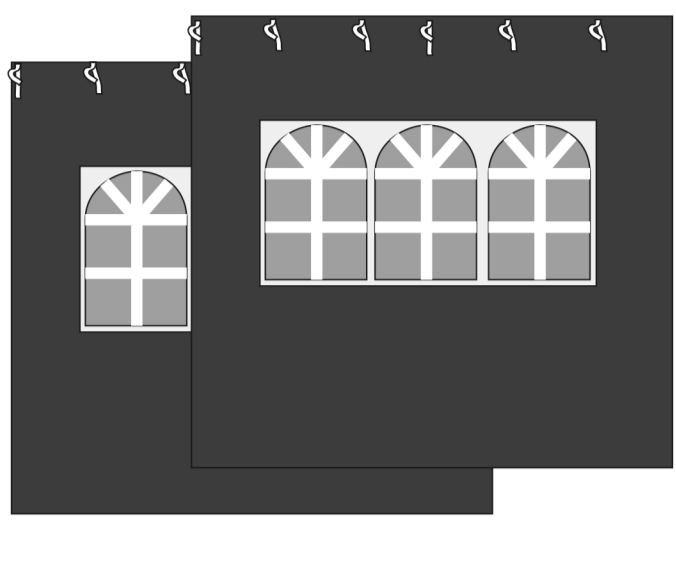


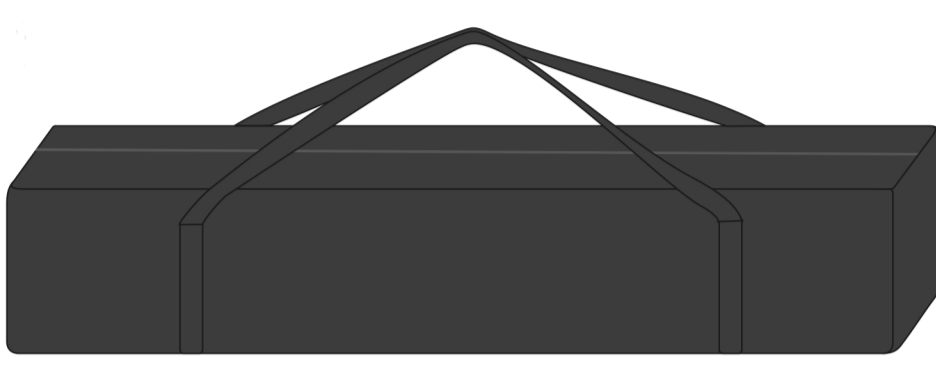

1 x Wheeled Carrying Bag

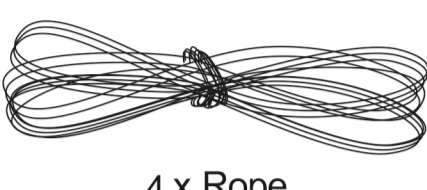


4 x Rope

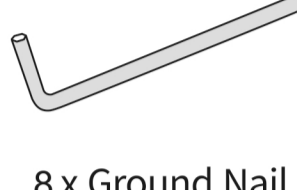

8 x Ground Nail

Page 1

①

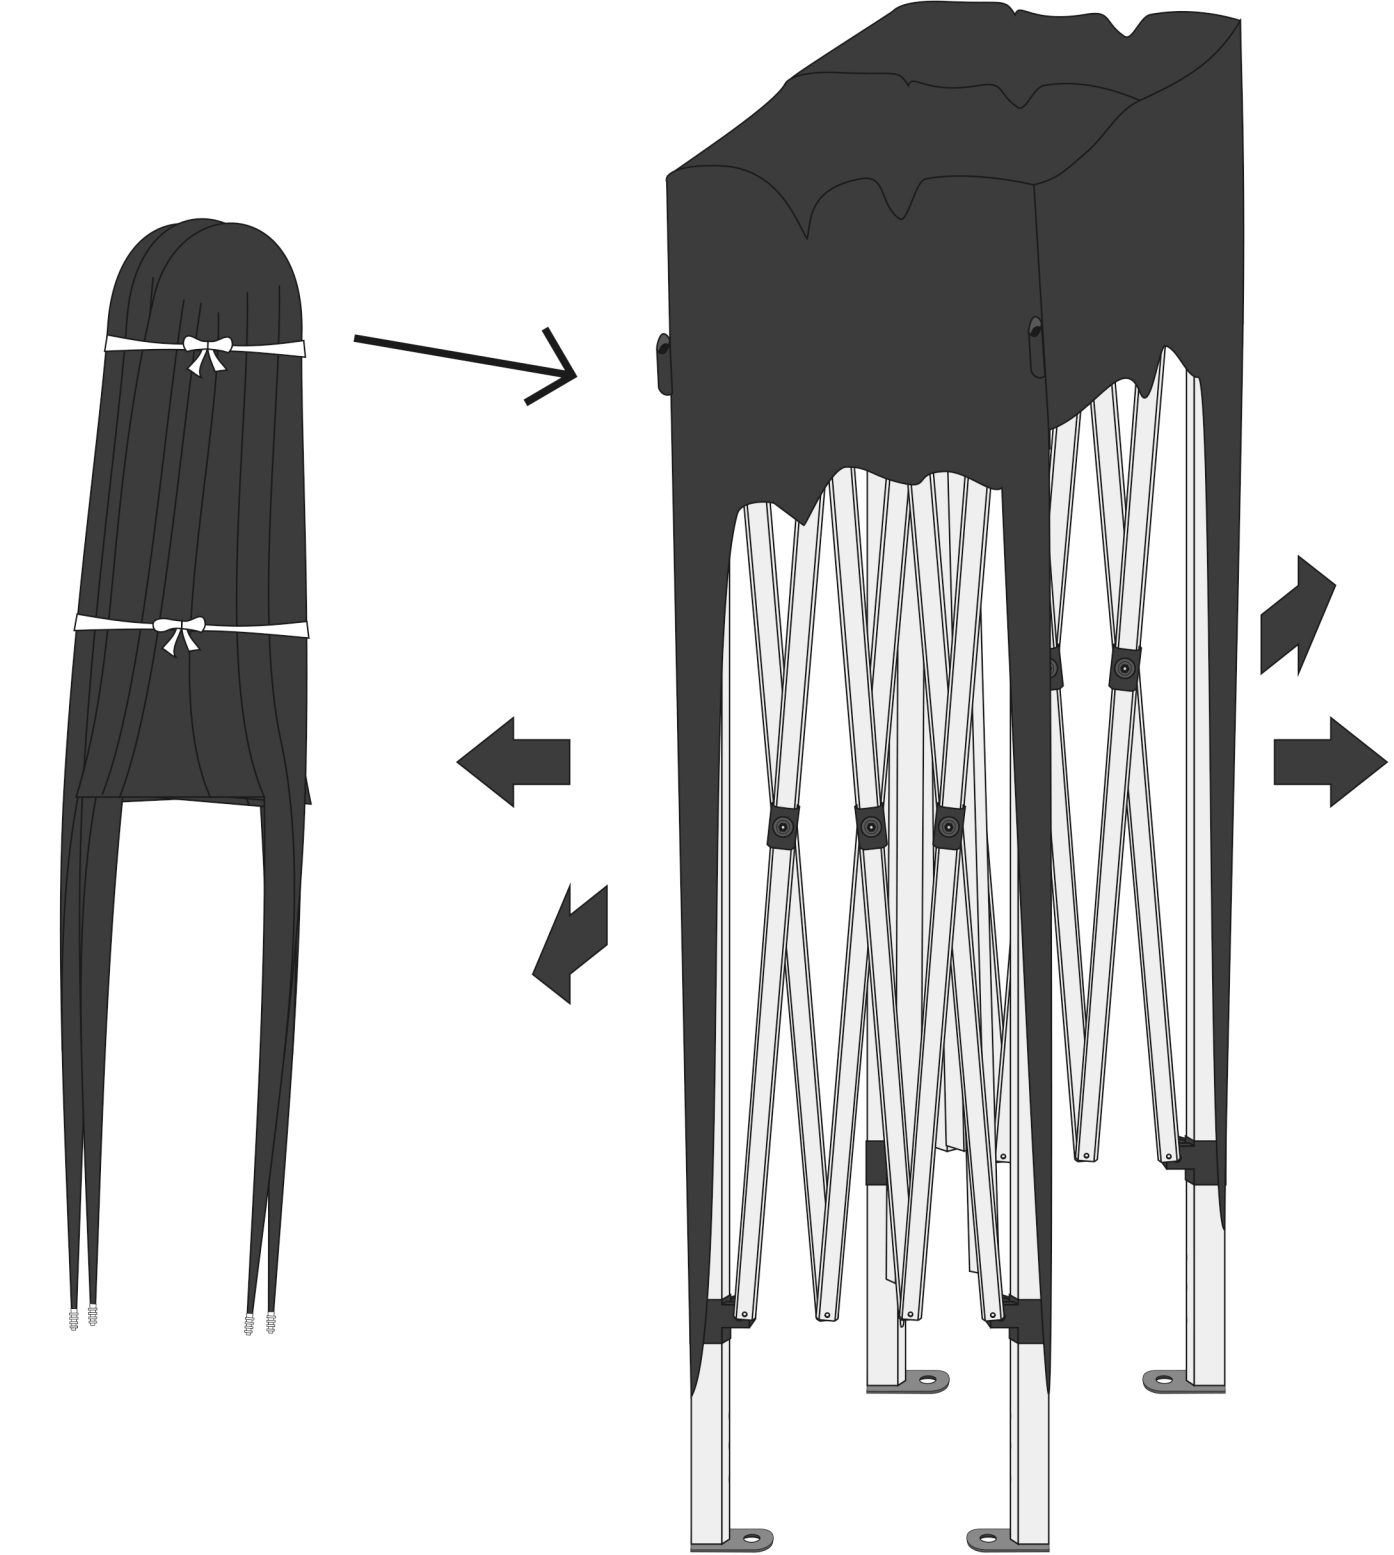


1.Remove the instant tent from the carrying black bag, and the keep the steel frame upright.

Page 2


outdoor basic

② -1

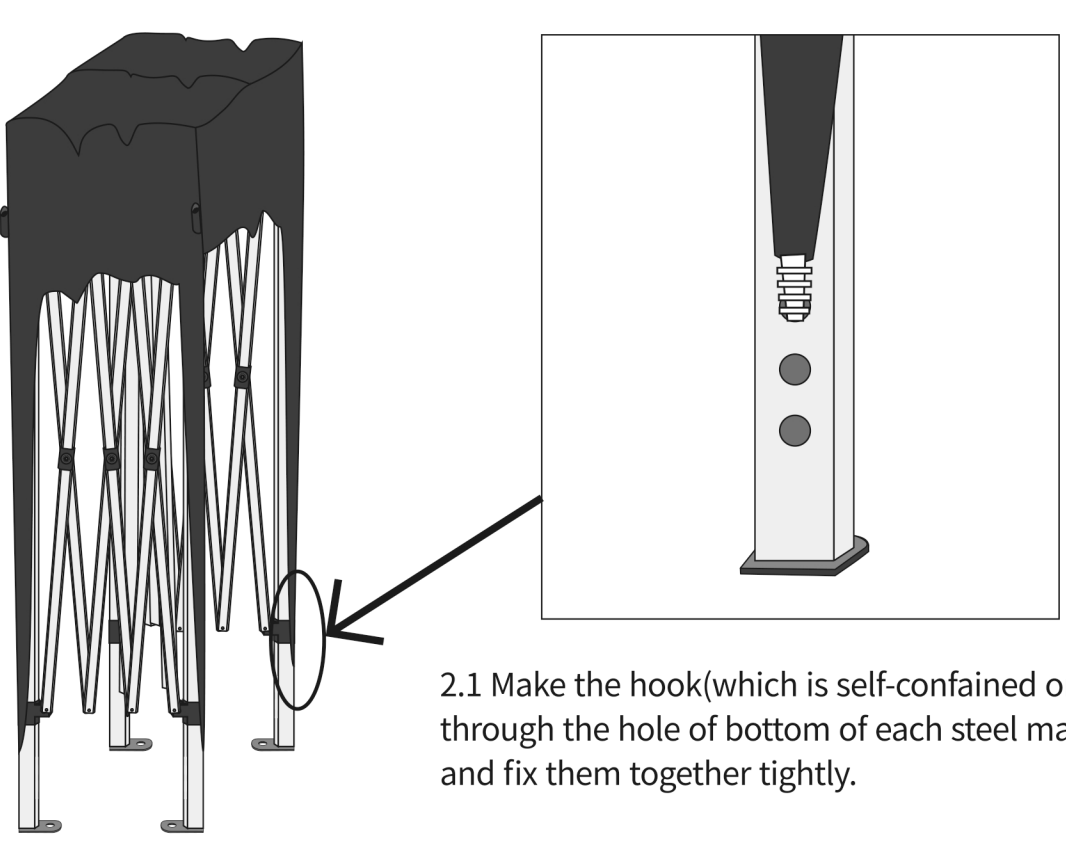

2.1 Make the hook(which is self-contained on Topcover) through the hole of bottom of each steel main stand, and fix them together tightly.

② -2

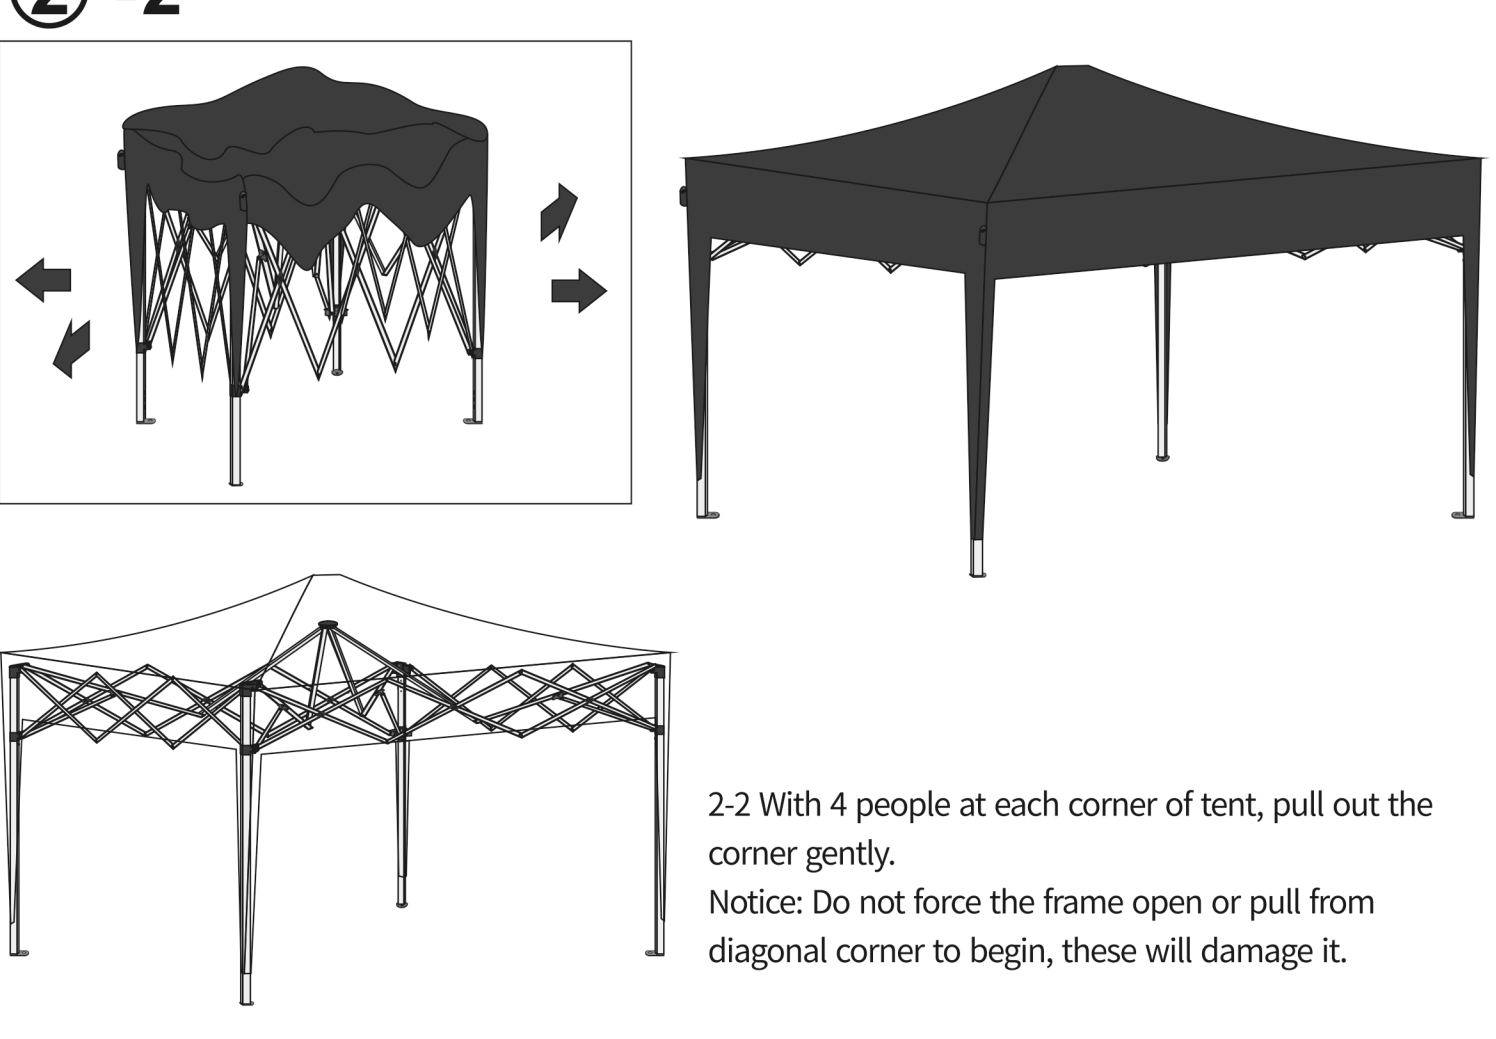


2-2 With 4 people at each corner of tent, pull out the corner gently.
Notice: Do not force the frame open or pull from diagonal corner to begin, these will damage it.


Page 3

outdoor basic

② -3

2-3 .Hook the plastic hanger with steel frame.

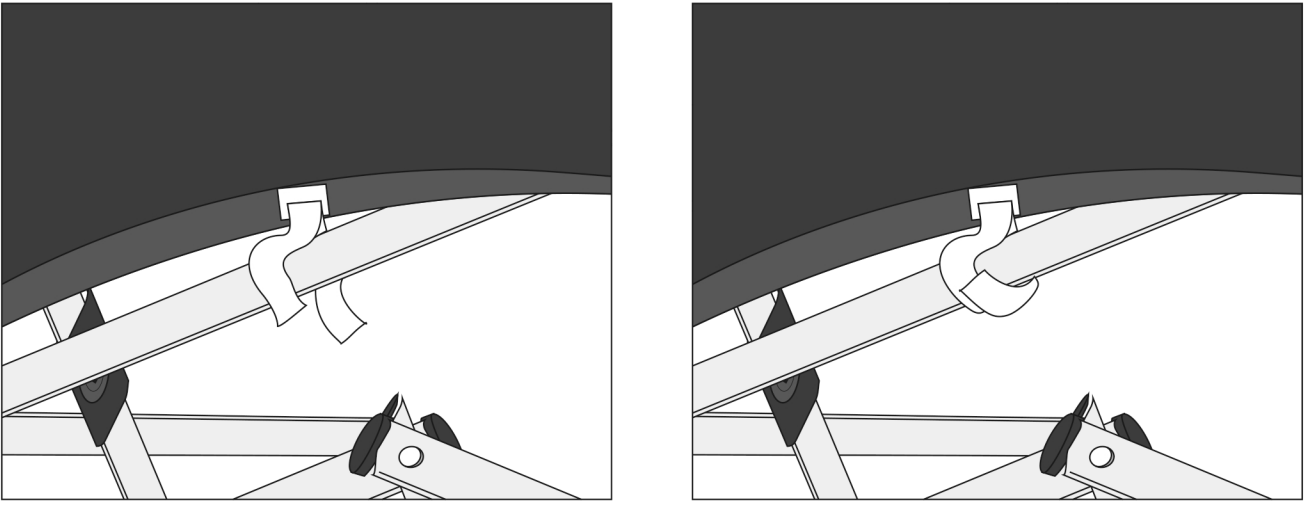


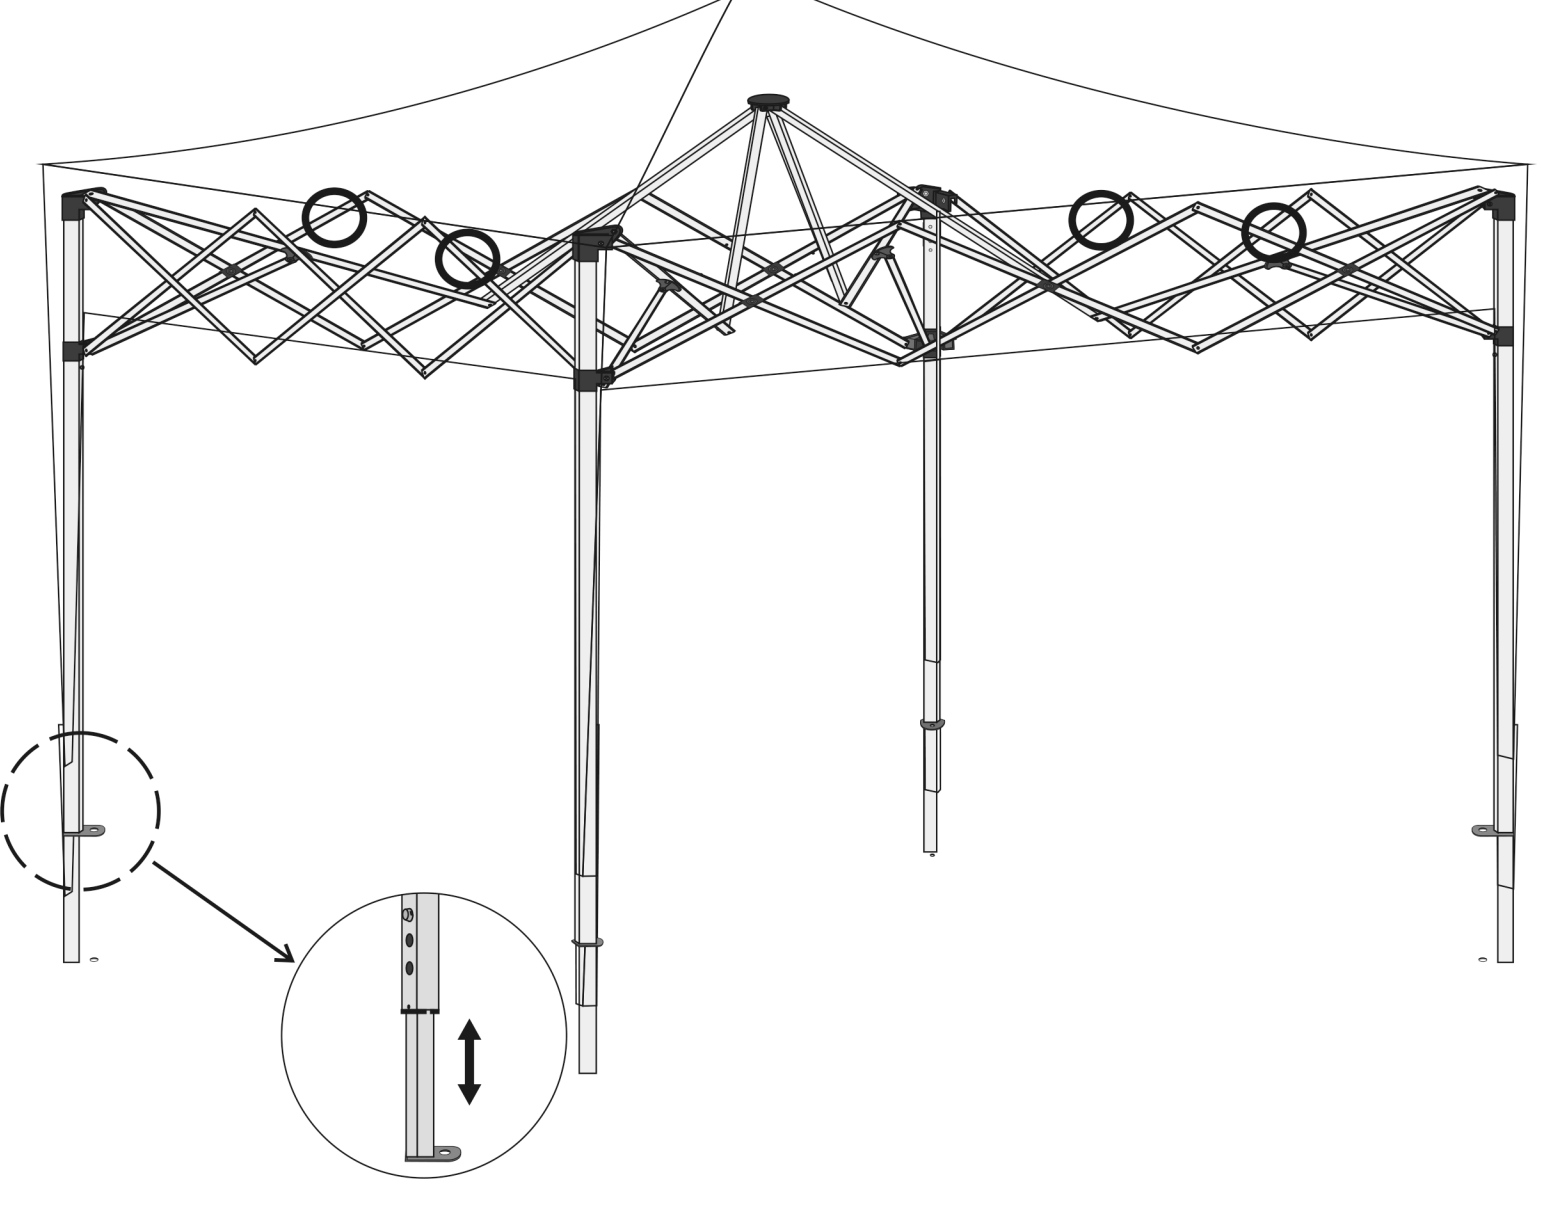

Page 4

outdoor basic

③

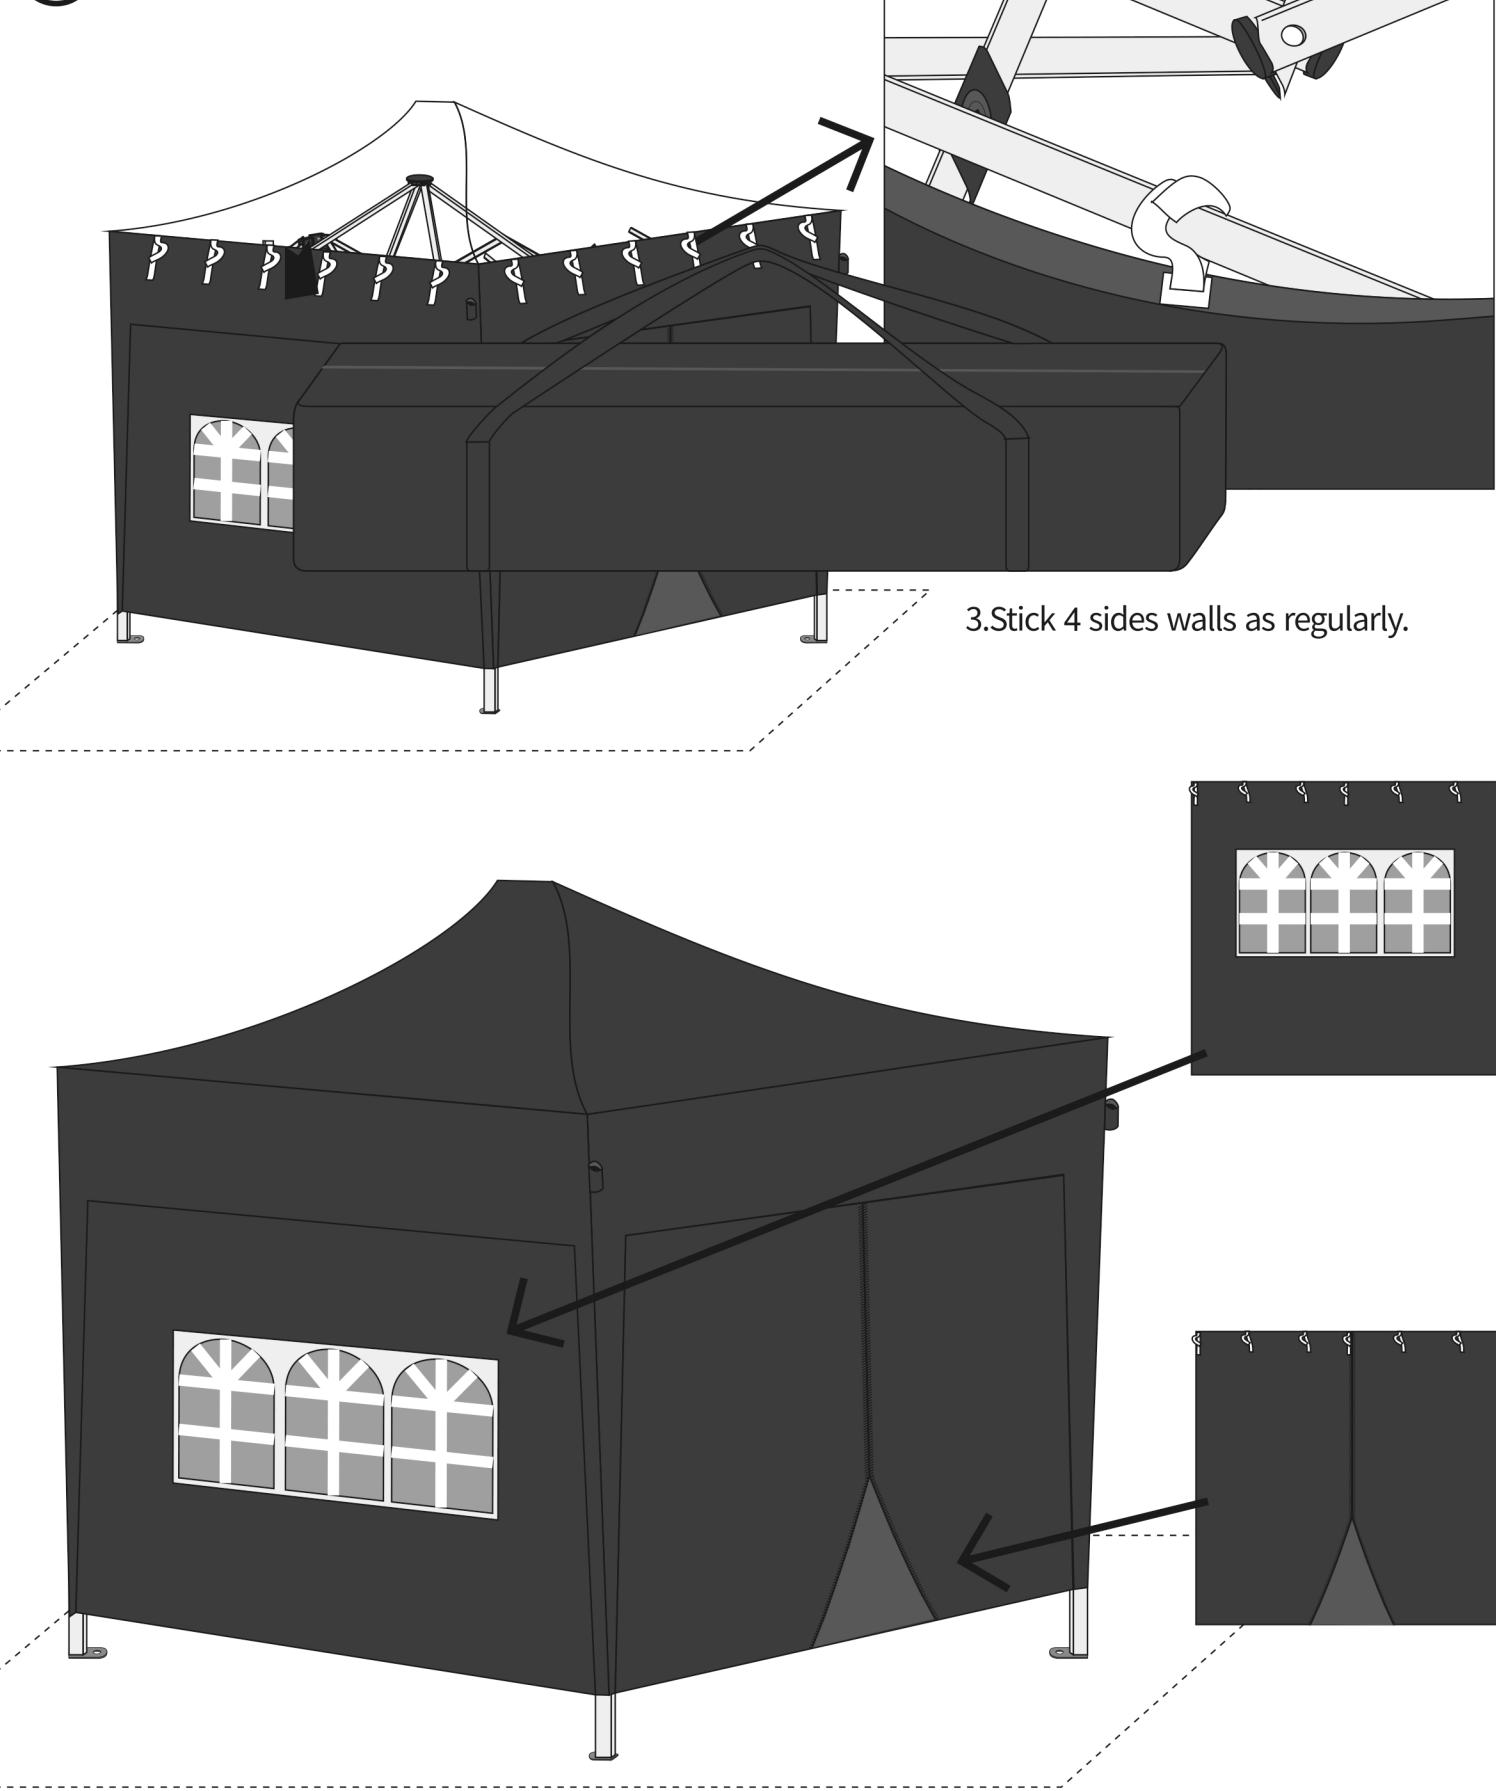


3.Stick 4 sides walls as regularly.

Page 5

outdoor basic

④

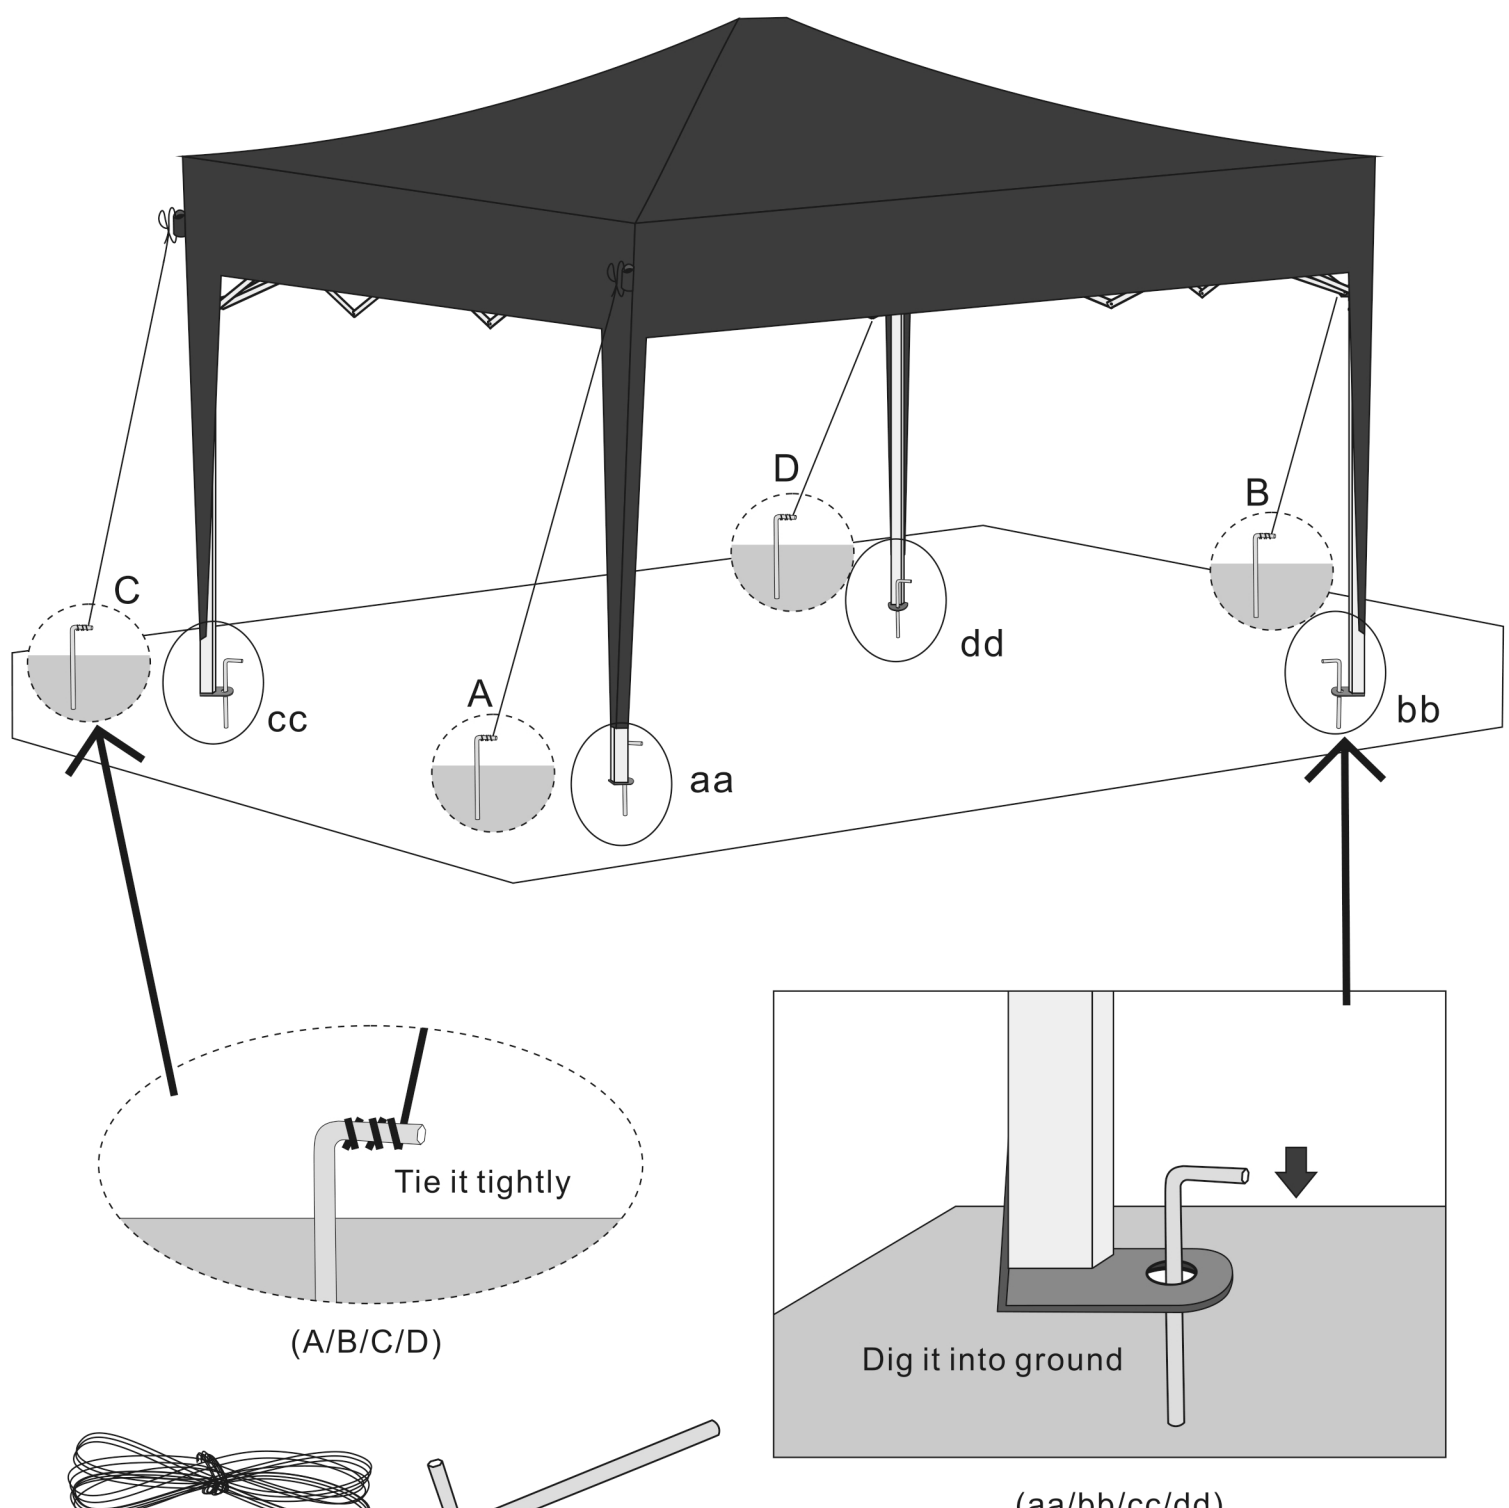


4.Install the following parts - aa, bb,cc,dd, ee, ff as showed in pictures: make the ground-nail through the hole of bottom of each steel main stand then push it into the ground.
For the following part - A, B, C, D, E, F:
Twine the same rope on the top steel frame and ground-nail, at the same time, please tie them tightly, and dig all ground-nails into the ground.
Please follow above instructions to make your tent stable enough to use.

Page 6

outdoor basic

⑤

5.HOW TO FOLD BACK
Each main stand has two clips,one is at top and the other is at the middle,push in them and the tent will be folded back as regularly.

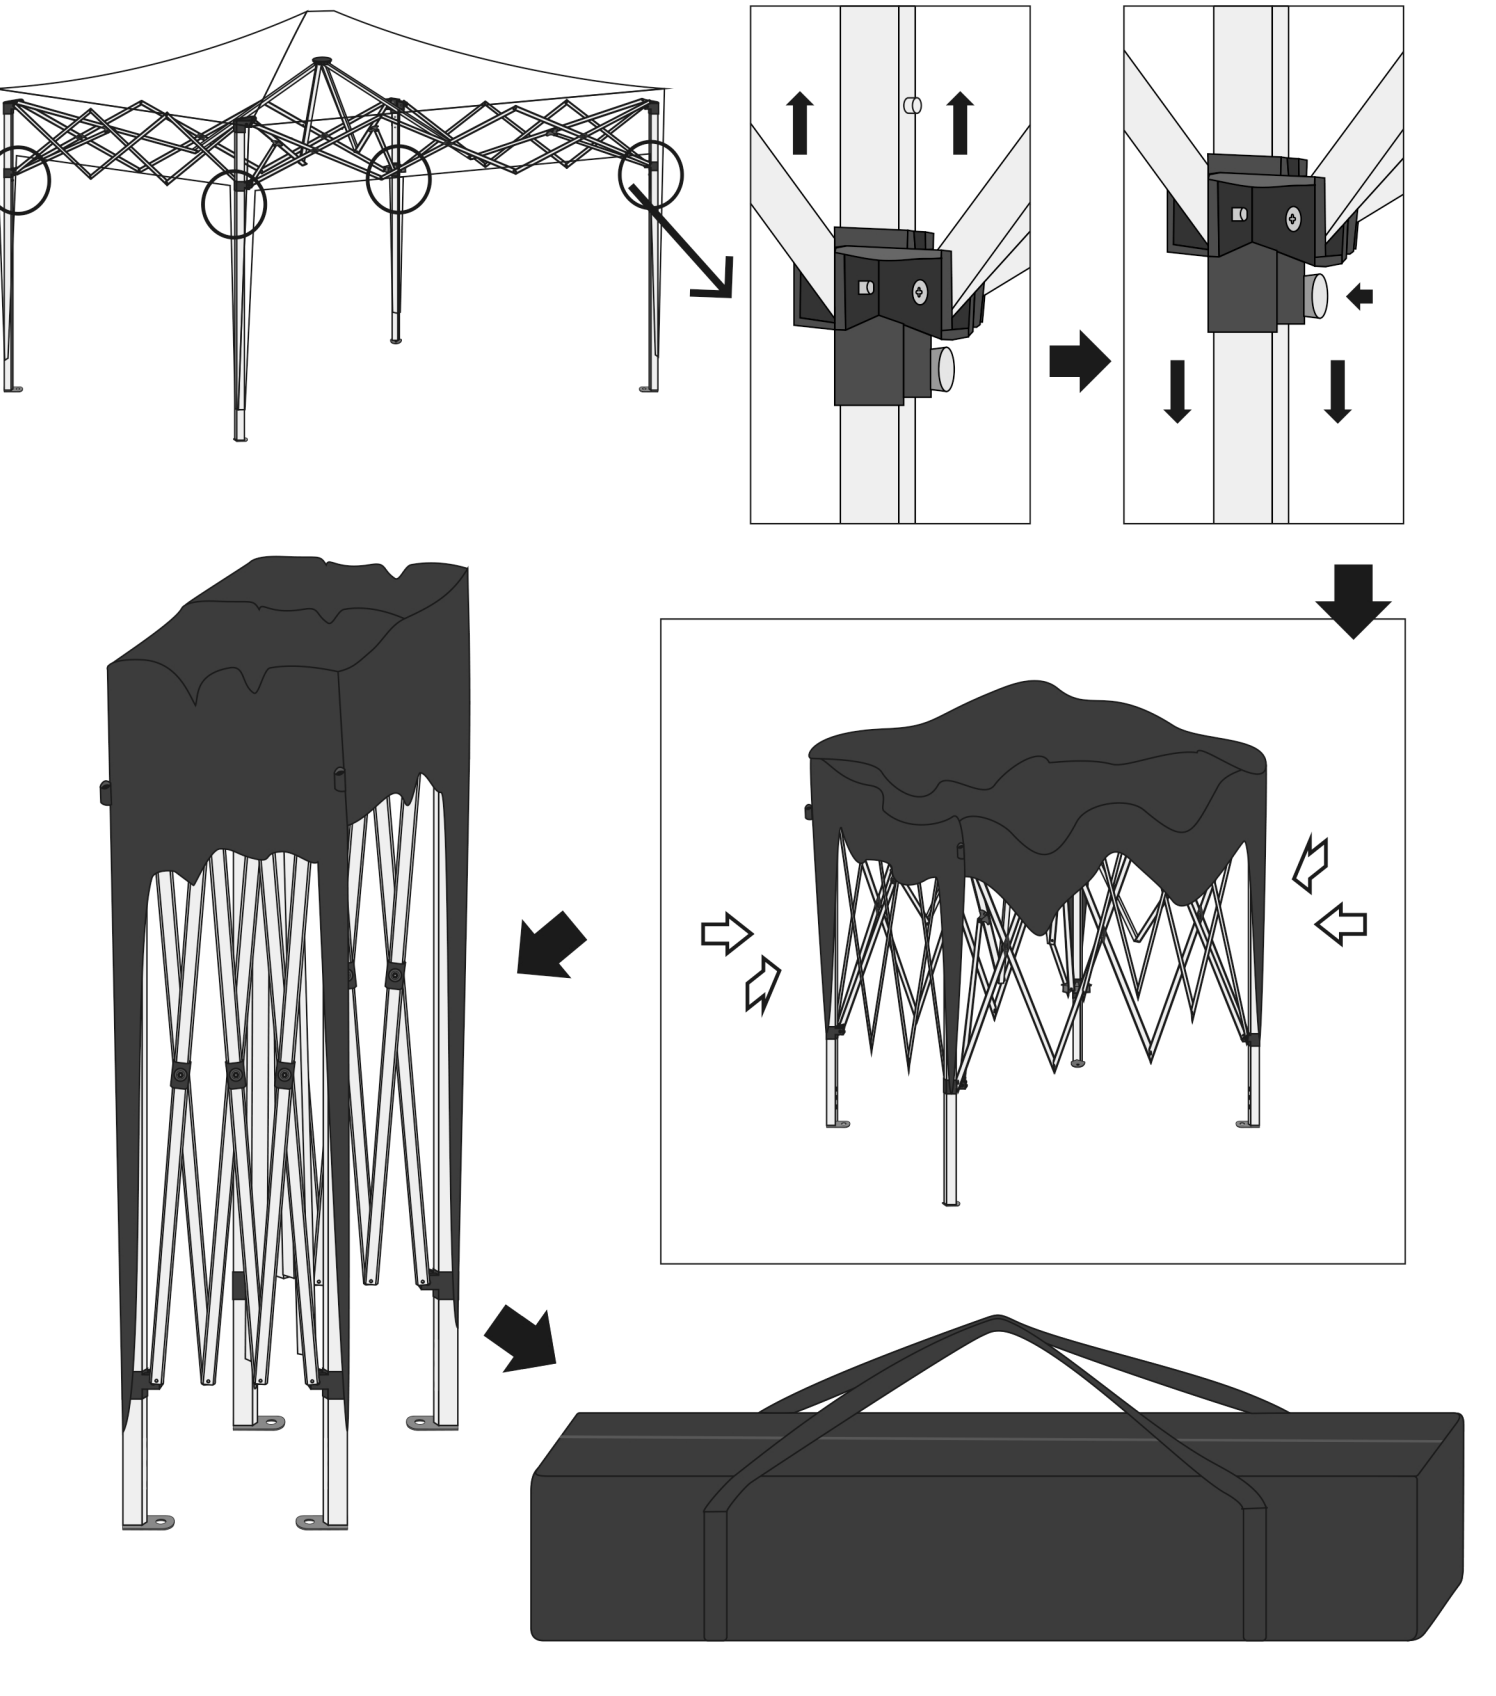

Page 7