

### Warranty

This fan comes with a 1-YEAR LIMITED COMPONENT WARRANTY. If your unit does not appear to be working properly, please contact our service center by calling 1-800-317-1688.

Prior to your call, we encourage you to visit our service-related website [www.ilivingusa.com](http://www.ilivingusa.com) for troubleshooting tips and service instructions if needed

### Warranty Information



Register

Register your product at our website :

Or visit [iLivingUSA.com/register-product](http://iLivingUSA.com/register-product)

### Feedback



Rate us

*Love it ? Help us make the product more for you.*

Let us know with a customer review.

Please visit : <https://www.amazon.com/review/review-your-purchases#>

At iLiving USA, we are committed to bringing top quality products to our customers.

iLIVING USA

860 Mahler Road, Burlingame  
CA 94010

Tel: 1- 800-317-1688

Email: [service@ilivingusa.com](mailto:service@ilivingusa.com)



Like us on Facebook: <https://www.facebook.com/ilivingusa/>



Follow us on Twitter: @iLIVINGUSA

Check out our website: [www.ilivingusa.com](http://www.ilivingusa.com)



## 30" OSC OUTDOOR MISTING PEDESTAL FAN

MODEL: **ILG8P30M**



**READ AND SAVE THESE INSTRUCTIONS**

**OWNER'S MANUAL**

Please read the instructions carefully before use

## **VERY IMPORTANT SAFETY INFORMATION:**

Close supervision is necessary when this product is used near children.

Do not operate in the presence of explosives and/or flammable fumes.

Do not operate without fan grills properly in place.

This fan is intended for outdoor use but may be used indoors without the misting feature.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

**DANGER:** Do not submerge motor in water or allow motor to be exposed to water. Personal injury and/or death could result.

Never handle the fan or motor with wet hands or when standing on wet or damp surface or in water. Fatal electrical shock could occur.

**WARNING:** Electric shock hazards—may cause severe personal injury or death.

For your safety, turn off the electrical power supply before installing, moving, or servicing your fan to avoid any possible electrical shock hazards.

Never make adjustments to the fan when in power is on.

### **WARNING:**

Do not under any circumstances remove the power plug's ground prong or ground fault

unit. For your personal safety, the fan must be grounded. The fan is equipped with a power supply with ground fault circuit interrupting device. Removal or tampering of power cord will void warranty.

Never use an extension cord to connect the fan to an outlet. All installations must be made into a grounded outlet.

**UNPLUG THE FAN WHEN NOT IN USE.**

**WARNING:** To reduce the risk of fire or electrical shock, do not use this fan with any solid-state speed control device. This appliance has a 3-prong plug. To reduce the risk of electrical shock, this plug is intended to fit in an outlet only one way. If this does not fit outlet, contact a qualified electrician. Do not attempt to bypass this procedure.

**CAUTION:** Read and follow all instructions before operating fan. Do not use fan if any part is damaged.

### **RULE FOR SAFE OPERATION:**

Never insert fingers or any other objects through the grill guard when fan is in operation. Disconnect the fan when moving from one location to another.


Disconnect the fan when removing guards for cleaning.

Be sure fan is on a stable, flat surface when in operation.

DO NOT use fan in windows. Rain may create electrical hazard.

**IMPORTANT:** Spray angle and droplet size is determined by water pressure at your location. Maximum inlet water pressure: 0.6 Mpa. Minimum inlet water pressure: 0.2 Mpa.

## **ASSEMBLY INSTRUCTIONS**

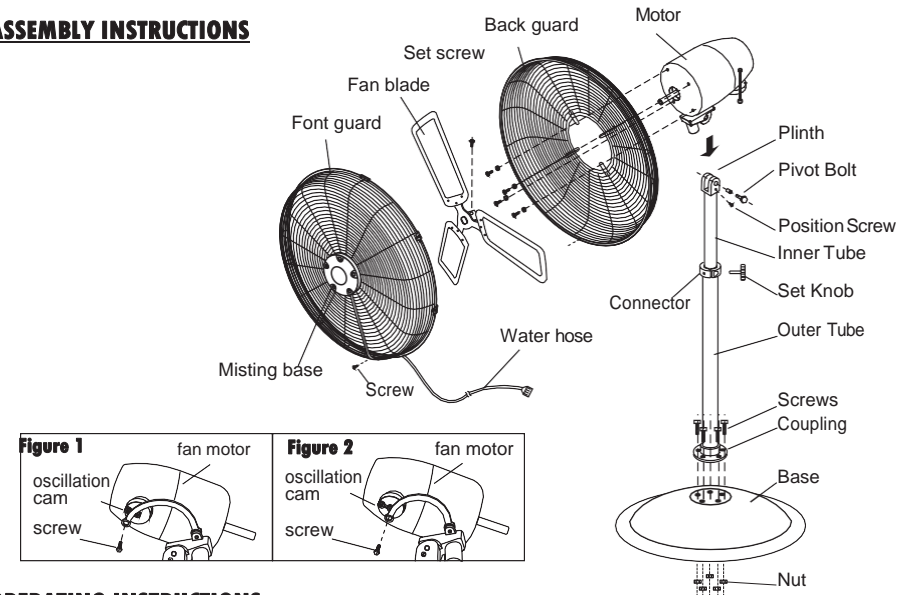

## **OPERATING INSTRUCTIONS**

**NOTE:** Do not turn on the water tap until the fan has been turned on.

1. Place fan on a flat stable surface in desired position.
2. Attach the water hose to a compatible threaded tap (you may first need to attach one or both of the provided tap size adaptors to the hose, before connecting to the tap).
3. **Speed control:** Select air speed by setting switch to either HIGH-LOW-OFF.
4. Turn on water at tap (only when used outdoors).
5. To adjust airflow upward or downward: Tilt head of fan to desired angle.
6. **IMPORTANT:** Do not turn off the fan until you have turned off the tap, otherwise water will leak from the front of the fan.

**Note:** Your misting fan will use approximately 34 liters of water for each hour of operation. This is equivalent to running a typical garden hose for 1 minute.

### **SETTING OSCILLATING MODE:**

- To oscillate the fan: Loosen the screw on the oscillation rod and move to the end of the oscillation cam. Tighten the screw to lock the position. (See Figure 1)
  - To stop the oscillation: Loosen the screw on the oscillation rod and move to the center of the oscillation cam. Tighten the screw again to lock the position. (See Figure 2)
- CAUTION:** Disconnect from mains before changing the setting.

### **CLEANING**

**WARNING:** Unplug from electrical supply source before cleaning.

1. Use soft damp cloth then wipe with dry cloth.
2. Do not use harmful cleaners to paints or plastics.
3. Do not bend the blades.

**RATING: ILG8P30M:** 120V~ 60Hz 1.8A 220W

**CFM:** 8400

**RPM:** 1100