

User's Manual

Wooden Porch Swing




1. Please find the assembly guidelines on Page 2 & 3.
2. Scan the QR code below to watch the assembly video uploaded to YouTube .

 
 

 



3. 2-year warranty.
4. There may be scratches on the wooden slats due to violent impacts during the shipping process. If you find any defective parts, please feel free to contact us through email: cs@innovaze.com or any of the contact methods below. We will respond within 8 hours and provide free replacement parts plus partial refund or other services you need.

MEGA CASA INC

Customer service: 1-888-810-6342
INNOVAZE USA
18003 Cortney Court, City of Industry, CA 91748

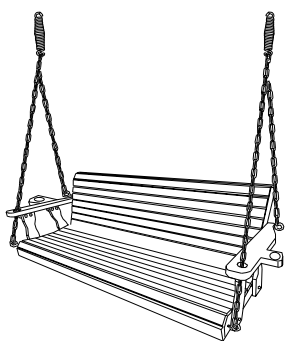


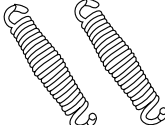 A (1 PC)	 B (1 PC)	 C (2 PCS)	 D (2 PCS)
 E (1 PC)	 F (1 PC)	 M6X50mm G (18 SETS)	 M10X65mm H (4 SETS)
 I (2 SETS)	 K (2 PCS)	 TOOLS INCLUDED	

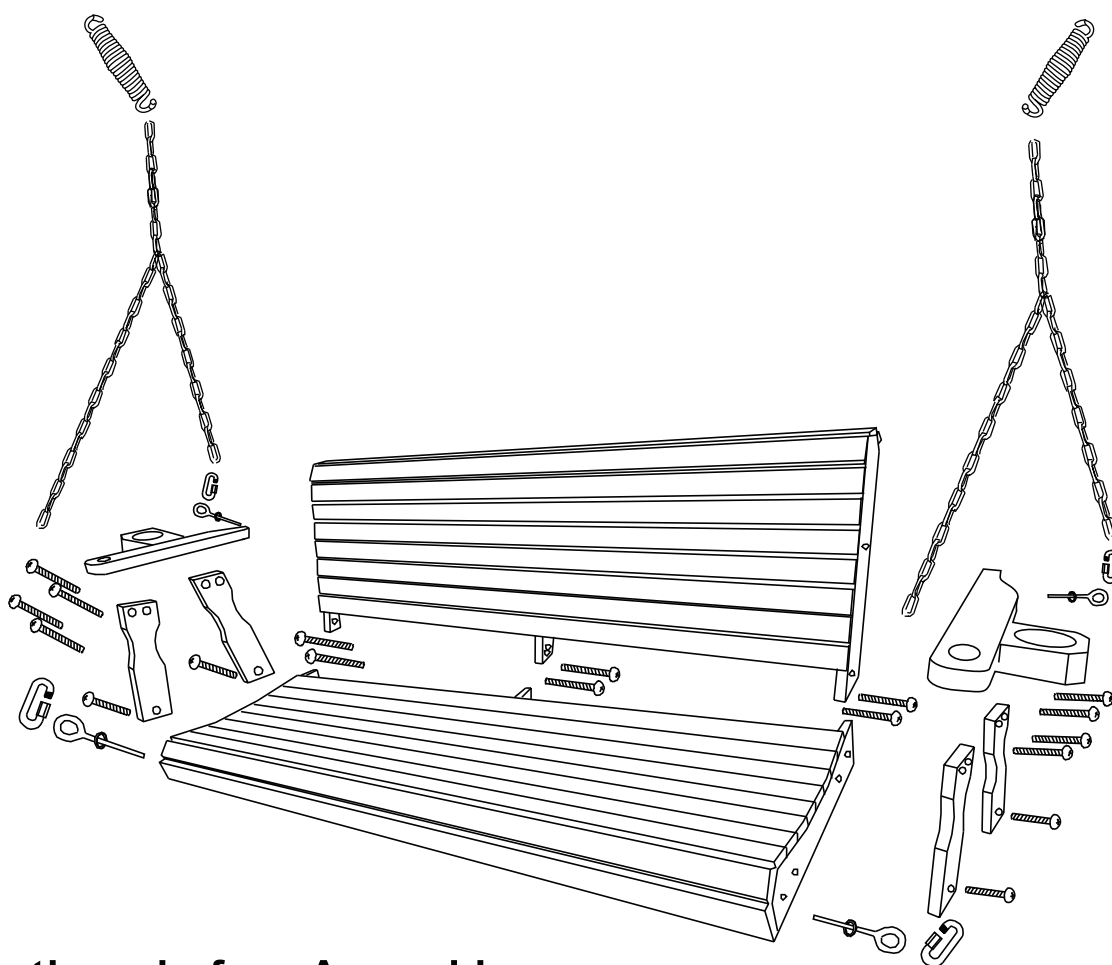


Precautions before Assembly

1. If any parts are scratched or damaged , please contact the seller or Innovaze customer service for partial refund and replacement parts.
2. The smell of PU wood paint will be greatly reduced after 1-3 days.
3. Do not tighten all screws until last step. Fixing a single wooden part too early may make other components difficult to assemble.

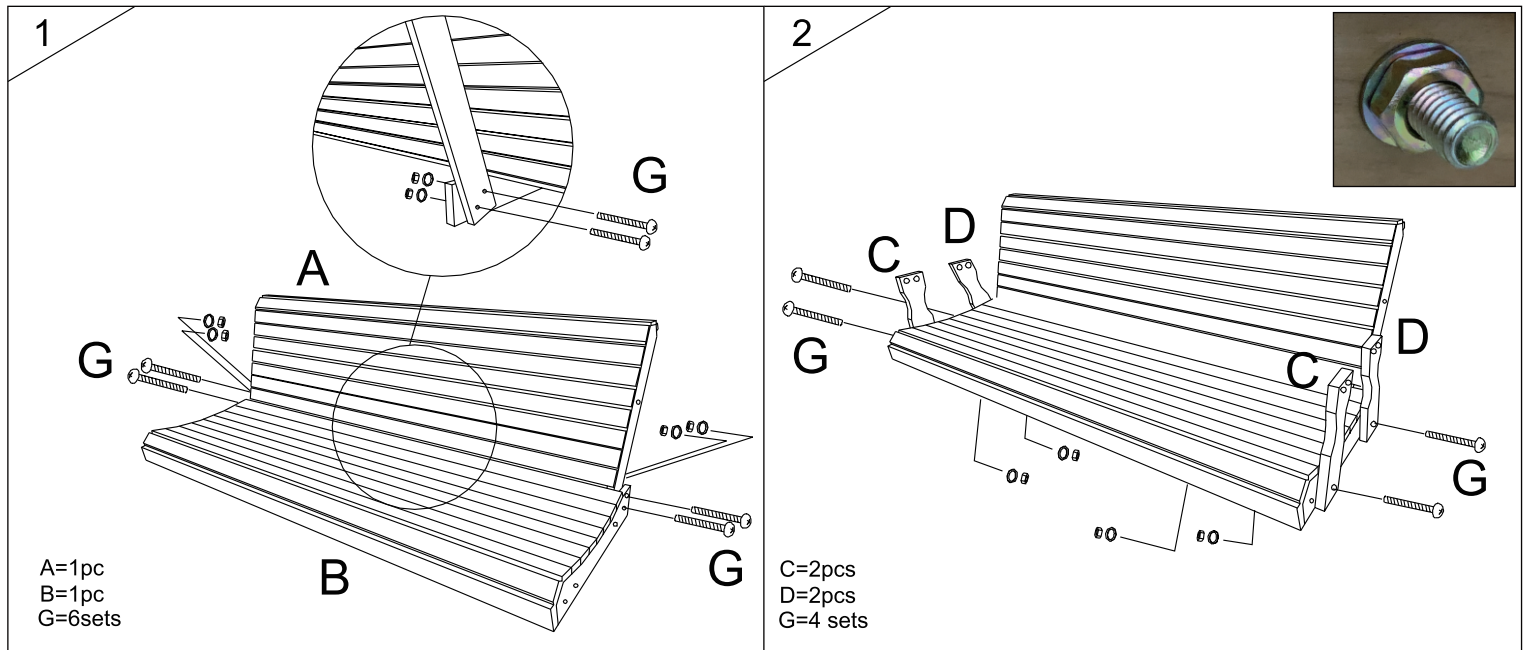

1. Note: Part A can be moved back and forth in a small amount to make the screw pass through the two holes smoothly.

2. Note: Please distinguish between Part C and D. The washer must be assembled on the same side as the nut.

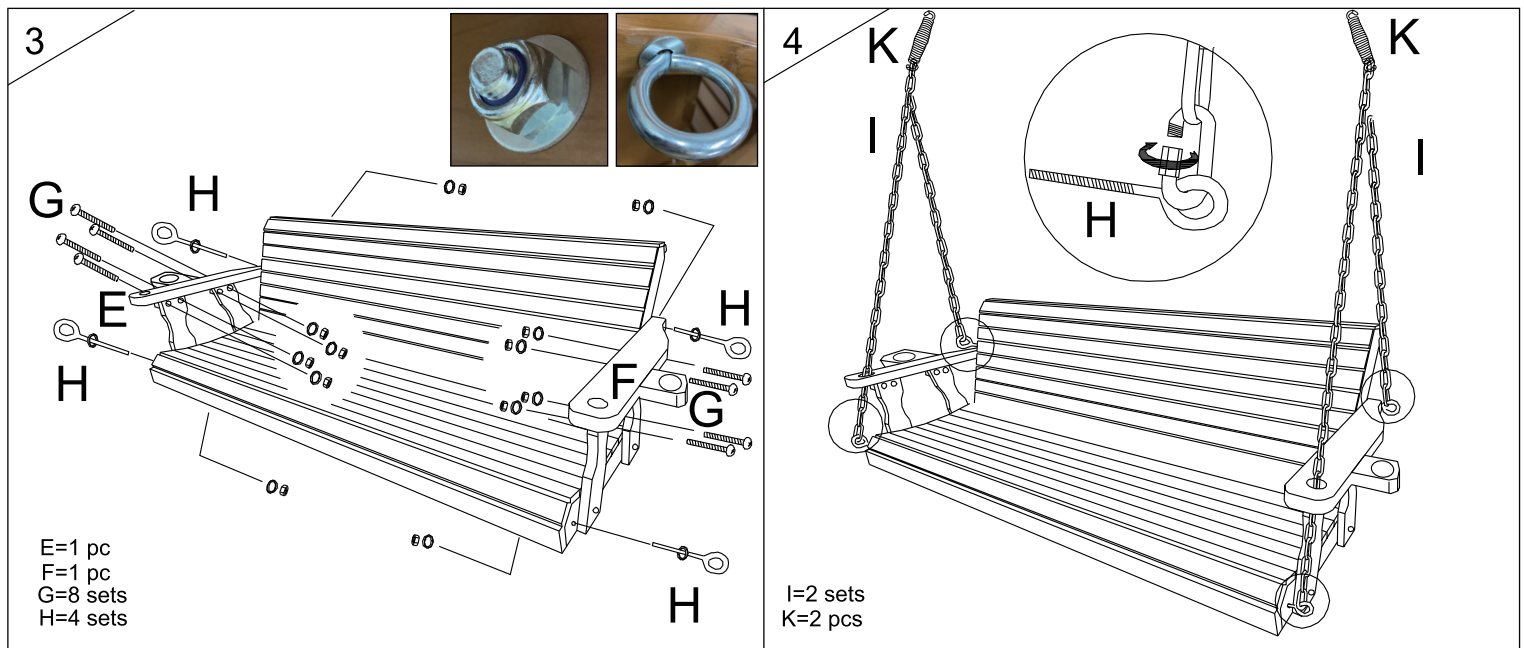

3. Note: Part H, the eyebolt, has two metal washers, one on the inside and one on the outside.

4. Note: Please use the tools provided to tighten all the screws (especially the eyebolts) to make the swing stable and have the maximum load-bearing capacity.