

Garden Hose Quick Connect Usage Manual

Installation

1. Connecting the Female Connector to the Hose

Slide the washer onto the end of the garden hose.

Push the female connector firmly onto the hose, ensuring the threads align and engage.

Rotate the connector clockwise to secure it in place.

2. Connecting the Male Connector to the Faucet or Nozzle

Thread the male connector onto the faucet or nozzle, rotating clockwise to tighten.

Ensure the connector is securely fastened and does not leak.

3. Connecting Hose to Hose

Connect the male end of one hose to the female end of another hose.

Rotate clockwise to tighten the connection and ensure a secure and leak-free fit.

4. Operation

To disconnect the fittings, simply rotate the male connector counterclockwise until it is loose and can be removed.

Repeat this process to disconnect any other fittings.

5. Maintenance

Regularly inspect all fittings for any signs of wear or damage.

Replace any worn or damaged fittings immediately to prevent leaks and ensure optimal performance.

6. Safety

Always ensure the water supply is turned off before connecting or disconnecting fittings.

Avoid overtightening fittings as this may damage the threads.

Keep fittings out of reach of children to prevent accidental misuse or injury.

7. Warranty

This product is backed by a 3-year warranty. If you encounter any issues with the fittings, please contact us for assistance.