

uspa Operating Instruction Manual

UB-6800



- Thank you for purchasing this USPA product.
- Carefully read this operating instruction manual for proper use of this appliance
- Save this manual and place in an easily accessible location.
- Register Warranty for proper service.
- We recommend that you change your water filter once every six months depending on the type of water that you have.

READ ALL OPERATING INSTRUCTIONS BEFORE INSTALLATION.

Notes

1. *This product should be installed according to this manual.*
2. *Read this manual carefully and install properly.*
3. *Save this manual and place in an easily accesible location.*
4. *Do not attempt to service this appliance yourself. Doing so could void the warranty.*

Table of Contents

PREPARATION

1. IMPORTANT SAFEGUARDS	1
2. CAUTIONS BEFORE INSTALLATION	1
3. IDENTIFICATION	3
4. SAFETY INFORMATION (DANGER)	4
5. SAGETY INFORMATION (WARNING)	6

USE

6. REMOTE CONTROL	8
7. CLEANING OF THE UNIT	12
8. MAINTENANCE	13

INSTALLATION

9.HOW TO INSTALL	14
------------------	----

ETC

10. BEFORE CALLING FOR SERVICE	17
11. SPECIFICATIONS	17
12. WARRANTY	18

1 Important Safeguards

1. READ ALL INSTRUCTIONS BEFORE USING

DANGER - To reduce the risk of electric shock:

1. Do not place or store this appliance where it can fall or be pulled into a tub or sink.
2. Do not place in, or drop into water or other liquid.
3. Do not reach for a product that has fallen into water. Unplug immediately.

WARNING - To reduce the risk of burns, electric shock, fire or injury to persons.

1. Close supervision is necessary when this appliance is used by or near the very young, the elderly or in invalids. Children should not be permitted to use or touch this appliance without the supervision of an adult.
Be sure to adjust the temperature of the toilet seat for the elderly, those who are incapacitated, or people with sensitive skin.
2. Use this appliance only for its intended purpose as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped, damaged or dropped into water.
4. Install the unit properly by following the installation procedure.
5. Only authorized persons can install or repair the unit. Do not attempt to service this appliance yourself. Doing so could void the warranty.
6. Keep the cord away from heated surfaces.
7. Never drop or insert any objects into any opening or hose.
8. Do not use outdoors. Do not use aerosol or oxygen spray products on the unit.
9. Always follow the grounding instruction in this manual before plugging in the unit.

SAVE THESE INSTRUCTIONS

2 Cautions before installation

1. NOTE THE FOLLOWING IMPORTANT POINTS

1. Do not install in a location where water might be splashed on this appliance or in a location exposed to such excessive moisture that condensation forms on the product's surface.
2. To avoid damage to electronic components due to high levels of humidity, provide adequate ventilation by opening a window and/or door when bathing. You may find operating an exhaust ventilating fan during these times of high humidity beneficial.
3. Use a water supply having a water pressure of 0.8kgf/cm² to 7.5kgf/cm²
4. Connect the product to a pipe carrying potable water. Do not connect to an industrial water line or other water supply that does not carry water of drinking quality.
5. In areas where water freezes in pipes in winter make arrangements to keep the pipes warm.
The water remaining in the unit may sometimes freeze during storage in winter. In that case, warm the unit in the room before installation.
6. The thermal protector in the water tank may sometimes trip during storage or transportation in warm weather causing non-operation. In that case, cool the unit in the room before installation.
7. The rated power voltage is 120V AC, 60Hz.
8. Do not supply electrical power to the unit until the plumbing installation work has been completed; it could cause malfunction

2 Cautions before installation

2. WIRING REQUIREMENTS

1. Any other servicing should be performed by an authorized service representative.

2. GROUNDING INSTRUCTIONS


This product should be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This product is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

DANGER-Improper use of the grounding plug can result in a risk of electric shock.

If repair or replacement of the cord or plug is necessary, do not connect the grounding wire to either flat blade terminal. The wire with insulating having an outer surface that is green with or without yellow stripes is the grounding wire.

Check with a qualified electrician or serviceman if the grounding instructions are not completely understood, or if in doubt as to whether the product is properly grounded.

3. This product is for use on a nominal 120V circuit, and has a grounding plug that looks like the plug illustrated in sketch A. A temporary adapter, which looks like the adapter illustrated in sketches B and C, may be used to connect this plug to a 2-pole receptacle as shown in sketch B if a properly grounded outlet is not available. The temporary adapter should be used only until a properly grounded outlet (sketch A) can be installed by a qualified electrician. The green colored rigid ear, lug and the like extending from the adapter must be connected to a permanent ground such as a properly grounded outlet box cover. Whenever the adapter is used, it must be held in place by the screw.

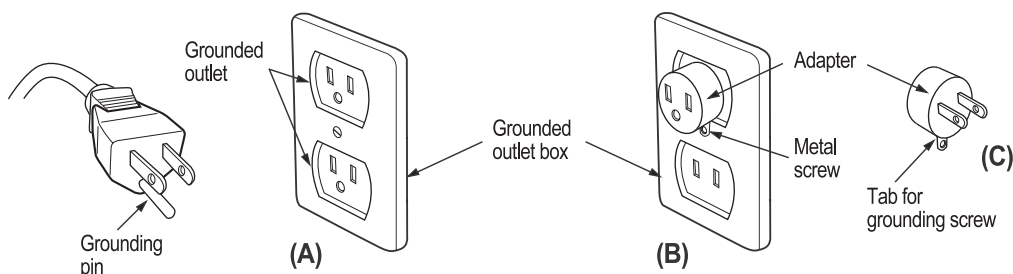

4. If it is necessary to use an extension cord, use only a three wire extension cord that has a three-blade grounding plug, and a three-slot receptacle that will accept the plug on the product. Replace or repair a damaged cord.


5. Remote control power : AAA(1.5V) , 3EA

CAUTION



**RISK OF EXPLOSION TO BATTERY IF REPLACED BY AN INCORRECT TYPE.
DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

3 Identification

1. Main unit

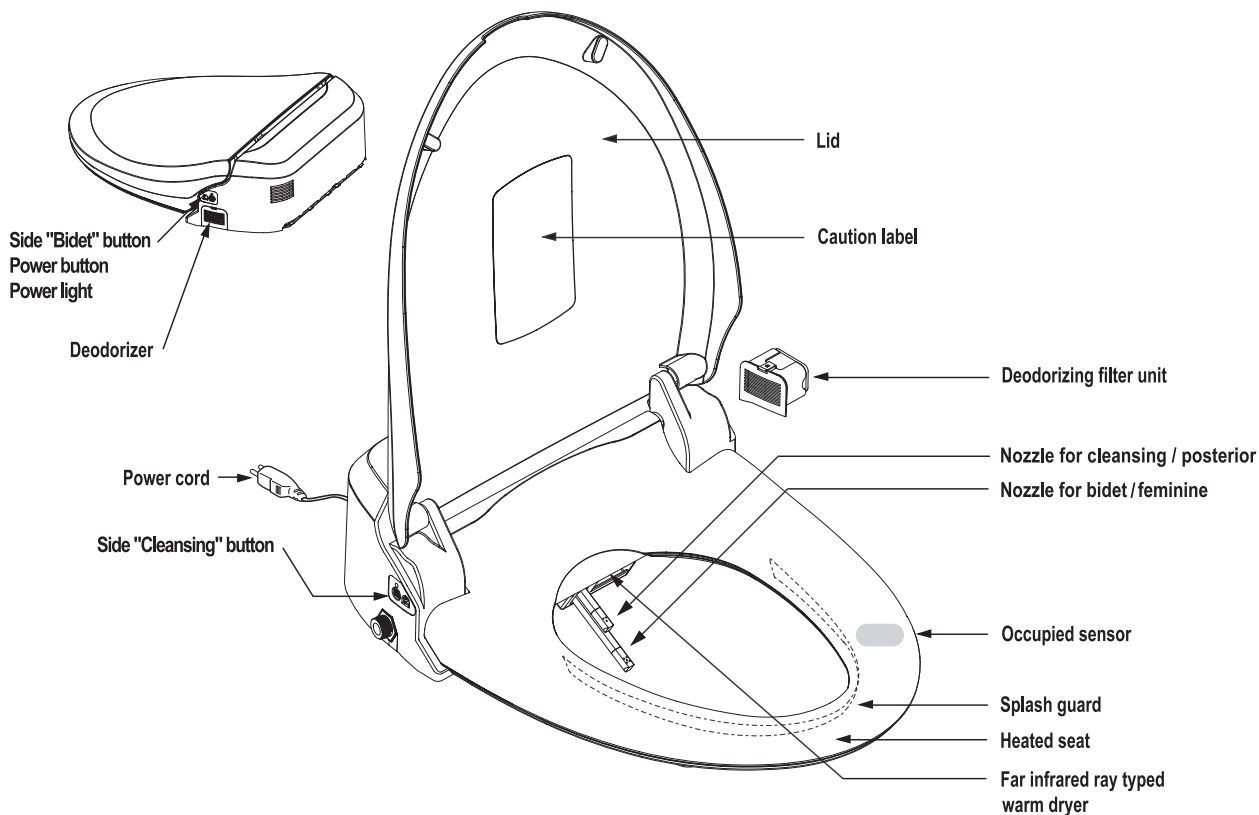

2. Accessories

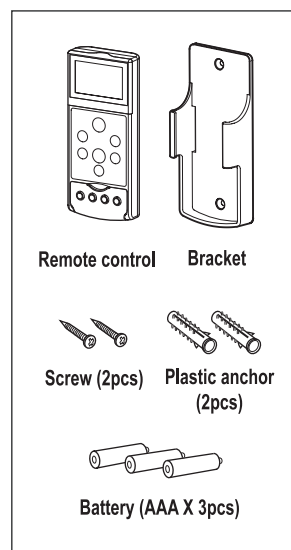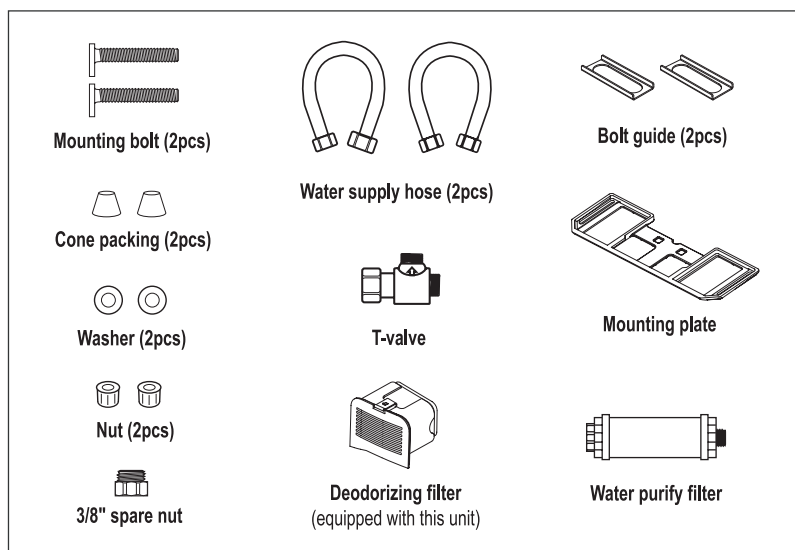



DANGER

Please follow basic instructions to ensure the safe use of your appliance



indicates a prohibited use of the appliance.



indicates a required step in use of this appliance.



Prohibited



Do not throw any firearms



Do not wash



Meanings of symbols



Do not handle with wet hands



Do not disassemble



Ground connection




Required step



PROHIBITED

Do not use a faulty or loose electric outlet or cord.

- Doing so may result in a short circuit, electric shock or fire.

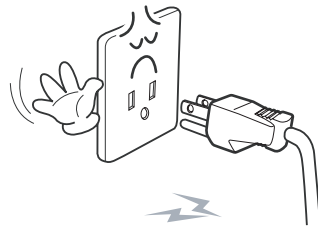

REQUIRED

Do not obstruct the warm air dryer outlet.

- If the outlet is obstructed with any objects, it may result in fire.
- If the outlet is obstructed with hands, it may result in injury.



NO FIREARMS

Do not throw anything flammable into the toilet.

- Doing so may result in fire.



DO NOT WASH

Do not wash this appliance with water.

- Doing so may result in fire or electric shock.



GROUND CONNECTION

Grounded wire or outlet must be installed

- Not doing so may result in short circuit, electric shock, or malfunction.





DANGER


Please follow basic instructions
to ensure the safe use of your appliance



PROHIBITED

Do not use too many appliances on one power strip


- Doing so may result in fire or damage.
- Be sure to use a dry and clean outlet.
- Do not use a faulty or loose outlet.

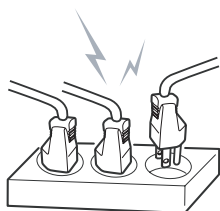

NO
WET HANDS

Plug and unplug properly


- Do not plug or unplug with wet hands. It may result in injury or short circuit.
- Do not grab the cord when unplugging. Pull out the plug properly.

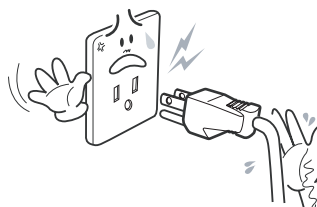

DO NOT
DISASSEMBLE

Do not use when the seat and lid are disassembled.

- Doing so may result in electric shock due to high voltage inside.

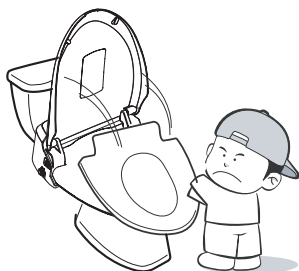

REQUIRED

Unplug when beeping or emitting a strange odor.

- Unplug right away.
- Contact your dealer where you bought this appliance.



DO NOT
DISASSEMBLE

Do not disassemble, repair or modify this appliance.


- Doing so may result in fire or electric shock.



PROHIBITED

Use tap potable water only. (ground water)

- Not doing so may cause irritation or injury to your skin.

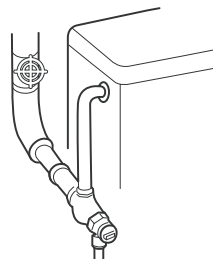

5 Safety Information (Warning)



Warning

Please follow basic instructions to ensure the safe use of your appliance



PROHIBITED

Do not step on or place heavy objects on this appliance.


- Doing so may damage the unit.
- Do not step on a lid, seat or control panel to avoid injury or damage.



REQUIRED

Do not force the lid to close


- Doing so may cause malfunction.

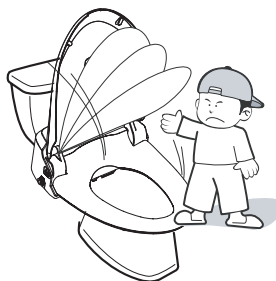

REQUIRED

Do not allow urine to come into contact with a nozzle or warm air dryer outlet.


- Doing so may result in unpleasant or failure of appliance.

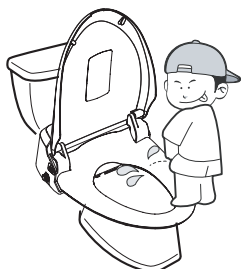

PROHIBITED


Do not sit or lean against the lid or control panel.

- Doing so may cause malfunction or breakage.

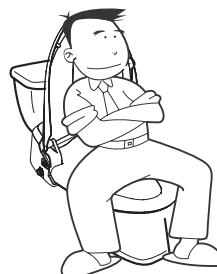

REQUIRED

Unplug while not using over extended period of time.

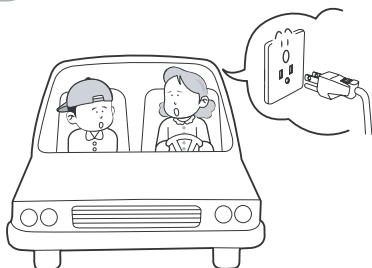

REQUIRED

Unplug while there is thunder or lightning.





Warning

Please follow basic instructions to ensure the safe use of your appliance



PROHIBITED

Do not pull out the waterhose forcefully

- Doing so may cause water leakage.



REQUIRED

Use this appliance on a toilet only.

- Not doing so may result in fire, injury or electric shock.



Improper use



PROHIBITED

Do not put a vase, water cup or small materials on this appliance.



PROHIBITED

Be aware of a low-grade burn.


- Sitting on the heated seat for a long time may result in a low-grade burn.
- Use care when being used by the following:
 - Children, senior citizens, patients, or others who can not control the temperature level
 - Sleeping pill users or people who are on medication that causes drowsiness
 - Those who are drunk or very tired may fall asleep while sitting on the unit



REQUIRED

Unplug when cleaning.


- Not doing so may result in fire or electric shock.

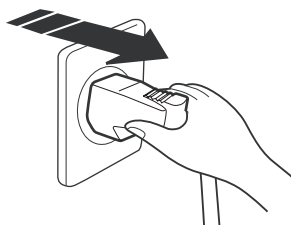

REQUIRED

Use the low temperature for children and disabled.

- High temperature may result in burns due to not recognizing the temperature.

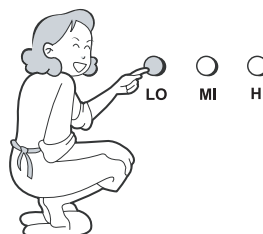

6 Remote Control Operating Instructions

※ Caution

- Dropping the remote control in water may cause it to malfunction.
- Functions (except "Cleaning") are operational when the seat is occupied.
- Before operating be sure that the water tank is completely filled.

Stop

- Press "Stop" to stop current operation.
- When a user stands up, all operations will stop automatically.

Cleansing

- Press "Cleansing" for posterior wash. The function will stop automatically in 60 seconds.
- Press this button again to activate oscillation. The nozzle moves back and forth automatically to widen cleansing area.
- Oscillation wash stops if this button is pressed again.

Bidet

- Press "Bidet" for feminine wash. The function will stop automatically in 60 seconds.
- Press this button again to activate oscillation. The nozzle moves back and forth automatically to widen cleansing area.
- Oscillation wash stops if this button is pressed again.

Dryer (far - infrared warm air)


- Press "Dry" after "Cleansing" or "Bidet". Far-infrared ray typed warm air will be emitted for 3 minutes.
- To alter the strength of air drying, press this button again.


IIP (intensive impulse pulsation)

- Press "IIP" for easy defecation. Intensive water pulsation may help you to have easy defecation.
- This function will stop in 60 seconds automatically.
- Press "IIP" again to changing the pulsation mode.

Kids

- Press " Kids" to change all functions to be suitable for children : 1 minute for oscillation 3 minutes for drying, level 1 of water pressure, and level 5 of nozzle position.
- This unit should be used under the supervision of an adult.

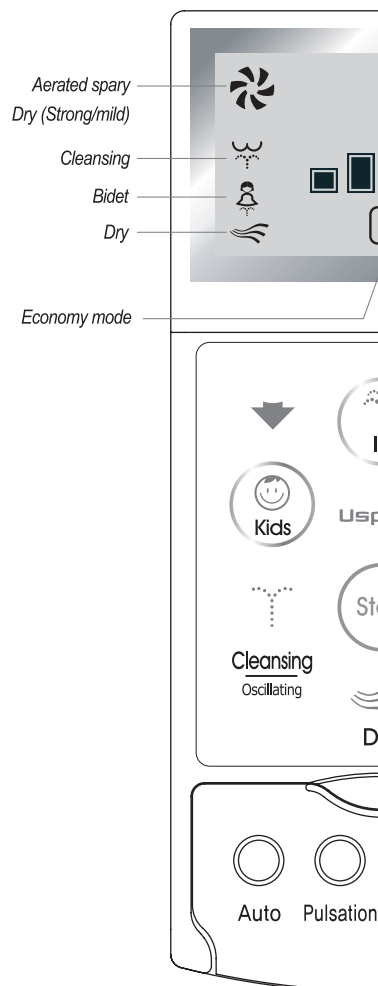

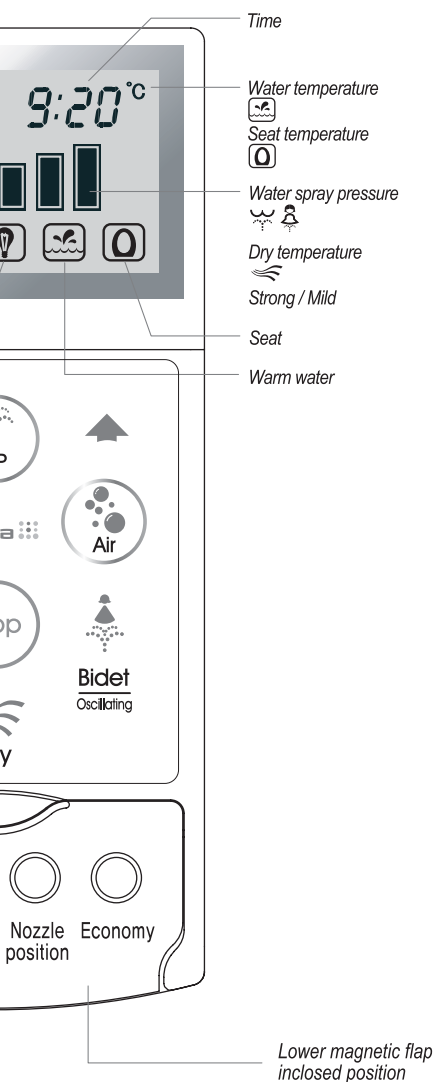

Air (aerated spray)

- Press "Air" to use aerated wash to clean. This gentle, but strong, spray saves water consumption.
- Aerated spray is released if this button is pressed again.
- If not released this function will always stay on in "Cleansing" mode.

Water pressure / Dry temperature

- Water spray pressure can be adjustable by pressing up or down arrows to 5 levels. ▼ · ▲
- Drying temperature can be adjusted by pressing up or down arrows to 5 levels.
- Both levels will default to level 3 after each use.

Auto (with lower flap in closed position.)

- Press "Auto" and oscillating "Cleansing" wash will come on intermittently after 20 seconds followed by drying cycle.
- If "Bidet" Auto is wanted, press "Bidet" and "Auto" consecutively.

Pulsation (with lower flap in closed position.)

- Press "Pulsation" to activate rhythmical wash for massage effect.
- Press "Pulsation" again to release this function.

Nozzle position (with lower flap in closed position.)

- Press "Nozzle Position" then press up or down arrows to adjust nozzle position. ▼ · ▲
- Nozzle position will default to level 3 after each use.

Economy

- Press "Economy" to activate the power saving function. The unit goes into economy mode 1 hour after being used.
- In the economy mode, temperature of water and seat will be kept at 30 degrees Celsius.
- The economy bulb icon will show on the remote control and the power light on the left side of the unit will be green.
- When the unit is occupied during the economy mode, the temperature will return to original settings. It goes back to economy mode again in 1 hour.
- Press "Economy" again to release this function. The power light on the left side of the unit will be red.

When the power is plugged in initially, nozzles for feminine/bidet wash and posterior/cleansing wash will each come out in turn.

Water/Seat temperature adjustment

(with lower flap open)

- Press "Water" while on or off unit.
- Press again to adjust water temperature to 34 °C, 37 °C, 40 °C, or off (room temperature)
- Press "Seat" while on or off unit.
- Press again to adjust seat temperature to 34 °C, 37 °C, 40 °C, or off (room temperature)

Cleaning (with lower flap open)

- Press "Cleaning" Button while off unit to clean nozzles manually. Cleansing/Posterior nozzle will come out. Do not forcefully push, pull, or bend the nozzles. See cleaning instructions on page 14.
- Press "Cleaning" button again. Cleansing/Posterior nozzle will retract and Bidet/ Feminine nozzle will come out.
- Press "Stop" to return nozzles to stand-by mode.

Time setting (with lower flap open)

- Press "Time" once to set the hour by pressing up and down arrows. ▼ ▲
- Press "Time" twice to set the minute by pressing up and down arrows. ▼ ▲
- Time will be reset if batteries are changed.

Automatic deodorization

- When the appliance is in use, the deodorizer will work automatically. (maximum 20 minutes)
- When the user stands up, deodorization stops after 60 seconds.

Self cleaning

- Nozzles are cleaned by automatically rinsing off before and after every use.

Self-diagnosis system


- The power indicator LED light on the side of the unit will flash if the appliance has a problem.
- Unplug and contact service center immediately.

Do not forcefully push or pull the nozzles or bend them. It may result in failure.




Side control buttons

- Use side control buttons on unit when remote control is broken or its batteries are dead.
- Press "Cleansing" on right side or "Bidet" on left side to start.
Press again to stop. Do not use sharp items to press buttons.

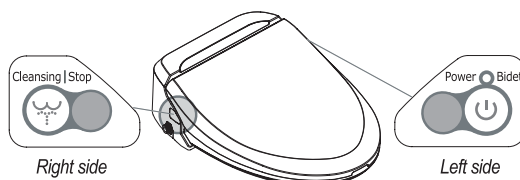

Identification

- If there is only one unit in the room, you do not need the following instructions.
- These instructions are for public toilets where more than one unit is installed.
To prevent interference among units, main unit and remote control should be set with the same ID.
- Initial ID of remote control and main unit are "0". (1d:00)
- The ID has 16 choices (0-15)

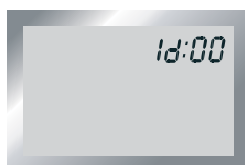

How to set ID

Remote control

- Press "stop" for 5 seconds and 1d:00 shows up in display.
- Press ▼▲ until your ID appears in display.(00~15)
- Press "Stop" again to set ID, and display will return to stand-by mode.

Main unit

- After setting the ID of the Remote Control, plug in and press "Power/Bidet" on the left side of the main unit to turn it off without sitting on the toilet seat.
- Press "Stop" on the Remote Control which is modified with ID as pressing "Power/Bidet" for 1 second at least.
- It will be operated through the setting ID in case of a blackout or a reactivating after unplugging since the ID of the body will be preserved eternally after setting up.

Warning

- It won't be operative in case there are different ID between the Remote Control and the bidet. Make sure whether both sides are set with the same ID or not.
(At the primary stage, the respective ID numbers of the Remote Control and the bidet are "0")


7 Cleaning of Unit

Nozzle cleaning




Do not forcefully push or pull the nozzles, or bend them. It may result in failure.
Make sure to use "Cleaning" button on the remote control.

- 1 Make sure the occupied sensor is not activated.
(Do not sit on the seat or not place hands on the seat sensor.)
- 2 Press "Cleaning" button on remote or "FR" button on control panel.
Posterior (cleansing) nozzle comes out.
Press "Cleaning" button again on remote or "BK" button on control.
Feminine (bidet) nozzle comes out.
Press this button again, feminine nozzle comes out.
- 3 Do not forcefully push or pull the nozzles, or bend them
- 4 Use a toothbrush or soft cloth to clean nozzles.
- 5 Press "Stop", and nozzle will return to stand-by mode.
Do not lose or change tips.
Do not retract nozzles without a nozzle tip. It may result in malfunction.

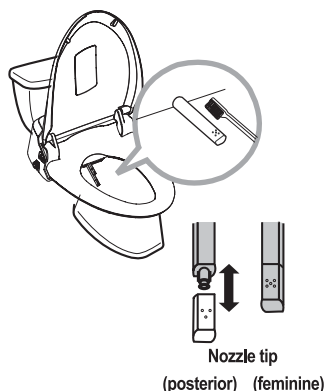

Strainer maintenance

This appliance will not operate properly if the strainer is clogged.
Be sure to clean the strainer regularly.

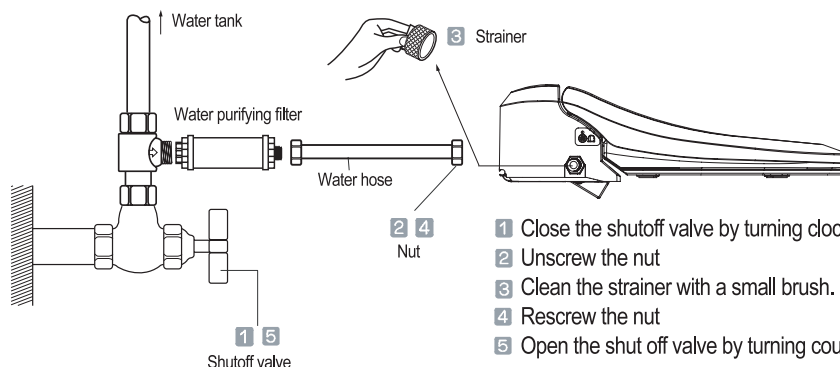

- 1 Close the shutoff valve by turning clockwise.
- 2 Unscrew the nut
- 3 Clean the strainer with a small brush.
- 4 Rescrew the nut
- 5 Open the shut off valve by turning counter clockwise.

Cleaning the body


- 1 Regularly wipe off the seat with a dry soft cloth or sponge, or wash with a damp cloth and mild detergent.
- 2 Release the lid.
 1. Pull the lift hinge to the left and upward.
 2. Release the right hinge, being careful not to catch fingers.
- 3 For care of plastic unit, only use mild cleansers.
(Do not use toilet cleansers, home cleansers, bleach, benzene, paint thinner, cresol (Lysol),




8 Maintenance

Draining water - while not using over extended period of time

- 1** Unplug the power supply cord.
■ Not doing so may cause electric shock or fire.

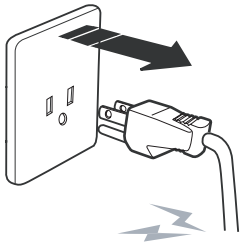


- 2** Close the shutoff valve.

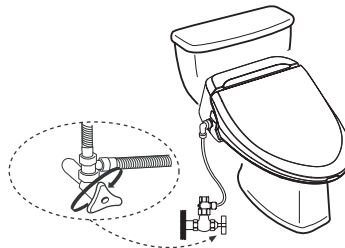

- 3** Unscrew the mounting bolts.
■ Refer to the installation procedure. (page 16)



- 4** Raise the unit and thoroughly drain the water by unscrewing the drain bolt from the closed position.
(Do not lose the drain bolt.)

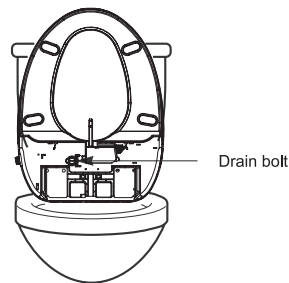

- 5** Screw drain bolt back to closed position and reinstall the unit.
■ Refer to the trial operation procedure (page 18) before using appliance again.

Preventing freezing

- 1** Make sure the power cord is properly plugged in.



- 2** Set the water temperature to low or middle.
(Freezing can be prevented by thermal efficiency of water tank.)
■ If there is no heating system in the toilet, wrap pipes with cloth or other materials.

- 3** If not using the appliance for an extended time in winter, unplug thoroughly and drain the water from the water tank and pipes.
■ Refer to the "Drain water" procedure above.

9 How to install



Do not plug in until installation is finished completely.
Not doing so may damage the appliance.

If electric work is needed, contact to a qualified electrician or serviceman only.

Remove the existing toilet lid and seat


1. Remove the nuts, washers and cone packings from the toilet seat mounting bolts in the back of the toilet.
2. Remove the toilet seat, lid and mounting bolts.
3. Keep them in case of installation.

Install the appliance

Installation

How to mount the plate

Place the plate and guides over each mounting hole. Insert the mounting bolts through the plate and mounting holes, and slide cone packings and washers onto the bolts.

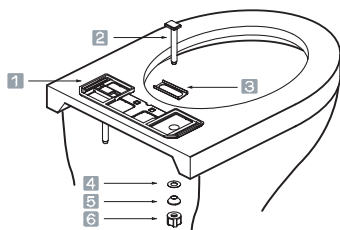


1 Mounting plate
4 Washer

2 Mounting bolt
5 Cone packing

3 Guide
6 Nut

How to attach the unit

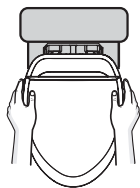

Slide the unit until it clicks into plate.


How to detach the unit



Lift the unit up and forward.


Toilet size (Elongated & Round front)

- The toilet dimensions must be within those shown below. Do not install this appliance on a toilet that does not meet those dimensional requirements.

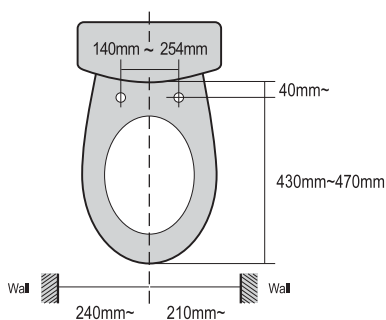


Occupied sensor

- This appliance is equipped with occupied sensor.
- Unit will not work unless seat is occupied.

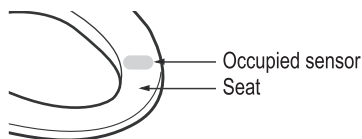

Remote control unit

How to Insert batteries

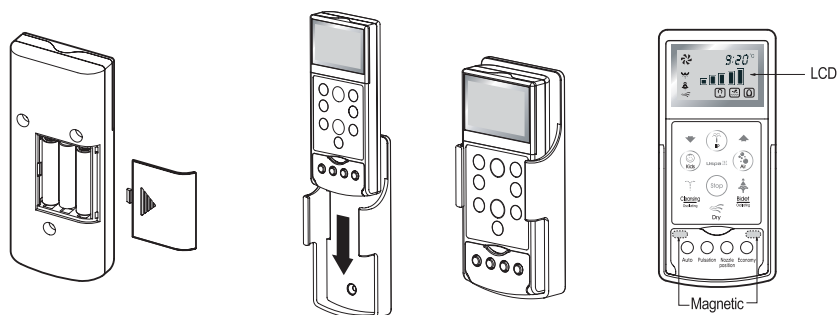


1. Open the battery lid of remote control and insert 3 AAA batteries into battery compartment.
2. Check that the display appears properly.
3. Check that the remote control works properly while seat is occupied.


- Use 3 AAA batteries only. Do not use rechargeable batteries.
- Do not use old and new batteries together. Use same type of batteries only.
- Make sure that all batteries are inserted in their correct positions.
- Remove the batteries if the remote control is not used for a long time.
- LCD will fade or blink if the batteries reach the end of their life.
- Settings (time, power saving mode) will be lost when batteries are replaced.

How to attach remote control bracket to wall.

 
Use double sided tape



Use screw with plastic anchor

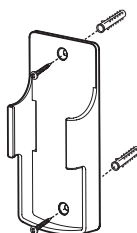


Recommended position of remote control bracket.

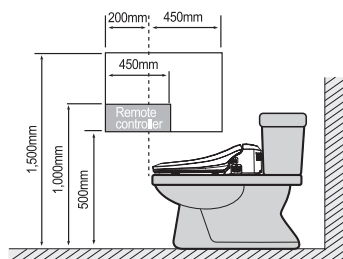

- Keep the remote control unit in the bracket to prevent damage by dropping.

Connecting the water hose

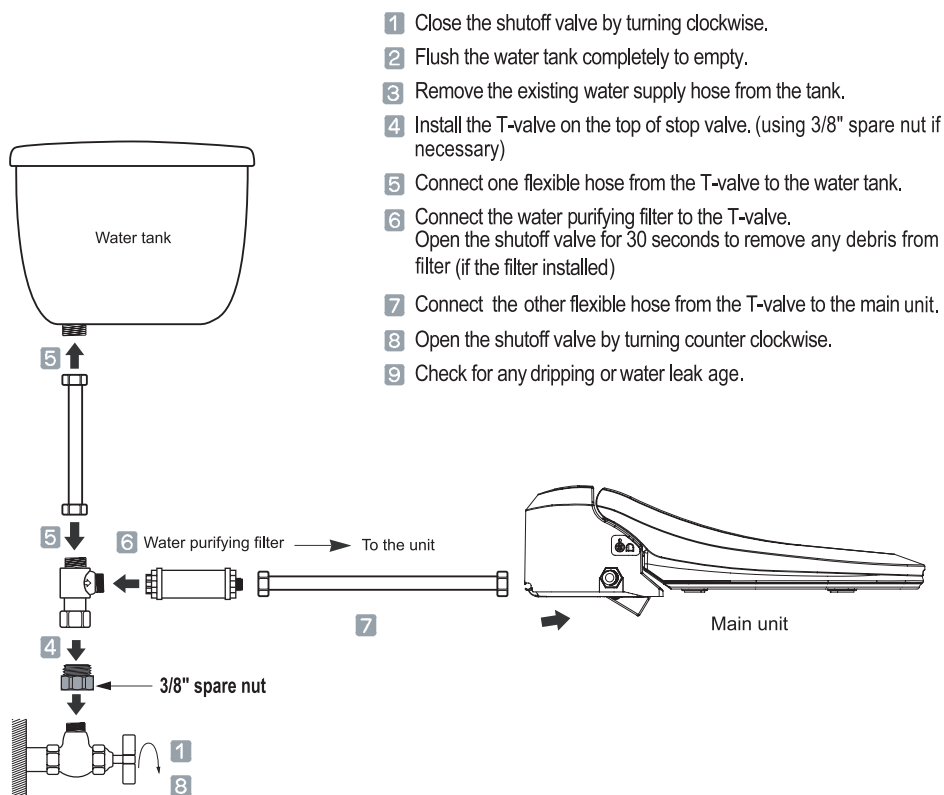

※ Water filter is optional.

Trial operation

1. Preparation

Open the shutoff valve and check for any water leaking or dripping.
 Plug the power cord into the outlet.
 Press the "BIDET" or "CLEANSING", the water tank will be filled with water in 2 minutes.
 After the water tank is filled up, you will hear long buzzer sound.

2. Checking all functions

Cover the toilet bowl using the plastic wrapping sheet of the unit to prevent water from being sprayed out of the toilet.
 Then check all function described in this manual.

10 Before calling for service

Problem	Possible cause	Solution
Completely fails to work	Is there a power outage? Is the power cord unplugged? Are you sitting on the seat correctly?	Check for a power failure or a tripped breaker Plug the power cord in properly Sit on the seat correctly to activate sensor.
Water does not spray	Is the water shutoff valve closed? Is the strainer clogged? Are the nozzles clogged? Is the water purifying filter clogged?	Check for any water leaking or dripping Clean the strainer Clean the nozzles Change the water purifying filter
Water is leaking or dripping	Are all hoses tightened properly?	If water is still leaking or dripping, contact your dealer
Seat, water or air is not warm enough	Is the temperature set to OFF? Is the appliance set on economy mode?	Reset the temperature Release the economy function

11 Specifications

Item		UB-6800
Standard power supply		AC 120V 60Hz 660W
Water supply	Way of connection	Direct connection to tap water
	Water pressure	0.08MPa ~ 0.75MPa
Clean-sing	Spray for cleansing	900 ± 100ml/min
	Spray for bidet	900 ± 100ml/min
	Water capacity	800 ml
	Spray temperature	Room Temp ~ 40°C (104°F)
	Heater capacity	600W
Dry	Safety feature	Thermal switch, Temperature fuse, Floating switch
	Air temperature	Room temp ~ 60°C (140°F)
	Heater capacity	250W
	Safety feature	Temperature fuse
Heated seat	Seat temperature	Room temp ~ 40°C (104°F)
	Heater capacity	55W
	Safety feature	Temperature fuse
Deodorization method		Catalytic filter
Circuit breaker		Within 15mA 0.03 second
Length of power cord		1.2m
Dimensions	Elongated	(W)392mm X (L)520mm X (H)143 (W)15.43inch X (L)20.47inch X (H)5.62inch
	Round front	(W)392mm X (L)500mm X (H)143 (W)15.43inch X (L)19.68inch X (H)5.62inch
Weight		4.4Kg(9.7lbs)

※ Recommended water supply pressure is 0.1MPa~0.69MPa

※ Under 0.1Mpa pressure, water spray pressure might not be adequate.

WARRANTY

USPA Personal Hygiene Appliance Limited Warranty

- We warrant our products to be free from manufacturing defects under normal use and service for a period of one (1) year from date of your purchase. Only the ORIGINAL PURCHASER you may make a claim under this limited warranty.
 - Our obligation to you under this warranty is limited to repair or replacement, at our option, of defective products or parts, provided that the products were properly installed and used in accordance with instructions. We reserve the right to make inspections in order to determine the cause of the defect. We will not charge for labor or parts in connection with warranty repairs or replacement. We are not responsible for the cost of removal, return and/or reinstallation of products.
 - This limited warranty does not apply to:
 - a) Damage or loss from a fire, earthquake, flood, storm, etc
 - b) Damage or loss resulting from any unreasonable use, abuse, negligence, or improper maintenance.
 - c) Damage or loss from improper installation, removal, repair, or modification.
 - d) Damage or loss resulting from sediment or other matters contained in your water system.
 - This warranty gives you specific legal rights.
 - For warranty or service information, please contact your dealer where you bought this appliance or us.
 - Only the original purchaser may submit a claim under this limited warranty. To activate your warranty, complete this form.
 - This limited warranty is our only warranty covering your product. Repair or replacement as provided under this warranty shall be the exclusive remedy available to you. We shall not be responsible for loss of the product or for other incidental, or consequential damage or expenses you may incur or for labor or other costs due to installation or removal, or cost or repairs by others, or for any other expense not specifically stated above. Except to the extent prohibited by applicable law, any implied warranties, including that of merchantability or fitness for use, are expressly limited to the duration of this warranty.
- ※ Warning! We are not responsible or liable for any failure of, or damage to, this plumbing product or product component caused by in-tank bowl cleaners containing chlorine(calcium hypochlorite).
- ※ Note : The use of high concentration of chlorine related products can seriously damage the fittings. This damage can cause leakage and serious property damage.

For more information, please contact your dealer or us.

Purchase Date _____ Purchased From _____

Invoice # _____ Amount Paid _____ Serial # _____

Address _____ City _____ State _____ Country _____ Zip _____

Phone _____ Fax _____ E-mail _____

Mail, email or fax the warranty form to :

BBC INNOVATION

205 Berg St., Algonquin, IL 60102

Phone : 847_854_7292 Fax: 847_854_1296

E-mail : support@biobidet.com <http://www.biobidet.com>

if your dealer is unable to assist you,

SAMHONGTECH CO., LTD.

4th floor, Inhee Building, 52-1 Cheongdam-dong, Gangnam-gu, Seoul, Korea

TEL:82-2-3449-2341, FAX:82-2-3449-2309

E-MAIL : overseas@samhongtech.co.kr <http://www.samhongtech.co.kr>

Great products for your healthy living !



BBC INNOVATION

205 Berg St., Algonquin, IL 60102

Phone: 847_854_7292

Fax: 847_854_1296

E-mail: support@biobidet.com

www.biobidet.com