

ASSEMBLY



WARNING: To avoid serious personal injury and damage to the unit, shut the unit off before removing or installing blower tubes or nozzles.



WARNING: To prevent serious personal injury, never operate the unit without the upper blower tube firmly installed.

ASSEMBLING THE UNIT

- **Always install the upper blower tube.**
- Only use the nozzle to concentrate and intensify the air flow when needed. **DO NOT** use the nozzle for general work or for long periods.

Installing the Upper Blower Tube

1. Set the unit on a flat, level surface.
2. Align the slot on the upper blower tube with the tab on the blower outlet (Fig. 1).
3. Push the upper blower tube onto the blower outlet until the tab locks securely into the slot (Fig. 1).

Installing the Nozzle

1. Set the unit on a flat, level surface.
2. Align the tab on the nozzle with the hole on the upper blower tube (Fig. 2).
3. Push the nozzle into the upper blower tube until the tab locks securely into the hole (Fig. 2).

Removing the Nozzle

1. Set the unit on a flat, level surface.
2. Firmly press the tab on the nozzle inward and pull the nozzle out of the upper blower tube (Fig. 2).

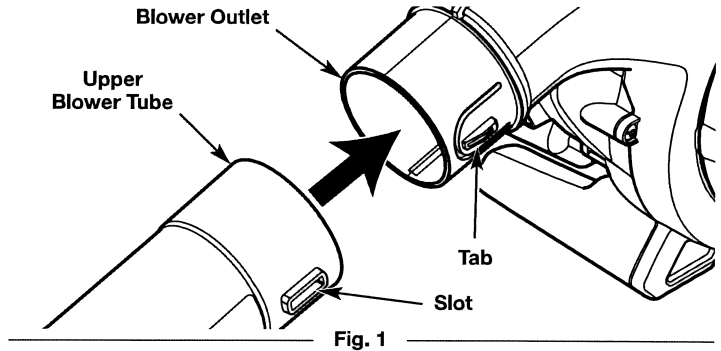


Fig. 1

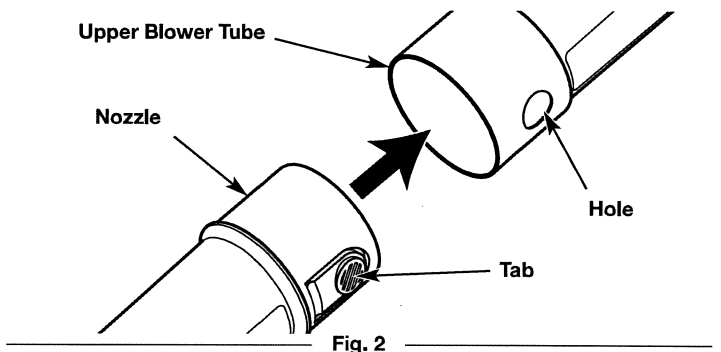


Fig. 2