



# STAINLESS STEEL PORTABLE TUMBLE DRYER

ITEM: 99816



## OWNER'S MANUAL AND SAFETY INSTRUCTIONS

SAVE THIS MANUAL: KEEP THIS MANUAL FOR SAFETY WARNINGS, PRECAUTIONS, ASSEMBLY, OPERATING, INSPECTION, MAINTENANCE AND CLEANING PROCEDURES. WRITE THE PRODUCT'S SERIAL NUMBER ON THE BACK OF THE MANUAL NEAR THE ASSEMBLY DIAGRAM (OR MONTH AND YEAR OF PURCHASE IF PRODUCT HAS NO NUMBER)

FOR QUESTIONS PLEASE CALL OUR CUSTOMER SUPPORT: 909.628.0880 MON-FRI 9AM TO 3PM PST



## GENERAL SAFETY WARNINGS

Read all safety warnings and instructions. Failure to follow the warnings and instructions may result in fire, electric shock and/or serious injury. Save all warnings and instructions for future reference.

## SAFETY

---

The warnings, precautions, and instructions discussed in this instruction manual cannot cover all possible conditions and situations that may occur. It must be understood by the operator that common sense and caution are factors which cannot be built into this product, but must be supplied by the operator. Read carefully and understand all **ASSEMBLY AND OPERATION INSTRUCTIONS** before operating. Failure to follow the safety rules and other basic safety precautions may result in serious personal injury.

- Clothes dryer installation must be done by a qualified installer.
- Install clothes dryer according to the manufacturers instructions and local codes.
- Risk of child entrapment and suffocation; never allow children to operate, play with, or crawl inside the appliance.
- This appliance must be grounded. Connect only to a properly grounded outlet.
- Install or locate the appliance only in accordance with the provided installation instructions.
- **DO NOT** place the dryer in steamy rooms or where the dryer is directly exposed to rain. Moisture may destroy the electrical insulation causing an electrical shock hazard.
- Use the dryer only for its intended use as described in the user guide. This type of dryer is specifically designed to dry clothes. It is not designed for industrial or laboratory use.
- As with any appliance, close supervision is necessary when used around children or incapacitated persons.
- **DO NOT** operate the dryer if it has a damaged power cord or plug, if it is not working properly, or if it has been damaged or dropped in any manner.
- The dryer should be serviced only by qualified service personnel. Contact the nearest authorized service facility for examination, repair, or adjustment.
- **DO NOT** cover or block any openings on the appliance.
- **DO NOT** put your hand in the spin basket during operation. The spin basket is rotating at a high speed and the rotating parts may cause injury to your hand.
- **DO NOT** immerse the power cord or plug in water.
- Keep the cord away from all heated surfaces.
- **DO NOT** store or use gasoline or any other flammable vapors and liquids in the vicinity of this or any other appliance. The fumes can create a fire hazard or explosion.
- **DO NOT** install a clothes dryer with flexible plastic venting materials. If flexible metal foil is installed, it must be a specific type identified by the appliance manufacturer as suitable for use with clothes dryers. Flexible venting materials are known to collapse, be easily crushed and trap lint. These conditions will obstruct the dryer airflow and increase the risk of fire.
- Improper connection of the equipment-grounding conductor can result in electric shock by providing a path of least resistance for electric current.

# IMPORTANT SAFETY INFORMATION

- **DO NOT** place the dryer on horizontal ground. **DO NOT** place on the carpet as this will block the intake. There should be at least 10cm between the dryer and the walls.
- **DO NOT** wash directly with water, thinner, gasoline or alcohol.
- **DO NOT** use a spray cleaner to clean the interior of the dryer, clean with a damp cloth instead.
- Remove any residue before drying the next load.
- This product is not intended for outdoor use.
- **DO NOT** locate this appliance near any heat sources such as heaters, radiators, air ducts or direct sunlight.
- **DO NOT** block any of the ventilation openings. Ensure the vents are not covered.
- **DO NOT** run the cord under any floor coverings such as carpet or rugs. Keep the cord away from high traffic areas.
- To disconnect the appliance, turn the power off on the Dryer, then turn the power off on the power outlet, then unplug the machine.
- **DO NOT** place items that have been soiled in flammable liquids inside the dryer without washing them thoroughly by hand first.
- **DO NOT** overload the tumble dryer.
- **DO NOT** tamper with the controls.
- **DO NOT** use fabric softeners or products to eliminate static unless recommended by the manufacturer.
- The interior of the appliance and exhaust dust duct should be cleaned periodically by qualified service personnel.
- **DO NOT** place items exposed to cooking oils in your dryer. Items contaminated with cooking oils may contribute to a chemical reaction that could cause a load to catch fire.
- **DO NOT** allow foreign objects in the dryer.
- Clean the lint screen before or after each load.
- **DANGER!** Never allow children to operate, play or crawl inside the appliance.



**SAVE THESE WARNINGS**



# FEATURES AND SPECIFICATIONS



## FEATURES

- Lightweight
- Portable
- Great for apartments, condos and lofts
- See-through window
- Wall mounting kit included
- Features auto dry and timed settings
- Coordinates great with small washers
- Can be plugged into any 110V outlet
- Dimensions: 27.6" H x 23.6" W x 17.1" D
- Wattage: 1400W

# PARTS DIAGRAM

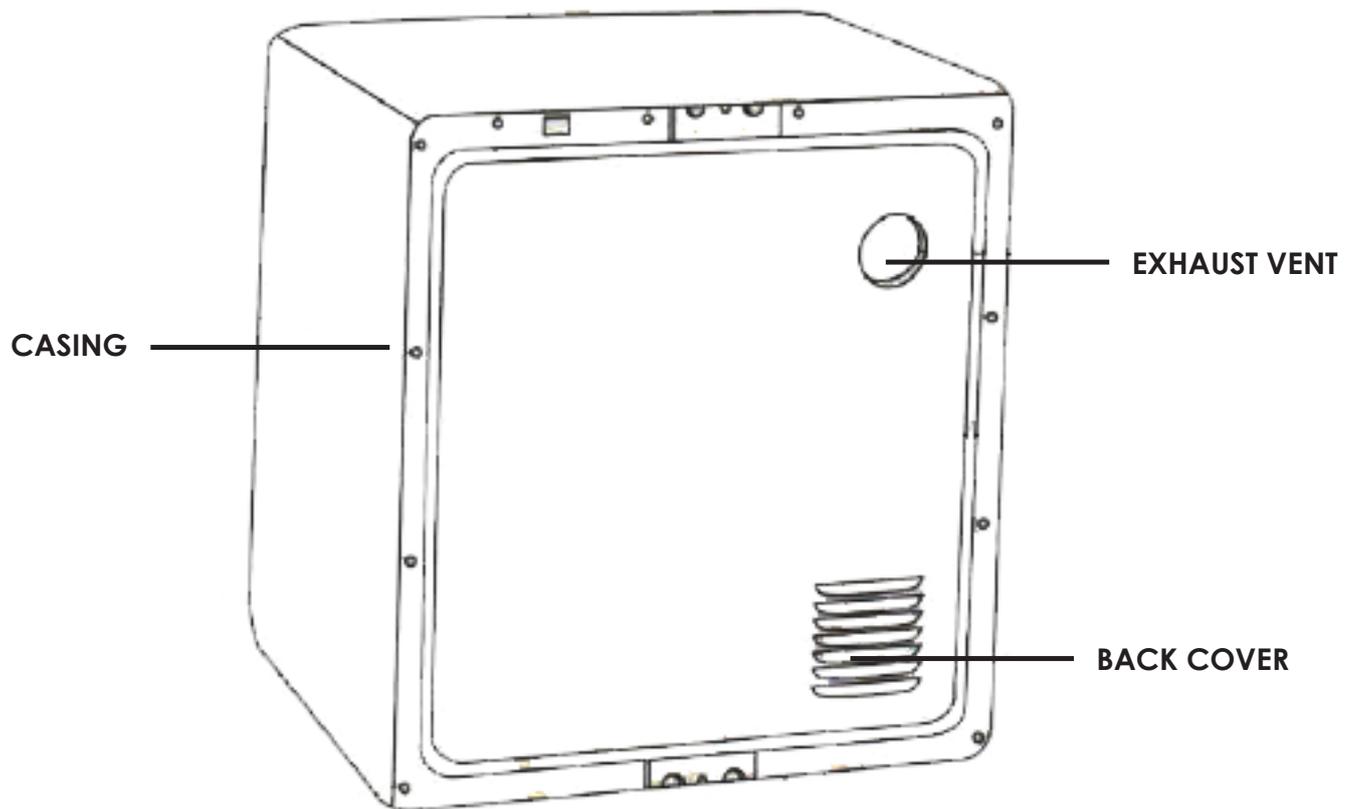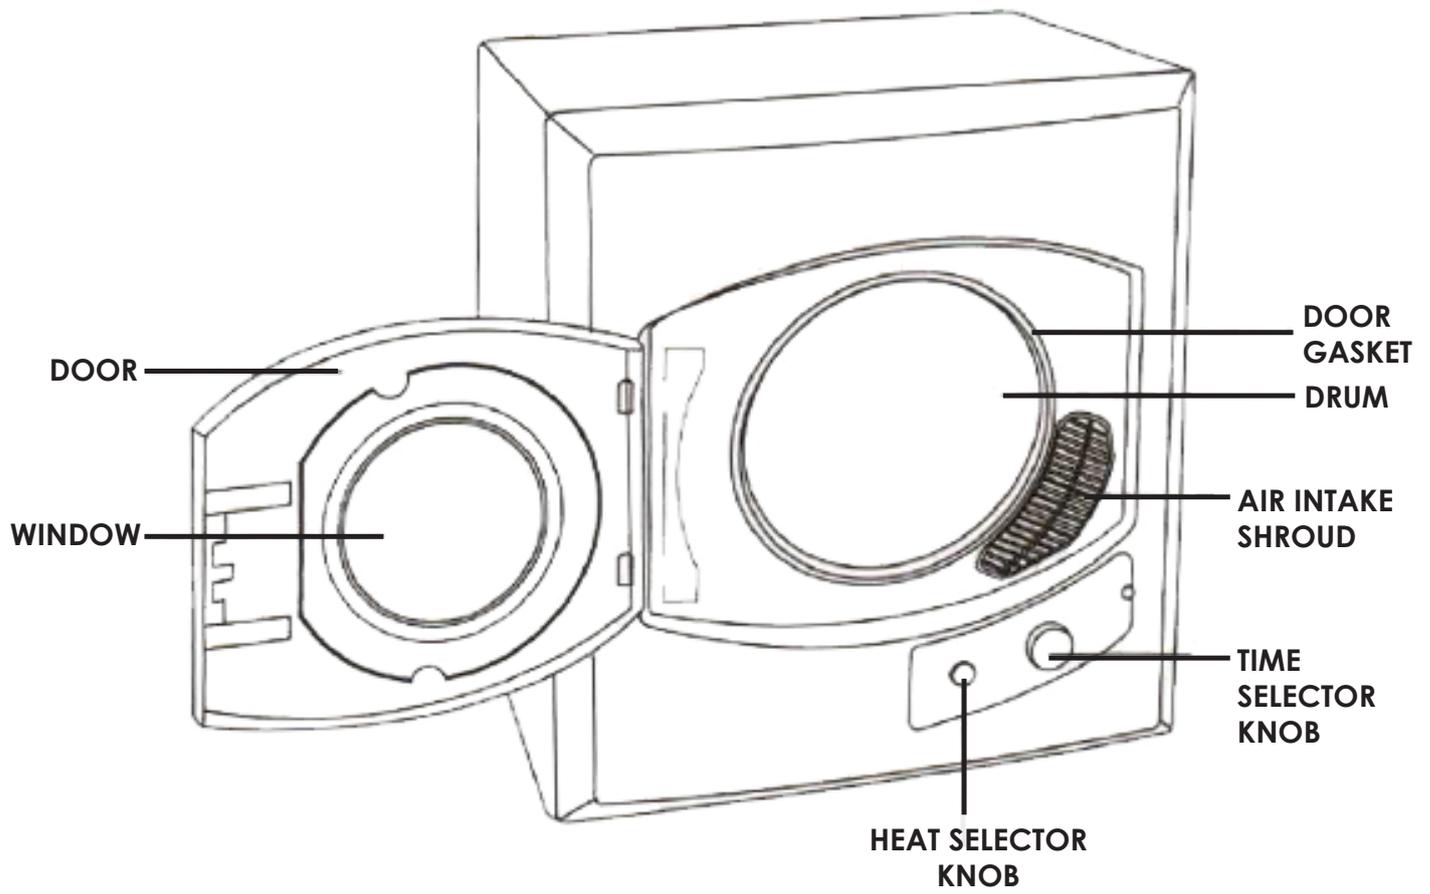

# INSTALLATION

## BEFORE USING YOUR APPLIANCE

- Check to make sure you have all the parts necessary for operation.
- Allow at least 5 inches of space between the sides of the appliance.
- Put laundry into the dryer evenly. Uneven laundry may cause noise and vibration.
- Before drying, check all pockets. Foreign objects can damage the machine.
- Make sure the appliance is on a flat, level surface at all times.
- To wall mount this appliance, use the included wall mount kit.
- **DO NOT** let temperatures in the room that the appliance will be in to fall below 0 degrees.
- Make sure the dryer does not stand on it's own cord.

## WALL MOUNTING INSTRUCTIONS:

1. Determine dryer positions on wall and mark required bracket position. This dryer is not suitable to be directly placed on top of a washing machine.

\*\* A minimum 50mm is needed between the top of the dryer and the ceiling for ease of installation.


\*\* If mounting above a washing machine, allow sufficient room to open the lid of the machine

Tools required for plaster and wood installation: Drill and Drill bit x1, Phillips screw driver x1, Wood screws 50mm long x4.

2. Fix the wall hanging brackets (x2) to the wall securely. Fit a timber slat between the studs to mount the brackets onto if the stud position is too wide.

3. To install the hanging hook to timber, start at Fig. 2

PHOTO	COMPONENT	QTY
	Wall Hanging Bracket	2
	Wall Hanging Kit	2
	Exhaust Connector	1
	12mm Long Screws	4
	16mm Long Screws	3
	25mm Long Screws	4
	Exhaust Pipe	1 SET

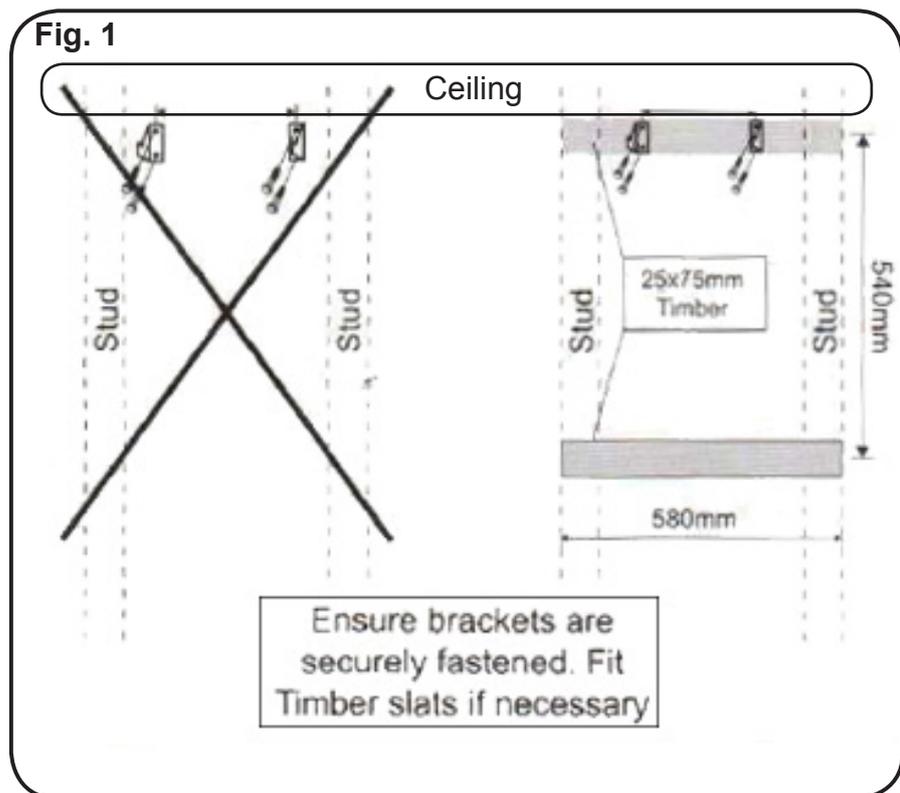

# INSTALLATION


4. Align hanging hooks and fasten screws tightly.
5. Install exhaust pipe as per Fig. 3
6. Using 3x16mm screws (provided) to fix the outlet in place firmly.
7. Using 4x12mm screws to fix the 2 wall hanging bracket. Fig. 4
8. With assistance, mount dryer on wall bracket. Fig. 5

The appliance shall not be exhausted into a chimney, a wall, a ceiling, an attic, a crawl space or a concealed space of a building.

Only rigid or flexible metal duct shall be used for exhausting.

The total length of flexible metal duct shall not exceed 2.4m

Your dryer is shipped with the legs in the bag containing your user's guide. To install and adjust the levelling legs see the illustration below.

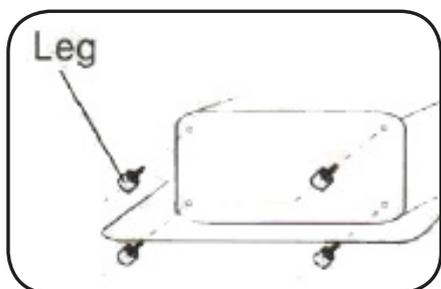

If the floor is uneven, adjust the legs, do not insert pieces of wood, or any other objects under the legs. Adjust the height level of the legs accordingly.

Place the dryer on a sturdy, flat surface. If the dryer is placed on an uneven or weak surface, noise or vibration will occur. Allowable is 1°.

Fig 2



Fig 3

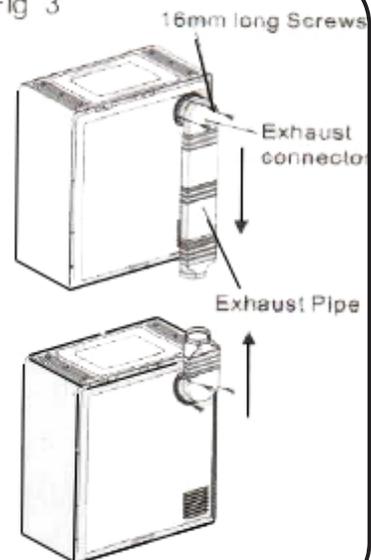


Fig 4


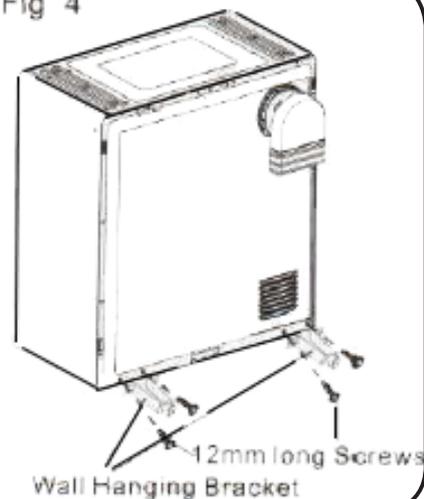



Fig 5

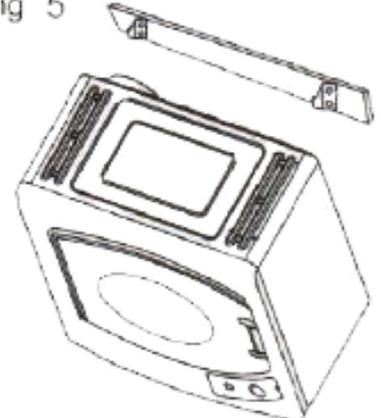


# INSTALLATION AND OPERATION

## ELECTRICAL CONNECTION:

This appliance must be grounded. In the event of an electrical short circuit, the grounding plug reduces the risk of electric shock by providing an escape wire for electric current. This appliance is equipped with a power cord that has a grounding wire with a grounding plug. The plug must be plugged into an electrical outlet that is properly installed and grounded.

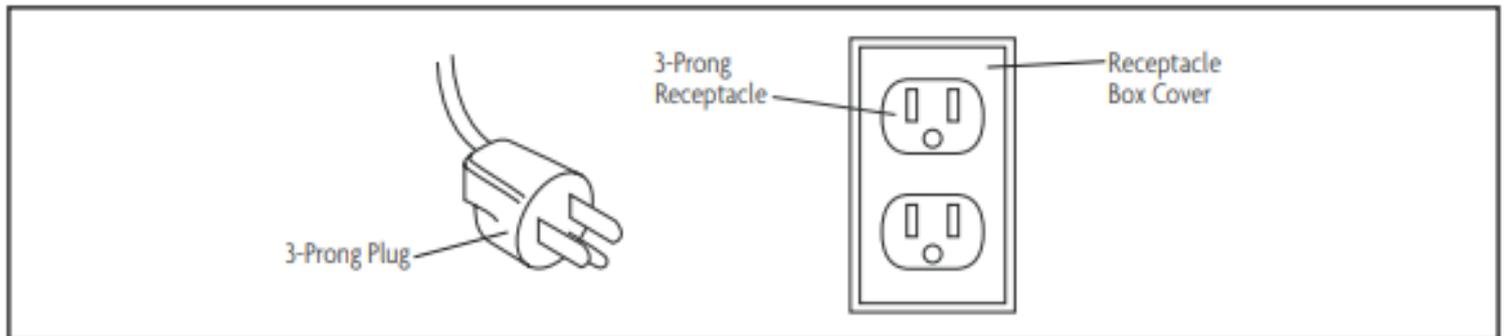

## CONTROL PANEL:

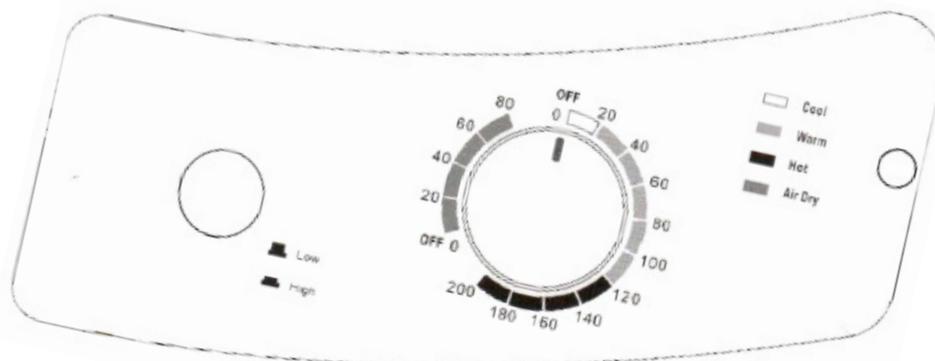

**Air Dry:** This function runs with cool air, primarily to air items that require freshening i.e.: clothes that have been stored for a long period of time.

**OFF:** When the 'Drying Timers' dial is in the 'OFF' position no power is supplied to the unit. As soon as the dial is turned clockwise to the desired program the dryer will start.

**Cool:** This function is generally used to cool the items that have just been dried. This helps to prevent creasing. Instead of the motor pushing heat into the drum of the dryer it will generate cool air.

**Anti-wrinkle:** This is used for items that are difficult to iron i.e.: cotton shirts and linen. Using the heat selector knob choose 'Soft'. Set the drying timer knob between 30-60 minutes depending on the amount of items in the dryer. Once the timer stops (including the Cool program) the items will still contain moisture. Making the ironing process easier.

**Hot:** For drying large quantities or bulky items (Dryer drum is more than 1/2 full). Select the 'Strong' heat option and set the timer for more than 150 minutes.

**Warm:** This function will dry and cool items and in most cases leave items wrinkle free (depending on material). Select the 'Strong' heat option. Set the timer between 60-150 minutes.

**OFF:** When the 'Drying Timer' dial is in the 'OFF' position no power is supplied to the unit. As soon as the dial is turned clockwise to the desired program the dryer will start.

**Drying time (min)**

The diagram shows a detailed view of the control dial. The dial is circular with a central needle. The outer ring of the dial is marked with numbers from 0 to 200 in increments of 20. The dial is divided into sections for 'Cool', 'Warm', 'Hot', and 'Air Dry'. The 'OFF' position is at the top. Callout boxes with lines pointing to the dial provide detailed instructions for each setting.

# OPERATION

## CONTROL PANEL FUNCTIONS:

### HEAT SELECTOR BUTTON:

Select "High Heat" for items that are particularly bulky or large quantities. Select "Low Heat" for delicate items such as silk, nylon etc.



### DRYING PROGRAM SELECTOR:

There are five drying combinations available: cool, Anti-wrinkle, Warm, Hot and Dry.

### DRYING TIME REFERENCE: \*\* LOAD WEIGHTS AND DRYING TIMES ARE APPROXIMATE \*\*

DRYING CAPACITY	DRYING TIMES	
	HIGH HEAT	LOW HEAT
3LBS	30 MINUTES	55 MINUTES
5LBS	60 MINUTES	110 MINUTES
7LBS	120 MINUTES	
9LBS	200 MINUTES	

## SORTING FABRICS:

For best results, clothes should be sorted properly. Separate the lint shedders (chenille, terry cloth etc) from the lint collectors (synthetics, flannel and fabrics such as flannel, corduroy). Separate non-colorfast from light colored items, heavy fabrics from lightweight fabrics and permanent press from heavy, bulky items.

## DRYING TIME

Drying time depends on many factors, such as the amount of washing, how damp it is, type of fabric, rated power of the machine and the temperature of the room. It also depends on how you want the laundry to be.

## SHRINKAGE

Knitted fabrics are liable to shrink. Do not use the extra dry program for these materials and always stretch them out directly after drying.

## FABRIC SOFTENERS

Because some dryer added fabric softeners may cause damage to automatic dryers, use only ones that the manufacturers list assurances that their softeners can safely be used in your dryer.

## SINGLE ITEMS

Use the timed program when there is only one item to be dried. This is because the automatic program may turn off the heating program too early and the item won't be thoroughly dried.

## IF WASH IS NOT TRY AFTER TUMBLE DRYING

When using the automatic programs, it can happen that not all the wash is properly dry. This may be due to heavy fabrics or thick seams. Give these items another 10 minutes of dry time.

## DO NOT OVER DRY

When using the timed program, it is possible to over-dry fabrics, if too much time has been set. This can cause fabrics to wrinkle or shrink.

# OPERATION

## FABRIC CARE CHART:

	Resistant material
	Delicate fabric
 	Item may be washed at 95°C
 	Item may be washed at 60°C
 	Item may be washed at 40°C
 	Item may be washed at 30°C
	Item may be hand washed
	Dry clean only
	Can be bleached in cold water
	Do not bleach
	Can be ironed at 200°C max
	Can be ironed at 150°C max

	Can be ironed at 100°C max
	Do not iron
	Can be dry cleaned using any solvent
	Dry clean with perchloride, lighter fuel, pure alcohol or R113 only
	Dry clean with aviation fuel, pure alcohol or R113 only
	Do not dry clean
	Dry flat
	Can be hung to dry
	Dry on clothes hanger
	Tumble dry, normal heat
	Tumble dry, reduced heat
	Do not tumble dry

## CLEANING THE EXTERIOR:


- Wipe the dryer surfaces, including the control panel with a soft cloth and non-abrasive household detergent.

## UNPLUG THE POWER CORD PRIOR TO ANY CLEANING:


Removing the lint filters, remove by pulling outward using the four grip holes in the filter assembly.

# MAINTENANCE


The filter assembly consists of three parts. **A.** Exhaust Vent Shroud **B.** Lint Filter **C.** Exhaust Filter

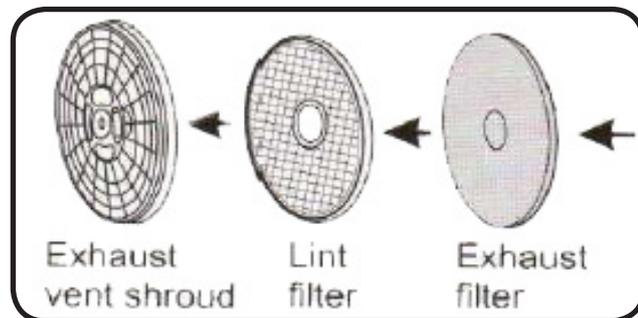

Separate each of the above parts and clean the individual pieces using a soft brush or vacuum cleaner. **DO NOT** damage the filters.

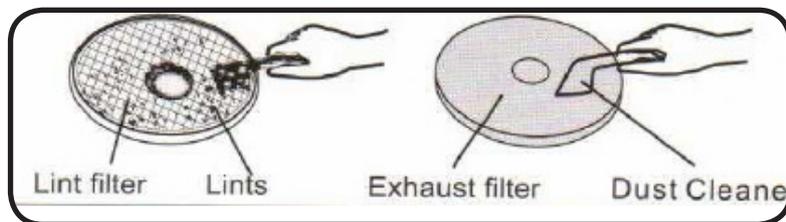


Separate each of the above parts and clean the individual pieces using a soft brush or vacuum cleaner. **DO NOT** damage the filters.

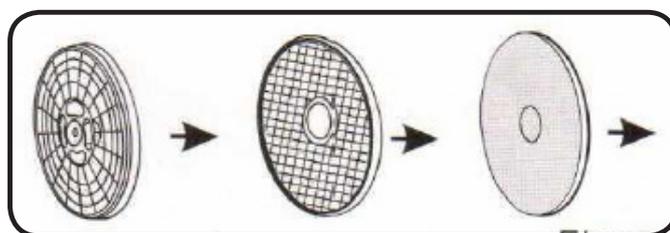


## CLEANING THE AIR INTAKE :

Removing the Air Intake Filter: Remove by pulling outward holding the filter housing by the top and bottom.

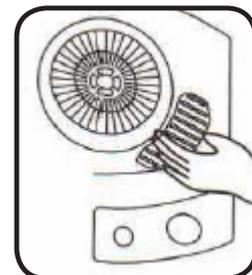

Remove the filter inside the housing and clean using a soft brush or vacuum cleaner.

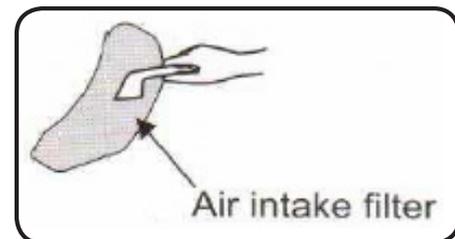

Replace the filter housing by pushing upwards with your thumb until the latch is secure.

## TROUBLESHOOTING :

PROBLEM	POSSIBLE CAUSE
Timer knob will not rotate	Not plugged in
Dryer does not operate	Circuit breaker tripper or blown fuse
Drum does not rotate	Door is ajar
Laundry isn't dry	Clean the filter
	Reduce the load in the dryer
	Re-dry the loaded items
	Ensure items are not knotted or bulked together
	Dryer in not located in a well ventiated area

# WARRANTY

## PLEASE READ THE FOLLOWING CAREFULLY

THE MANUFACTURER AND/OR DISTRIBUTOR HAS PROVIDED THE PARTS LIST AND ASSEMBLY DIAGRAM IN THIS MANUAL AS A REFERENCE TOOL ONLY. NEITHER THE MANUFACTURER OR DISTRIBUTOR MAKES ANY REPRESENTATION OR WARRANTY OF ANY KIND TO THE BUYER THAT HE OR SHE IS QUALIFIED TO MAKE ANY REPAIRS TO THE PRODUCT, OR THAT HE OR SHE IS QUALIFIED TO REPLACE ANY PARTS OF THE PRODUCT. IN FACT, THE MANUFACTURER AND/OR DISTRIBUTOR EXPRESSLY STATES THAT ALL REPAIRS AND PARTS REPLACEMENTS SHOULD BE UNDERTAKEN BY CERTIFIED AND LICENSED TECHNICIANS, AND NOT BY THE BUYER. THE BUYER ASSUMES ALL RISK AND LIABILITY ARISING OUT OF HIS OR HER REPAIRS TO THE ORIGINAL PRODUCT OR REPLACEMENT PARTS THERETO, OR ARISING OUT OF HIS OR HER INSTALLATION OF REPLACEMENT PARTS THERETO.

**Record Product's Serial Number Here:** \_\_\_\_\_

**Note:** If product has no serial number, record month and year of purchase instead.

**Note:** Some parts are listed and shown for illustration purposes only and are not available individually as replacement parts.



**SAVE THESE INSTRUCTIONS.**



### Questions, Problems or Missing Parts?

*Before returning to a retailer, our exceptional customer service is available to help.*

*Call Us: 909.628.0880*

*Hours of Operation: 9 to 4pm PST, Monday - Friday*

*Email: [customer@bartonliving.com](mailto:customer@bartonliving.com)*

**PRODUCT MADE IN CHINA**