

Safety Information

IMPORTANT SAFETY INSTRUCTIONS

When using electrical products, basic precautions should always be followed including the following:

a) **READ AND FOLLOW ALL SAFETY INSTRUCTIONS.**

b) This product is for indoor use only. The electrical rating 0.6 A 120 V 60 Hz.

c) Do not use seasonal products outdoors unless marked suitable for indoor and outdoor use. When products are used in outdoor applications, connect the product to a Ground Fault Circuit Interrupting (GFCI) outlet. If one is not provided, contact a qualified electrician for proper installation.

d) This seasonal use product is not intended for permanent installation or use.

e) Do not mount or place near gas or electric heaters, fireplace, candles or other similar sources of heat.

f) Do not secure the wiring of the product with staples or nails, or place on sharp hooks or nails.

g) Do not let lamps rest on the supply cord or on any wire.

h) Unplug the product when leaving the house, when retiring for the night, or if left unattended.

i) This is an electric product – not a toy! To avoid risk of fire, burns personal injury and electric shock it should not be played with or placed where small children can reach it.

j) Do not use this product for other than its intended use.

k) Do not hang ornaments or other objects from cord, wire, or light string.

l) Do not close doors or windows on the product or extension cords as this may damage the wire insulation.

m) Do not cover the product with cloth, paper or any material not part of the product when in use.

n) Do not move the tree by pulling the tree tips or tree branches.

o) This product employs overload protection (fuse). A blown fuse indicates an overload or short-circuit situation. If the fuse blows, unplug the product from the outlet. Also unplug any additional strings or products that may be attached to the product. Replace the fuse as per the User Serving instructions (follow product marking for proper fuse rating) and check the product. If the replacement fuse blows, a short-circuit may be present and the product should be discarded.

p) Read and follow all instructions that are on the product or provided with the product.

q) **SAVE THESE INSTRUCTIONS.**

CAUTION! – ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ASSEMBLING OR DISASSEMBLING.







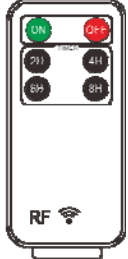


CAUTION:

1. The product consists of non-replaceable LED lamps. To reduce the risk of fire or electric shock, do not attempt to replace lamps or modify string.
2. This product can only be used with the original adapter, not other brands of adapter.



Pre-Assembly

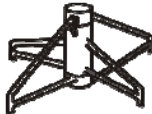Package Contents

<p>A. Top Section Qty: 1</p> 	<p>B. Upper Middle Section Qty: 1</p> 	<p>C. Lower Middle Section Qty: 1</p> 
<p>D. Bottom Section Qty: 1</p> 	<p>E. Stand with an eye bolt Qty: 1</p> 	<p>F. Power Cord Qty: 1</p> 
<p>G. Remote Control Qty: 1</p> 	<p>H. Fuse Qty: 2</p> 	<p>I. Latch Qty: 2</p> 

Assembly

Assembling the tree stand

Step 1. Choose a location near a wall outlet.

Step 2. Open the stand to a 90 degree angle until the hole lines up with the hole on the tube.

Step 3. Screw an eye bolt into the hole.



Assembling the tree

 
Please remove protective covers from the base of the pole for each tree section before assembling.

- Step 1. Insert tree bottom (D) into the tree stand and tighten the screw. (See Fig. 1)
- Step 2. Insert lower middle section (C) into the tree bottom (D). (See Fig. 2)
- Step 3. Insert upper middle section (B) into the lower middle section (C). (See Fig. 3)
- Step 4. Insert tree top (A) into the upper middle section (B). (See Fig. 4)

Warning:

There is a tree top connector on the tree top (A). Do not overload. Connect other lighting strings or tree toppers end-to-end up to a maximum of 216 Watts (1.8 Amps). Do not interconnect low-voltage products.

- Step 5. Insert the provided power cord into the connector on the tree bottom (D) in right direction properly and tightly (always match the protuberance of the end connector of power cord to the concave of the connector found on the tree bottom (D) according to the magnified drawing on fig. 5.).
- Step 6. Allow branches to fall into place or gently pull branches up and out. When adjusting branches be sure that all wires are free of branch hinges. (See Fig. 6)
- Step 7. Shape the branches. Starting with tips closest to the pole, shape one tip to the right, one to the left and one at the center of the main stem. Repeat pattern for each branch. (See Fig. 7)
- Step 8. Plug the power cord into a proper outlet. The plug F1 controls the tree top lights. The plug F2 controls the tree lights. This tree comes with a control box and a remote control. You can change the lighting patterns of the tree by using control box or remote control. Please see **Instructions of control box and remote control** as below.

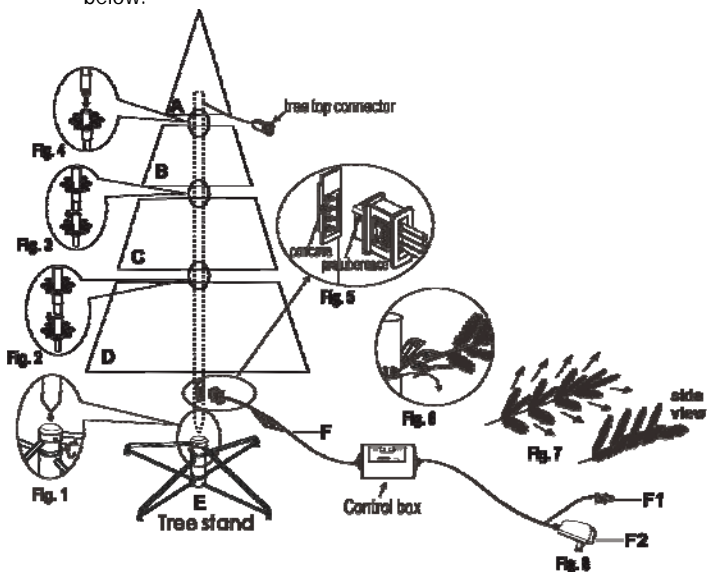

Operation

Turning on the tree

 
- Step 1. Connect each tree section well and plug the power cord into a wall outlet.

Instruction of control box and remote control

Instruction of control box

1. Press the ON/OFF Timer button on control box to turn on and off timer function.
2. Press the Timer button on control box to select below timer hours:
 - i. Indicator lights of timer on control box turn on at 2 position: The tree lights will automatically run through a 2-hours ON, 22-hours OFF cycle.


- ii. Indicator lights of timer on control box turn on at 4 position: The tree lights will automatically run through a 4-hours ON, 20-hours OFF cycle.
- iii. Indicator lights of timer on control box turn on at 6 position: The tree lights will automatically run through a 6-hours ON, 18-hours OFF cycle.
- iv. Indicator lights of timer on control box turn on at 8 position: The tree lights will automatically run through an 8-hours ON, 16-hours OFF cycle.

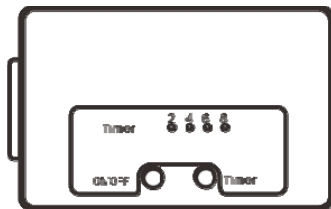

No memory mode on timer whether the tree or the timer is re-started.

Instruction of remote control

 Please note this tree has a remote control. Please pull out the insulation tape from the remote control, before starting to use it.

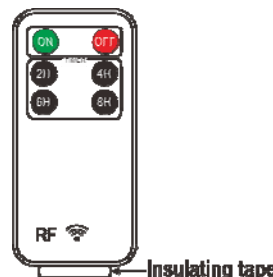


1. Press the button ON or OFF to turn on or off the lights.
2. Press the 2H, 4H, 6H or 8H button to select the different timer hours.

If the remote control does not work, check whether the battery of the remote control is out of power.

To replace the remote control battery:

1. Replace with a new button cell "CR2025" (3 volt) into the compartment.

 CAUTION: DO NOT DISPOSE OF BATTERIES IN FIRE. BATTERIES MAY EXPLODE OR LEAK.

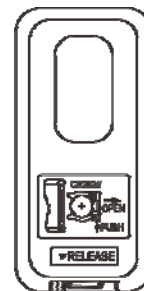


Maintenance

Replace the fuse.

Power cord plug F1 fuse replacement (replaceable 3 amp, 125 volt fuse is located in spare parts bag):

 1. Grasp plug and remove from the receptacle or other outlet device. Do not unplug by pulling on cord.
2. Open fuse cover. Slide open the fuse access cover towards the blades of the attachment plug.
3. Remove fuse carefully.
4. Risk of fire. Replace fuse only with 3 Amp, 125 Volt fuse (provided with product).
5. Close fuse cover. Slide closed the fuse access cover.
6. Risk of fire. Do not replace attachment plug. Contains a safety device (fuse) that should not be removed. Discard product if the attachment plug is damaged.

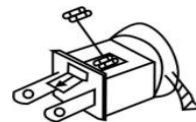


CAUTION! – ALWAYS UNPLUG YOUR TREE FROM ITS POWER SOURCE BEFORE ATTEMPTING FUSE REPLACEMENT.

Care and Cleaning

- Step 1. Before using or reusing, inspect product carefully. Discard any product that have cut, damaged, or frayed wire insulation or cords, cracks in the lampholders or enclosures, loose connections, or exposed copper wire.
- Step 2. When storing the product, carefully remove the product from wherever it is placed, including tree, branches, or bushes, to avoid any undue strain or stress on the product conductors, connections, and wires. Remove all ornaments and decorations.
- Step 3. Unplug the power cord from the wall outlet. And remove your power cord from tree bottom (D) and save them.
- Step 4. Gently lift the tree top straight up to remove from the center section and fold all branches towards the pole.
- Step 5. Repeat this step for the center and bottom tree sections.
- Step 6. Carefully place all tree sections into a shipping box and tape it shut.
- Step 7. Store your tree neatly in a cool, dry place away from sunlight.

Troubleshooting

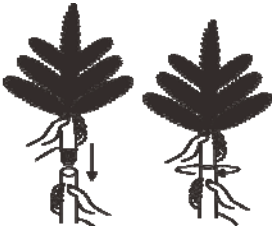Problem	Solution
The tree or the tree top does not light	Ensure that all tree sections are connected into each other well by pressing each section down and rotating. Make sure the power cord is well connected to the tree bottom (D). Ensure that the plug F2 is plugged into the plug F1 and then plugged into the wall outlet.
	Check for blown fuses at the power cord plug F1. Replace as needed with the replacement fuses provided.
	If you are still experiencing problems with the tree please call 1-877-527-0313 for instructions.
Top section does not light	Push downward and rotate the top section to B section to make sure they are connected securely. 

The device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Please note that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
CAUTION

- a) To reduce the risk of electric shock, use only with the power-supply cord provided or with a cord set intended for outdoor use.
- b) Do not use a cracked, frayed, or damaged cord. Inspect the cord periodically.
- c) Do not abuse cord – Do not carry product by the cord or yank or pull it to disconnect from the outlet.
- d) Disconnect the product from the outlet when not in use.

Loose branches

If a branch of the tree falls off, follow the steps below to reinstall it with a spare latch (I).

- 1) Place the branch into the slot of the bracket.
- 2) Insert a spare latch through the hole and use diagonal pliers (not included) to **crimp** the latch. (See Fig. A)

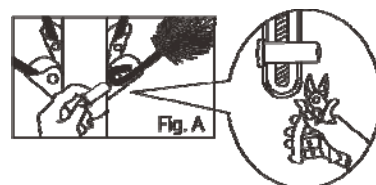

Importer: Home Depot

Address: 2455 PACES FERRY ROAD ATLANTA, GA 30339

Tel: 1-877-527-0313

Model No. LTW36C-12V1C