

Thank you for choosing Sunnydaze Decor. We stand behind our brand and the quality of the items we sell. Replacement parts or products will be sent at our discretion within the 1-year warranty period. Proof of purchase, with the date of purchase as well as photos of the merchandise defect, must be provided. Photos are used to determine the cause of defects and for future quality control. Register your warranty at <https://tiny.cc/SunnydazeWarranty>. If you have any questions, comments or concerns, feel free to contact us by phone at 833-982-1977, by email: customerservice@sunnydazedecor.com, or via our contact us page at <https://tiny.cc/SunnydazeContact>

DUMPING UTILITY CART WITH REMOVABLE SIDES

 
Read assembly instructions carefully and follow the care instructions.

Assemble components on a soft, clean surface to avoid scratching or damaging the finish.




Inspect packaging to ensure all parts are accounted for before disposing of packing materials.

| No. | PARTS | | QTY. |
|-----|---|-------------------------|-------|
| A |  | Bed | 1 |
| B |  | Side Panel | 2 |
| C |  | Front Panel | 1 |
| D |  | Back Panel | 1 |
| E |  | Rear Axle Support | 2 |
| F |  | Hand Coupler | 1 |
| G |  | Wheel | 4 |
| H |  | Bottom Frame | 1 |
| I |  | Center Front Axle Brace | 1 |
| J |  | Steering Connector | 1 |
| K |  | Yoke | 1 |
| L |  | Front Axle | 1 |
| M |  | Handle | 1 SET |
| N |  | Rear Axle | 1 |

| No. | HARDWARE | | QTY. |
|-----|---|--------------------|------|
| O |  | M8 x 60 Hex Bolt | 1 |
| P |  | M8 x 20 Hex Bolt | 1 |
| Q |  | M8 x 16 Hex Bolt | 11 |
| R |  | Handle Pin | 1 |
| S |  | M12 Lock Nut | 2 |
| T |  | M8 Lock Nut | 13 |
| U |  | Cotter Pin | 4 |
| V |  | Fence Assembly Pin | 8 |
| W |  | M16 Washer | 2 |
| X |  | M12 Washer | 2 |
| Y |  | M8 Washer | 13 |

 660
pounds
299 kg

| TOOLS REQUIRED (not included) | |
|---|-------------------|
|  | Socket Wrench |
|  | Adjustable Wrench |

⚠ WARNING ⚠

CHOKING HAZARD — This item contains small parts that can be swallowed by children. Keep children away during assembly.

! HELPFUL HINT

Sunnydaze Decor advises reading this manual fully, and assembling the utility cart soon after purchase. Check that all parts are accounted for and familiarize yourself with the assembly before beginning.

Save this manual for future reference.

ASSEMBLY

Do not tighten hardware until all components have been loosely assembled.

If the hardware is tightened too soon, mounting holes may not align, and parts may not easily fit together.

IMPORTANT: Lock nuts must be installed with the nylon insert facing outward.



STEP 1 A: 1 H: 1

Lay Bed (A) face-down on a clean, flat surface.

Slide the flat side of Bottom Frame (H) towards the release handle on Bed (A), ensuring the ends of the handle go through the holes on the end of the bottom frame.



STEP 2 E: 2 Q: 2 Y: 2 T: 2

Align the two holes of Rear Axle Support (E) with the inside edge of Bed (A), ensuring the single hole of the support is on the outside of Bottom Frame (H). Secure the axle to the bed using 2x Hex Bolt (Q), 2x Washer (Y), and 2x Lock Nut (T).

Repeat this step on the opposite side.



STEP 3 N: 1

Run Rear Axle (N) through the rear axle supports and bottom frame.



STEP 4 L: 1 Q: 2 Y: 2 T: 2

Place Front Axle Brace (L) on the front section [behind the release handle] of Bottom Frame (H). Secure by hand-tightening 2x Hex Bolt (Q), 2x Washer (Y), and 2x Lock Nut (T).



STEP 5 I: 1 Q: 2 Y: 2 T: 2


Align the two holes on Center Front Axle Brace (I) over the center of Bottom Frame (H). Secure by hand-tightening 2x Hex Bolt (Q), 2x Washer (Y), and 2x Lock Nut (T).

NOTE: the opposite end of the brace must be on top of the front axle, as shown.




STEP 6 K: 1 Y: 1 T: 1

Place Yoke (K) onto the front axle so that the single hole slides over the pre-attached bolt on Front Axle Brace (L). Loosely secure by hand-tightening Washer (Y) and Lock Nut (T).

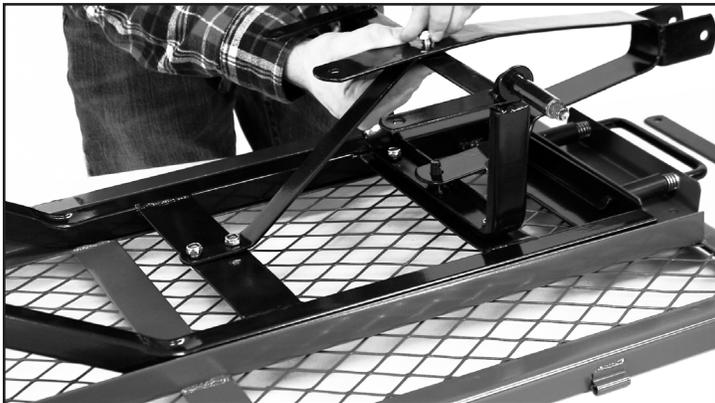


STEP 7 P: 1 Y: 1 T: 1

Align the second hole of the yoke with the center front axle brace and front axle. Secure by hand-tightening Hex Bolt (P), Washer (Y), and Lock Nut (T).

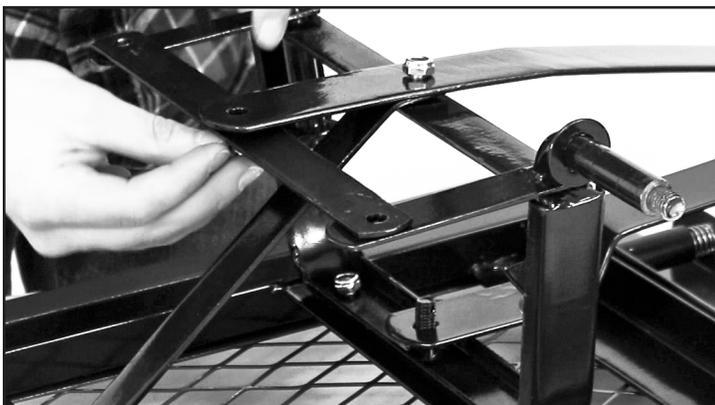

STEP 8 J: 1 Q: 3 Y: 3 T: 3

Place Steering Connector (J) so the center hole is underneath the outer hole on the yoke, but above the holes on the front axle brace. Secure the components by hand-tightening 3x Hex Bolt (Q), 3x Washer (Y), and 3x Lock Nut (T).

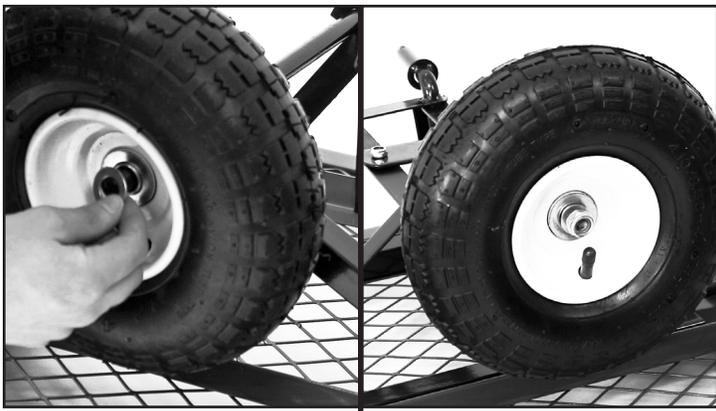

BACK

G: 2 U: 2 W: 2

FRONT

G: 2 X: 2 S: 2

STEP 9

Ensuring the valve stem is facing outward, place Wheel (G) onto Rear Axle (N). Place 1x Washer (W) onto the rear axle and secure using 1x Cotter Pin (U). Repeat on the opposite side.

Ensuring the valve stem is facing outward, place Wheel (G) onto Front Axle Brace (L). Place 1x Washer (X) onto the front axle and hand-tighten 1x Lock Nut (S). Repeat on the opposite side.



STEP 10 B: 1 C: 1 D: 2 V: 8

Flip the cart upright.

Ensuring the flat sides of the panels are on the inside of the cart bed, connect Front Panel (C), Back Panel (D), and 2x Side Panel (B) using Fence Assembly Pins (V).

NOTE: the front panel must be installed above the yoke and release handle, as shown.



STEP 11 F: 1 M: 1 O: 1 Y: 1 T: 1

Place Hand Coupler (F) over the narrow end of Handle (M). Connect the narrow end of the handle to the yoke using 1x Bolt (O), Washer (Y) and Lock Nut (T).



STEP 12 R: 1 U: 1

Slide the D-handle over the U-Bracket on Handle (M) and secure with Handle Pin (R) and Cotter Pin (U).

Tighten all lock nuts using a socket wrench and/or an adjustable wrench. Tools not included.

! IMPORTANT Lock nuts must be installed with the nylon insert on the outside. Tools must be used to fully tighten lock nuts, failure to properly tighten the lock nuts may result in product malfunction or personal injury.

Care & Maintenance

Do not use harsh chemicals or abrasive materials to clean the cart.

Inspect: Periodically check tire pressure; tire pressure should be maintained between 36-40 PSI. Frequently inspect hardware and tighten any loose fittings.

Sun Exposure: All materials will eventually fade and degrade from sun exposure. Maintain the color and quality of the cart by storing it indoors when not in use.

Storage: Move the cart to an indoor location that is cool and dry to help preserve the cart's quality and prevent exposed metal components from rusting.

Scratches: The powder coating on the cart is tough and durable. However, even under normal use, some scratching is inevitable. Scratches can be repaired with a rust-resistant paint; consult your local hardware store and follow the paint application noted on the container. **IMPORTANT NOTE:** Repair scratches at your own risk; any and all damage caused by repairing scratches with paint will automatically void the product warranty.



IMPORTANT SAFETY INFORMATION



MAX LOAD: 600 lbs. NEVER OVERLOAD THIS CART

DO NOT inflate tires more than 40 PSI

DO NOT operate if any part is damaged or broken

Lower the fence panels before loading large items onto the cart

Ensure weight is evenly distributed when loading the cart

DO NOT use on steep inclines where tipping may occur

DO NOT allow children to use this cart — **THIS IS NOT A TOY!**

Any modification to the product or failure to follow recommended care will void the product warranty.

WARNING!

Manufacturer and seller expressly disclaim any and all liability from personal injury, property damage or loss, whether direct or indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.