

Safety Info



⚠️ WARNING: Proper Fit
Use this product only with compatible ductwork openings. Contact Us for assistance if dealing with non-standard or incompatible opening or visit Page 6 for more information.

⚠️ WARNING: Secure Installation
Ensure the vent is securely fastened to the wall/ductwork opening to prevent accidental detachment.

⚠️ WARNING: Filter Installation
Ensure you install filters in return vents ONLY. Do not install filters on the supply end.

⚠️ WARNING: Filter Replacement
If using as a return vent; Replace the air filters every 3 months to maintain optimal air quality and system performance. You will be reminded, and air filters will be sent to your door for replacement.

ATTENTION: Clean Ventilation Area
Keep your vents clean and unobstructed to facilitate proper airflow and ventilation. To help facilitate this, the vent front covers are dishwasher safe.

ATTENTION: Clear Ventilation Area
Keep the area around all of your vents clean and unobstructed to facilitate proper airflow and ventilation.

NOTE: Proper Installation
If unsure about the installation process, contact us to ensure correct installation and proper functioning. Use this product only as intended and described in this instruction manual.

Impeccable Air, its affiliates, and partners are not liable for any direct, indirect, incidental, consequential, or punitive damages arising from your use of our products, website, or services.

THESE VENTS/FILTER ARE INTENDED TO BE USED IN COMBINATION WITH THE EXISTING HVAC SYSTEM AND FURNACE FILTER

Scan for more:



Our Purpose

To create solutions that promote a safe and healthy environment, leaving you with peace of mind.

IMPROPER INSTALLATION MAY RESULT IN PROPERTY DAMAGE OR BODILY INJURY. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION.

THESE INSTRUCTIONS ARE INTENDED AS AN AID FOR PROPER INSTALLATION AND MAINTENANCE OF THESE PRODUCTS. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION.

THESE VENTS/FILTER ARE INTENDED TO BE USED IN COMBINATION WITH THE EXISTING HVAC SYSTEM AND FURNACE FILTER

Contact Us

info@impeccableair.com

(330) 277 - 6845


Impeccable Air

819 McKay Court Suite 203
Boardman, Ohio 44512



Whole Home
Air Purification
impeccableair.com

Baseboard Return Vent Installation

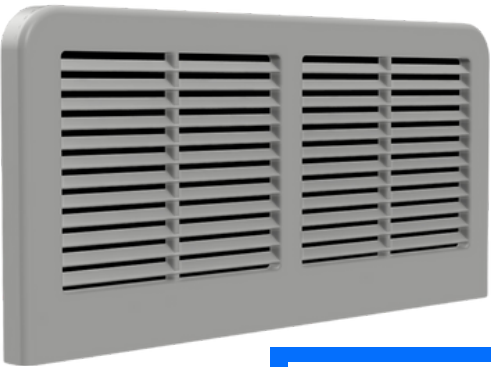

Impeccable Air
Baseboard
Return Grille



INCLUDES	
1	Return Vent Backplate
1	Return Vent Front Cover
1	Impeccable Air Filter
6	#6 x 1 1/4-inch Installation Screws
6	Plastic Drywall Anchors

IMPROPER INSTALLATION MAY RESULT IN PROPERTY DAMAGE OR BODILY INJURY. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION.
THESE INSTRUCTIONS ARE INTENDED AS AN AID FOR PROPER INSTALLATION & MAINTENANCE OF THESE PRODUCTS.

Installation

1

Dimensions

- Vent Front End Outer Dimensions: 15.75" long x 7.75" tall x 0.75" thick
- Ductwork Opening Size: 14" long x 6" tall.
- This Vent Grille is ideal for the 14" x 6" ductwork opening but does cover any smaller opening with minimal installation modifications.

Ease of Installation

1. Remove Your Existing Vent Cover and Measure for the Vent Grille:

Measure the width and height of the ductwork opening in the floor. **DO NOT MEASURE YOUR OLD VENT COVER.**

Next, measure that there is a 15.75 inch space for the Impeccable Air Return Vent in the baseboard.

If you found that the space for the vent is smaller than 15.75" or for some other reason the vent will not fit, you may need to use an oscillating tool or some other tool to cut the baseboard to get the required fit.



Once you have removed your existing vent cover

2. Prepare the Baseboard Return Vent for Installation: Go To Top of Page 2



Scan the QR code for visual help with baseboard installation:

impeccableair.com/videos/v/minute-baseboard-return-air-vent-installation



Pop the Front Cover off with your fingers, or by using a flathead screwdriver - insert into the three small openings on the top of the vent and perform a quarter turn:



Watch this Video:




impeccableair.com/videos/v/front-cover-removal

3. Put the Vent Backplate in Place and Secure the Vent Backplate to the Wall Using the Provided Screws:




2


Looking at the Vent Backplate – reference this guide to identify screw hole locations.

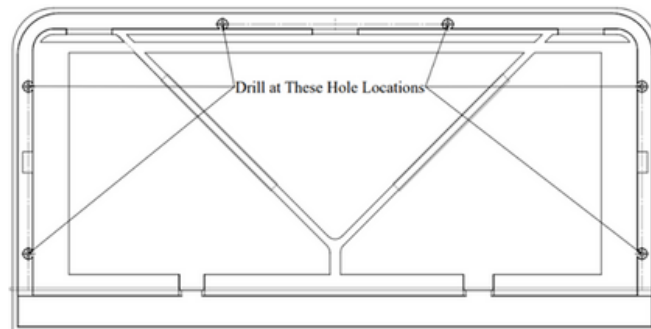

If the mounting surface consists of dry-wall backed by wooden studs, the #6 x 1.25-in screws provided can be used immediately to mount the Vent Backplate to the wall.

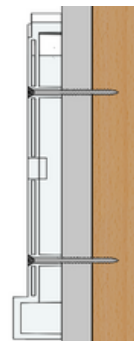

If only mounting into dry-wall, pre-drill holes at the hole locations using a 3/16-in drill bit, insert the plastic anchors provided, and then use the #6 x 1.25-in screws provided to mount.

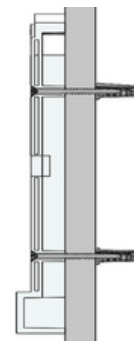

NOTES:

- **System works best with your HVAC system fan ON.**

4. Install the Impeccable Air Filter & Front Grille

SCAN CODE FOR THE BASEBOARD INSTALL VIDEO & SKIP TO 00:58

TO SEE A FILTER INSTALLED:

impeccableair.com/videos/v/minute-baseboard-return-air-vent-installation

