


USE AND CARE GUIDE

KD FULL BUCKET 2-PK SLING CHAIR

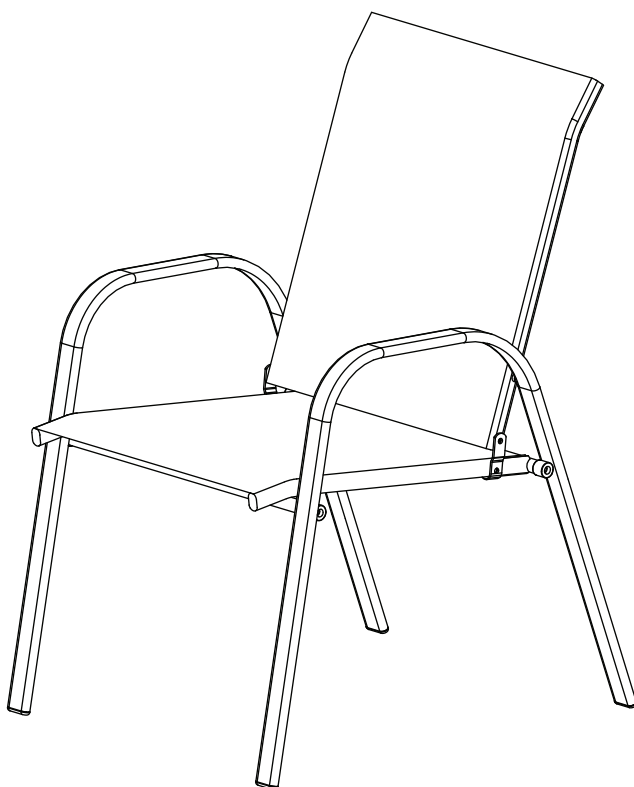

Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this chair. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!

Table of Contents

Table of Contents	2
Important Safety Instructions	2
Save These Instructions	2
Read All Instructions Before Use	2
Warranty	3
What is covered	3
What is not covered	3

Pre-Assembly	3
Planning Assembly	3
Hardware Included	4
Package Contents	4
Assembly	5
Care and Cleaning	6

Important Safety Instructions

SAVE THESE INSTRUCTIONS



WARNING: THIS CHAIR IS MADE FOR THE EXPLICIT PURPOSE OF PROVIDING OUTDOOR FUNCTIONS AND IS NOT TO BE USED AS A TOY. THIS PRODUCT IS INTENDED FOR NORMAL OUTDOOR USE. HOWEVER, THE MANUFACTURER RECOMMENDS STORING AND/OR COVERING THIS PRODUCT WHEN ANY FORMIDABLE/SEVERE WEATHER IS APPROACHING.



WARNING: DO NOT LOCATE THIS PRODUCT NEAR OPEN FLAMES. DO NOT USE THIS PRODUCT AS A SUPPORT. DO NOT SHAKE, LEAN OR CLIMB ON THE PRODUCT. CHILDREN UNDER THE AGE OF 10, NEAR THE PRODUCT, SHOULD BE SUPERVISED BY A COMPETENT ADULT AT ALL TIMES. THIS PRODUCT IS NOT INTENDED FOR COMMERCIAL USE AND WILL VOID THE WARRANTY.

READ ALL INSTRUCTIONS BEFORE USE

To reduce the risk of injury to persons:

1. Close supervision is necessary when this furnishing is used by or near children, or disabled persons, if applicable.
2. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
3. Do not move the chair while it is occupied. Failure to obey this caution could result in injury.



CAUTION: When not in use, secure the product in a cool and covered location.



CAUTION: Do not locate the product near any heat sources.



WARNING: Weight limit for the chair is 225 lbs (102.05 Kg) for each seat.



WARNING: Please keep children out of the assembly area before assembly.



WARNING: This chair unit is heavy, and may require two adults for safe assembly.



WARNING: Never use this product as a support. Do not shake, lean, or climb on the product at any time.



WARNING: Do not place heavy objects on the chair.

Warranty

1 YEAR FRAME AND 1 YEAR FABRIC LIMITED WARRANTY

WHAT IS COVERED

We warrant to be free of manufacturing defects to the original purchaser for one year frame and one year fabric.

WHAT IS NOT COVERED

It remains the customer's responsibility for freight and packaging charges to and from our service center. This warranty does not cover commercial use, hardware, acts of nature, fire, freezing and abusive use. In addition, purchased parts are not covered under this warranty. We reserve the right to make substitutions with similar merchandise, if the model in question is no longer in production.

Contact the Customer Service Team at 1-877-527-0313 or visit www.HOMEDEPOT.COM.

Pre-Assembly

PLANNING ASSEMBLY

Read all instructions before assembly.

To avoid damaging this product, assemble it on a soft, non-abrasive surface such as carpet or cardboard.



 
NOTE: More than one person may be required to assemble this product.

Pre-Assembly (continued)


HARDWARE INCLUDED




NOTE: Hardware not shown to actual size.



_____ AA

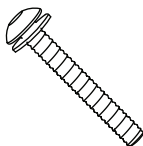


_____ BB

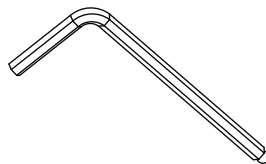

_____ CC

Part	Description	Quantity
AA	M6x30 Bolt	8+1
BB	M6x35 Combination Bolt	4+1
CC	Hex Wrench	1

PACKAGE CONTENTS

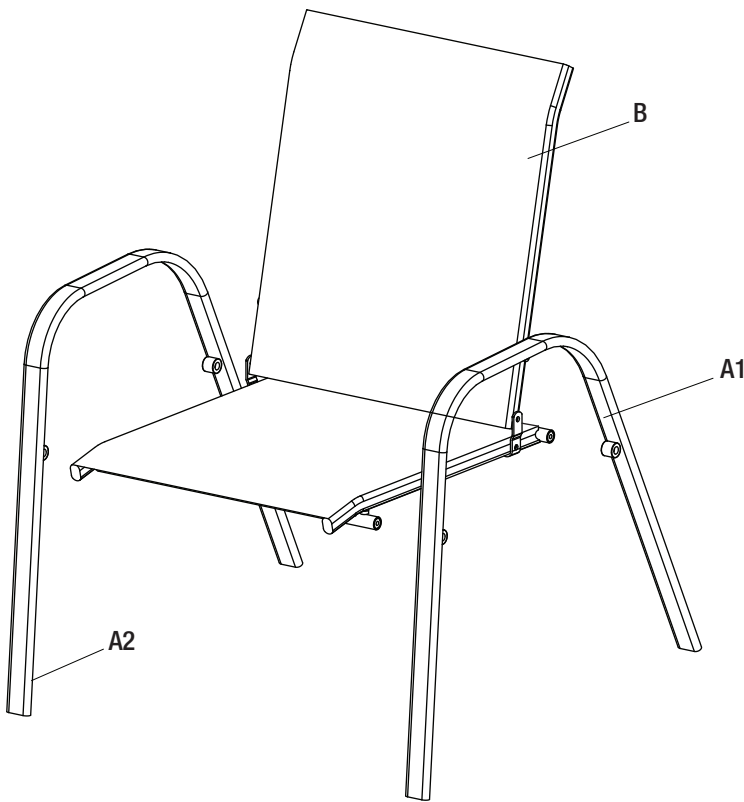


Part	Description	Quantity
A1	Chair Left Arm	2
A2	Chair Right Arm	2
B	Sling Bucket	2

Assembly


1 Connecting The Chair Arms To The Sling Bucket

- Place the sling bucket (B) on a soft surface.
- Attach the chair left arm (A1) and the chair right arm (A2) to the seat of sling bucket (B) using M6x30 bolts (AA).
- Do not tighten all the bolts at this step.

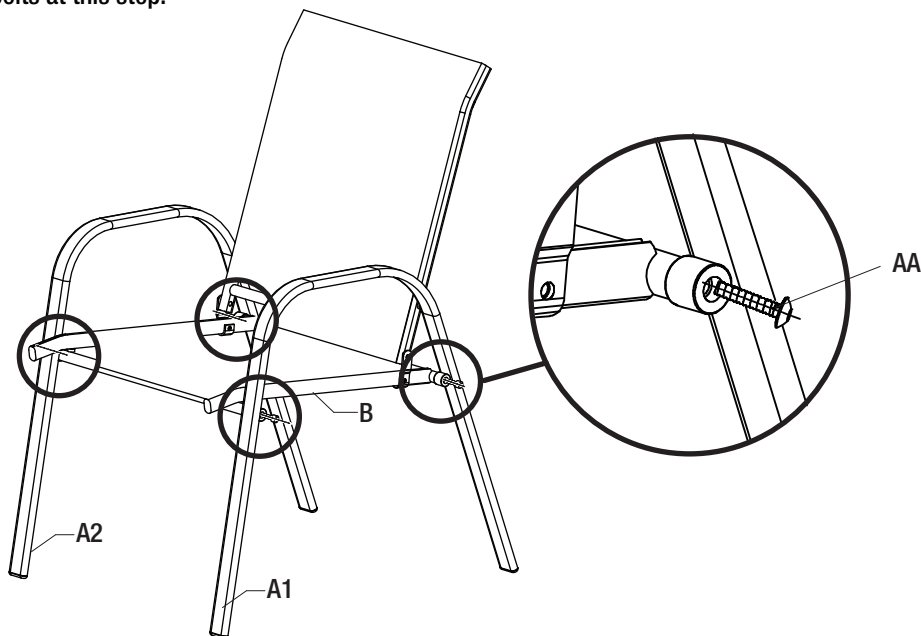

2 Connecting The Chair Arms To The Sling Bucket


- Attach the chair left arm (A1) and the chair right arm (A2) to the back of sling bucket (B) using M6x35 combination bolts (BB).
- Do not tighten all bolts at this step.

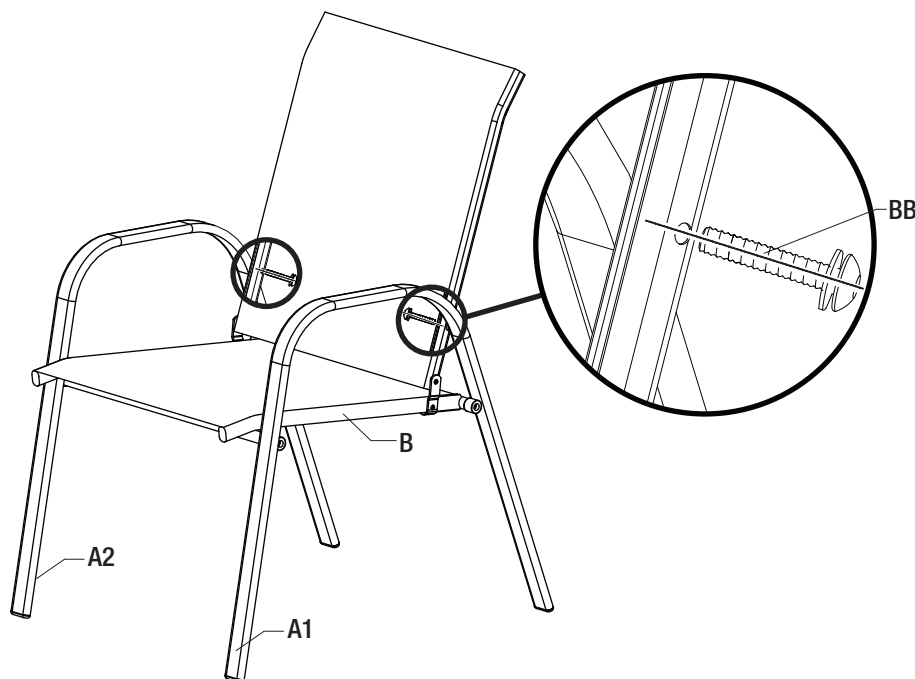

Assembly (continued)

3 Tightening All Bolts

- Once all of the bolts are in place, fully tighten all the bolts using the hex wrench (CC).
- Ensure all connections are secure before use.

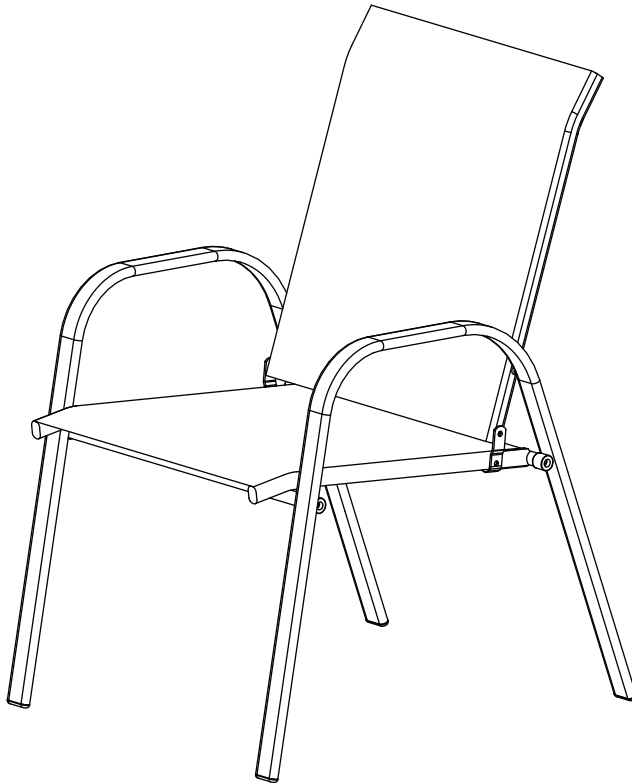

Care and Cleaning

- For best results, clean the frame and fabric with a damp cloth and dry thoroughly. This will help prevent mildew by removing dirt particles that may accumulate.
- Do not clean with abrasive materials, bleach or solvents.
- Store the chairs in a dry, sheltered place when not in use.
- Keep the chairs away from fire, extreme heat, freezing conditions, and inclement weather as rain, hail, sleet, snow, or wind.

StyleWell.™

Questions, problems, missing parts? Before returning to the store,
call StyleWell Customer Service
8 a.m. - 7 p.m., EST, Monday - Friday, 9 a.m. - 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.

For certification use only
Factory Chair ID # FCS00015Y