

READ ENTIRE INSTRUCTIONS PRIOR TO USE





Launching Instructions:

- 1** Fold top and center of wing along the "Fold Here" lines, pinching them in place.




- 2** Turn on the LED light by pressing the button located on the tip of the Rocket Copter.

NOTE: Batteries included and are not replaceable.

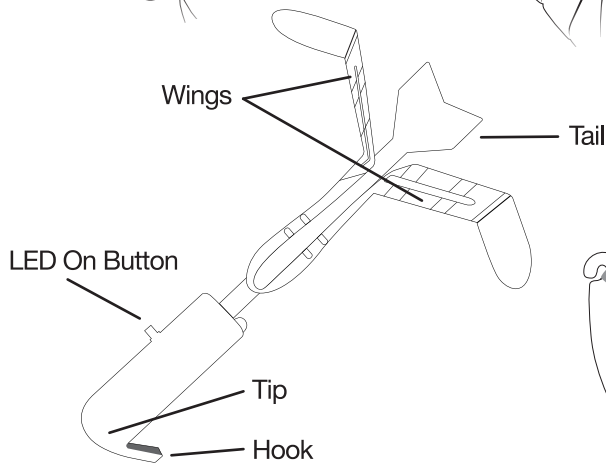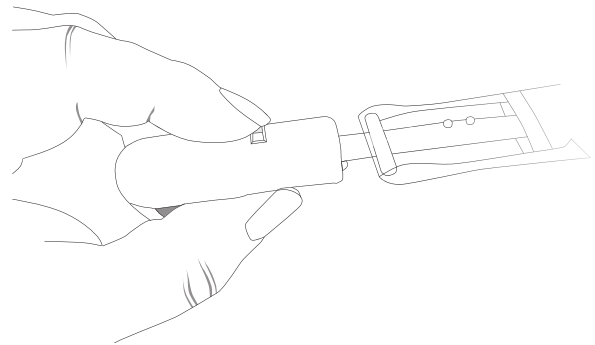

NOTE: Do not over bend wings to Rocket Copter. Follow the correct wing set up as shown above.

- 3** There are 2 sides to the "Y" shaped launcher. Hold launcher with the rubber band and rubber band hook (Image A) facing outward and away from you.

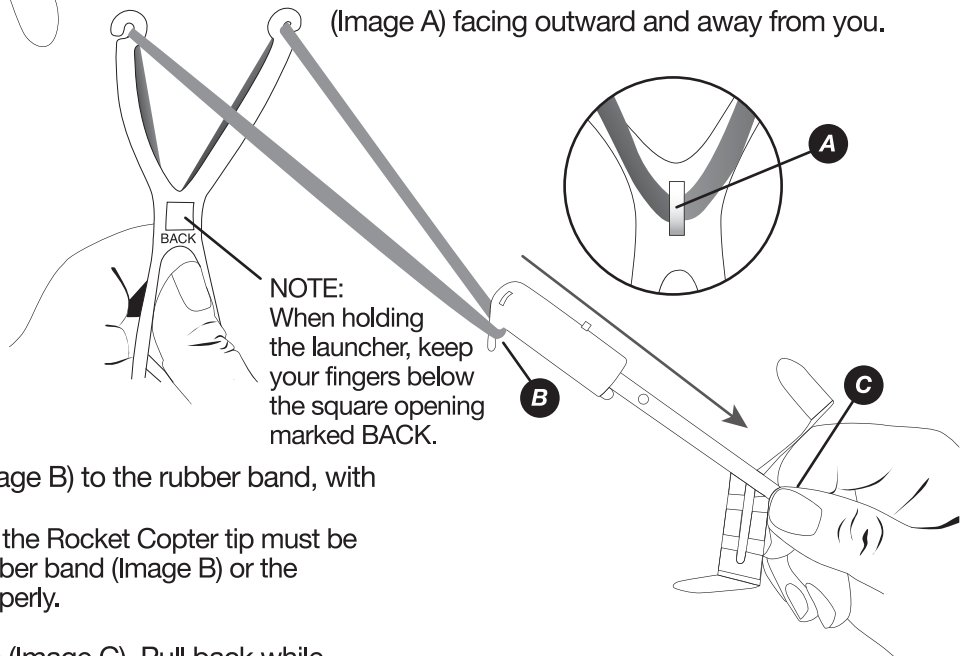

- 4** Hook the Rocket Copter tip (Image B) to the rubber band, with the hook facing downward.
IMPORTANT: The hook found on the Rocket Copter tip must be hooked in from the top of the rubber band (Image B) or the Rocket may not release or fly properly.

- 5** Grab the tail between the wings (Image C). Pull back while aiming upward and away from your face and others. Release your Rocket Copter and watch it soar!

Warning:

- For children 8 years of age and older.
- Always aim the Rocket Copter away from the body when launching.
- CAUTION: Do not point or launch Rocket Copters at people, animals, or breakable objects.
- Inspect rubber bands before use for any signs of damage or wear. Replace damaged or worn rubber bands immediately.
- Use in an open area away from trees, rooftops, electricity poles, and other items where the Rocket Copter may become stuck.



Wayne, NJ 07470
Made in China.
© 2015 Ideavillage



RCIM020817AD