MOTION **DETECTOR** GUIDE

MOTION DETECTOR SENSOR

1] learn it in

Remove screw on bottom of Sensor and remove backplate

Access the Home Screen on your tattletale Consumer Unit.

- 1] press Settings
- 2] enter Primary PIN
- [3] press Advanced
- 4] press Sensors
- 5] press Add Sensor

It will ask for your sensor to be placed in "learn mode".

6] Press and hold on tamper switch

note: The Consumer Unit will sound to indicate sensor has been learned in successfully



[Tamper Switch]

Walk Test

Place supplied magnet over arrow on left side of sensor, then remove (LED light indicates detection)

Walk out coverage area making sure the LED flashes for every movement. Test lasts for 1 minute

NOTE: allow a 3 second delay between flashes.

2] set it up

Sensor is set to Interior Delay by default.

1] set Name:

setting a specific name & location seperates sensors

2] set Type:

instant or delay

 use instant only if sensor will not be tripped during Entry/Exit to disarm system while in Away mode

3] allow Bypass:

determines whether it can be bypassed during arming cycle

3] mount it

Standard Corner or Wall Mounting.

Refer to Figures on right for bracket mounting



Sensor can be mounted on corner or wall, or ceiling using supplied brackets

- 1] avoid these Locations: direct sunlight, rapid temperature change, air ducts, metal wall
- 2] Corner Mounting:

Remove Backplate from Sensor. Use either 2 upper or 2 lower screw holes. Mount height at 7.5 ft. Attach Sensor on Backplate

3] Wall Mounting:


Remove Backplate. Use 2 screw holes in center. Mount height at 7.5 ft. Attach Sensor on Backplate

- 1 Screw part A to part B using small screw.
- 2] Select either the Corner Mount [D] or Wall Mount [C].
- 3] Mount selected bracket at a height of 7.5 ft. on the wall using supplied long screws with anchors.
- 4] Place the assembly of parts A and B on the shaft of the desired mounting bracket.
- 5 Insert screw on top of shaft to hold bracket in place. [see figure to right]
- 6 Attach the sensor to mounted backplate with the screw at the bottom to secure.

NOTE:


After the Sensor trips (sensing motion) it will not trip again for 3 minutes

During normal operation, the LED will never illuminate. The LED only illuminates in test mode

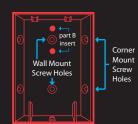

[A]

Backplate

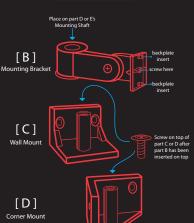



portable alarm systems www.tattletale.com 6269 Frost Road. Westerville OH 43082