




# **EASY-GRASP TOASTER OVEN**

**Model: SO-0972W**

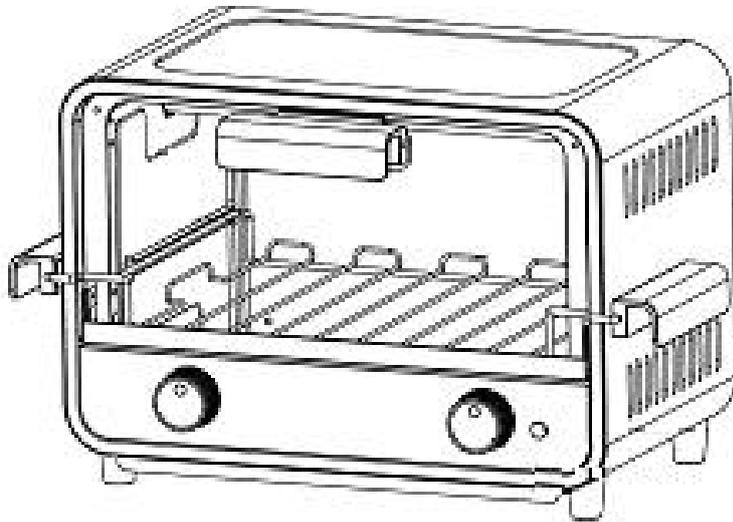

## *INSTRUCTIONS MANUAL*

Please read this manual carefully before use, in order to avoid damage due to incorrect use. Please pay particular attention to the safety information. Please keep this manual in a safe place for future reference.

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions.
2. Do not touch hot surfaces.
3. To protect against electrical shock ,do not immerse cord or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.household use only.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
12. Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to “off”, then remove plug from wall outlet.
13. Do not use appliance for other than intended use.
14. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.
15. a) A short power supply cord should be used to reduce the risk resulting from becoming entangled in or tripping over a longer cord.  
b) Longer extension cords are available and may be used if care is exercised in their use.  
c) If a longer extension cord is used:
  - The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance;
  - The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally.
16. Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
17. A fire may occur if the toaster oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on top of the appliance when in operation.
18. Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts involving a risk of electric shock.
19. Extreme caution should be exercised when using containers constructed of other than metal or glass.
20. Do not store any materials, other than manufacturers recommended accessories, in this oven when not in use.
21. Do not place any of the following materials in the oven: paper, card board, plastic, and the like.
22. Do not cover crumb tray or any part of the oven with metal foil. This will cause overheating of the oven.


## SAFETY INFORMATION

- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance may be used only for its intended purpose. No responsibility can be taken for any possible damage caused through incorrect use or improper handling.
- Before connecting the appliance to the power source, check that the current and power match those given on the rating plate.
- Do not put the appliance or the plug in water or any other liquid. However should the appliance accidentally fall into water, unplug the appliance immediately and have it checked by a qualified person before using it again. Non-observance could cause a fatal electric shock!
- Never attempt to open the housing by yourself.
- Do not place any kind of object into the inside of the housing.
- Do not use the appliance with wet hands, on a damp floor or when the appliance itself is wet.
- Do not touch the plug with wet or damp hands.
- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
- Do not use the appliance if it is dropped or otherwise damaged or if the cord or plug is damaged. In the case of damage, take the appliance to an electrical repair shop for examination and repair if necessary.
- Never attempt to repair the appliance by yourself. This could cause an electric shock.
- Do not allow the cord to hang over sharp edges and keep it well away from hot objects and naked flames. Remove the plug from the socket only by holding the plug.
- Make sure that there is no danger that the cord or extension cord may inadvertently be pulled or cause anyone to trip when in use.
- If an extension cord is used it must be suited to the power consumption of the appliance, otherwise overheating of the extension cord and /or plug may occur.
- Stand the appliance on a firm, level and heatproof surface away from naked flame (e.g. a gas stove) and out of reach of children.
- This appliance is not suitable for commercial or outdoor use.
- Never leave the appliance unattended while it is in use.
- Children cannot recognize the dangers involved in the incorrect use of electrical appliances. Therefore never allow children to use household appliances without supervision.
- Always remove the plug from the socket when the appliance is not in use and each time before it is cleaned.
- **Danger!** Nominal voltage is still present in the appliance as long as the appliance is connected to the mains socket.
- Switch the appliance off before disconnecting from the mains.

## SPECIAL SAFETY INFORMATION

- **Caution, danger of burns!** During operation the housing becomes very hot. Never cover the housing and do not touch with your bare hands.
- Please be extremely careful when handling meals after they have been cooked, because they can be extremely hot, and so too can any containers used, such as the baking tray supplied. Never handle with your bare hands.
- **Take care when using the toaster.** Bread can burn.
- Do not splash water on the oven window when the appliance is in use.
- Do not use the appliance with the crumb tray removed.
- After using the appliance, check to see that the TIMER is in the OFF position and disconnect at the mains. **Beware!** If you disconnect at the mains when the timer is in the ON position, sparks might be emitted and the socket damaged.

# OPERATIONS

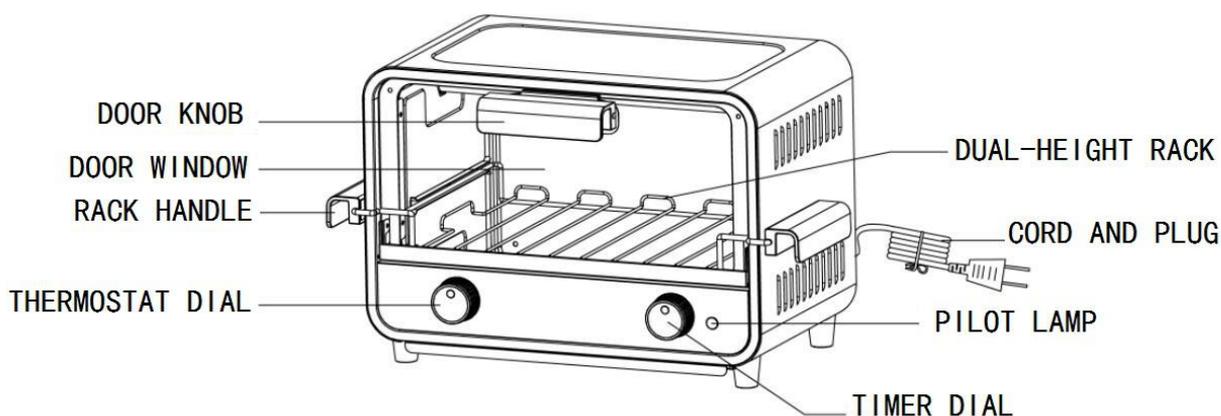

## BEFORE FIRST USE

- Remove all accessories and shipping materials.
- Wash the rack, pan in warm soapy water. Wipe the inside of the oven with a damp cloth or sponge. Blot dry with paper towels to be sure unit is dry before using. (See Cleaning and Care).
- For the first time only, set the temperature knob to MAX and set timer to 15 minutes. This will burn off any oils remained from production.

Note: The oven may smoke during this process and there may be a slight smell. This is normal for a new oven and will not last long. Be sure there is sufficient ventilation.

## OPERATION

- Check that both TIMER and Thermostat dial are turned to OFF position.
- Insert the plug into an appropriate socket.
- Adjust dual-height rack to desired height.
- Place the food prepared for baking, toasting or grilling in the oven and close the door.
- Turn the Thermostat dial to desired temperature (up to 480°F).
- Set the cooking time (up to 15 minutes) using the TIMER dial ⌚. The appliance switches itself on.
- The appliance turns itself off automatically once the set time is over. This is signaled by a short ring sound.  
Note: The TIMER may continue to make ticking sound after the set time is over. This is normal and not a cause for concern.
- The upper heating elements will radiate more heat than the lower heating elements. This is to balance out the heating effect and not a malfunction.
- Check at regular intervals that the food is not burning.
- It is recommended to cook meat or fish wrapped in aluminum foil. Meat or fish not wrapped causes a discoloration in the oven compartment and will lead to a change in the heating conditions.
- To stop the cooking process before the TIMER has finished its cycle, turn both the TIMER and the Thermostat dials to OFF position.
- Handle and remove the hot food with care.
- **Caution! The oven surfaces and door becomes hot during and after use.** Touch it only at the handle.

## **CLEANING AND CARE**

**Be sure oven is turned OFF and unplug from outlet before cleaning. Allow the unit to cool completely.**

- Clean the outer surfaces using a soft, damp cloth and a gentle cleaner.
- Never use abrasive cleaners or sharp objects (e.g. steel wool).
- The appliance is equipped with a removable crumb tray.
- The rack, baking tray and crumb tray can be washed in warm water and detergent.
- Replace the cleaned crumb tray before using the appliance again.

## **TECHNICAL SPECIFICATIONS**

Power: 800W

Voltage: 120V/60Hz

Capacity: 0.15cuft

Unit dimension: 10.3W x 3.5D x 7.0H inches

Net weight: 5.6 lbs



## Your Guarantee

If this product is found to be faulty as a result of faulty materials or workmanship within one year from date of purchase, it will be repaired free of charge.

This guarantee is subject to the following terms:

- Sunpentown must be notified of the fault.
- Proof of purchase must be presented to Sunpentown's nominated representative.
- The warranty will be void if the product is modified, misused or repaired by an unauthorized person.
- The warranty after repair will not be extended beyond the original one-year period.
- All replacement parts will be new or reconditioned.
- Parts, which are replaced, become the property of Sunpentown.
- The warranty applies for the use of the product in the USA only.

What is NOT COVERED:

- Warranty does not include freight charges.
- Incidental or consequential damage caused by possible defects with this product.
- Damage to product caused by improper power supply voltage, accident, fire, floods or acts of nature.
- Failure of product resulting from unauthorized modifications to the product.
- Improper installation or failure to perform the necessary maintenance.

This GUARANTEE is in addition to your Statutory Rights

**SUNPENTOWN INTERNATIONAL INC.**  
**14625 Clark Ave. City of Industry, CA 91745**  
**Tel: 800-330-0388**  
**service@sunpentown.com**  
www.spt-usa.com