


OPERATION

- Refer to tractor manual to determine proper towing capacity of your Tractor / Rider.
- GROUND CONDITION IS VITAL TO GOOD LEVELING. Soil should be moist, but not muddy.
- Refer to your Tractor or Riding Mower owner's manual for proper towing capacity and safe operation of your towing equipment. Towing / Stopping distances will be greatly affected by added weight of roller.
- The plug has an o-ring to create a seal and prevents the drum contents from leaking out.

- Fill the roller with the amount of water recommended for your tractor / rider. Screw in the plug and tighten securely.

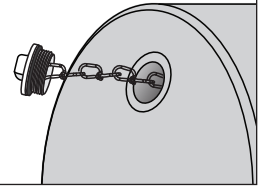

- Please note that sand may be used in place of water with no risk of freezing.



TO PREVENT INJURY, USE WITH CAUTION: LIFTING HAZARD

When the roller is fully loaded with water, it weighs:

R28-1824 = 273 lbs

R76-2436 = 704 lbs



MODEL R76-2436 HANDLE FOR TRANSPORT ONLY, DO NOT PUSH WHEN FULL.

Model	Capacity (gal.)	Weight Empty (lbs.)	Weight of water at Capacity (lbs.)	Combined Weight with Water (lbs.)	Max Combined Weight Rating (lbs.)
R28-1824	28	39	234	273	300
R76-2436	76	70	634	704	770
Materials other than water can be used to fill roller. DO NOT EXCEED THE MAX COMBINED WEIGHT RATING					




DO NOT FILL ROLLER TO A WEIGHT GREATER THAN YOU CAN HANDLE AND CONTROL.


DO NOT EXCEED TOWING CAPACITY.

Using the Handle:


1. Rotate the handle (1) position.

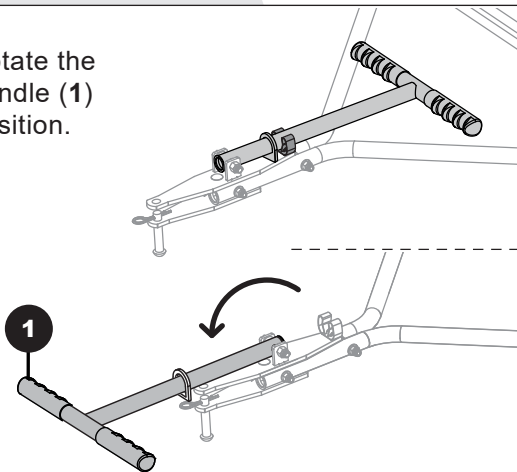

2. Slide the D-ring (9) over the top hitch plate (5).

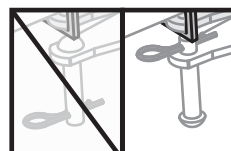

NOTE:
The bottom hitch plate can be used to store the clevis pin upside down.

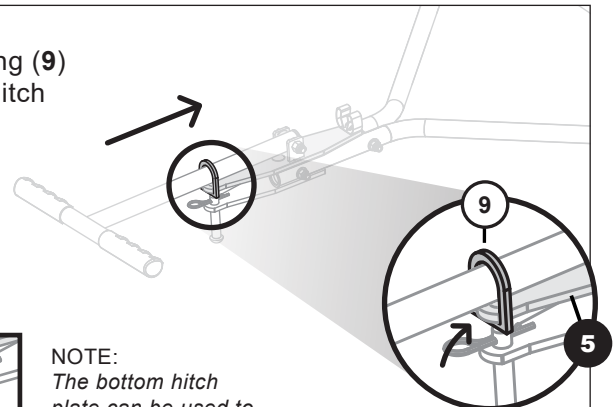

MAINTENANCE

- The key to years of trouble-free service is to keep your Lawn Roller clean and dry.
- Should any rust develop, sand lightly and then paint the area with enamel.
- Periodically check all fasteners for tightness.
- Lubricate bearings monthly with general purpose lithium grease. Using the grease fittings on the bearings, ensure grease fitting is clean prior to lubricating. If used in a very dirty / wet environment, lubricate bearings weekly.

NOTE: It's best to rotate axle while lubricating. Bearings are fully greased when grease comes out the bearing seals on the sides.

TRACTOR / RIDING MOWER SPEED



Rollers yield the best results when ground conditions are correct, and equipment is operating at **less than 3 mph**.

CALIBRATING YOUR TRACTOR TO 3 MPH:

Measure a distance of 20 feet on a flat, level surface. Adjust tractor throttle and select a gear to cover this distance in 4.5 seconds.

CAUTION! Avoid Damage.



Do not overload your tractor / rider. Roller fully loaded with water weighs:

R28-1824 = 273 lbs R76-2436 = 704 lbs

Do not fill roller to a weight greater than you can handle and control.
Model R76-2436 Handle for transport only, do not push when full.



WARNING: PINCH POINTS



Use caution between the scraper bar and roller, as well as the handle.

STORAGE

For longest life:

- ✓ Drain the roller
- ✓ Leave the plug out
- ✓ Grease bearings prior to long term storage.
Refer to maintenance section.
- ✓ If possible, hang the roller when not in use to prevent possibility of developing a flat spot.

If a flat spot develops on the roller during storage, ensure that the roller is empty then leave out in the sun to warm and roll around to reduce flat area.

