 


HARDWARE IDENTIFIER


Illustrations on this page are to scale for faster identification of hardware during assembly.

DO NOT RETURN PRODUCT IF YOU ARE MISSING PARTS.

Please Call: 1 (877) 728-8224



 5
Nut: Nylon Lock
1/4" (x6)
B-4785




15
Nut: Nylon Lock
5/16" (x5)
B-4786




26
Nut: Hex Head
5/16" -18 (x2)
30M1000P



 
54
Nut: Hex Lock
5/16" -18 (x2)
B-1674P



23
Pin; Spring (x1)
F-892

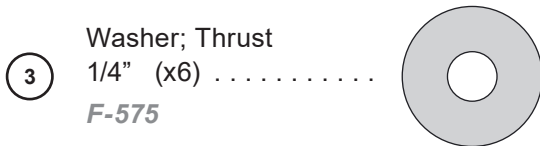

3
Washer; Thrust
1/4" (x6)
F-575

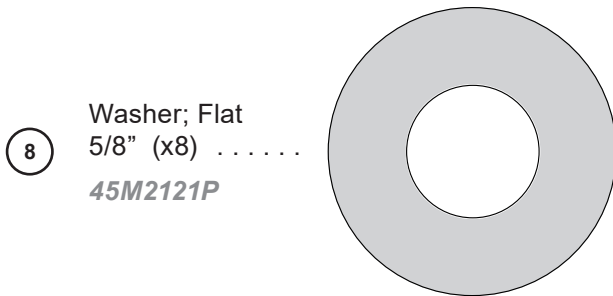


8
Washer; Flat
5/8" (x8)
45M2121P




20
O-Ring
3/8" (x1)
F-365



 
32
Washer; Flat
5/16" (x8)
45M1111P




38
Bushing; Pivot (x4)
F-1045

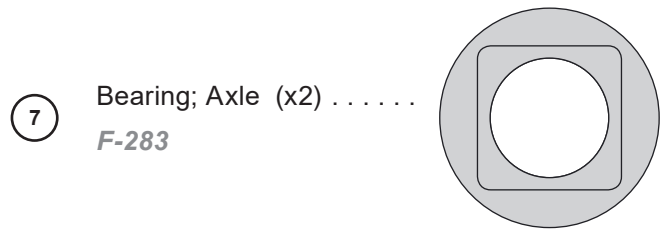


7
Bearing; Axle (x2)
F-283

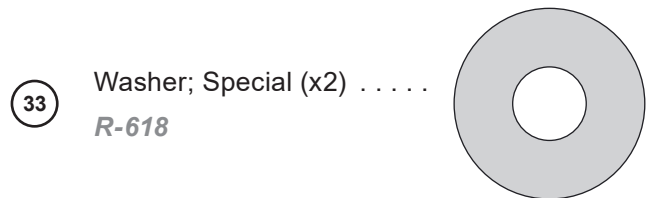


33
Washer; Special (x2)
R-618

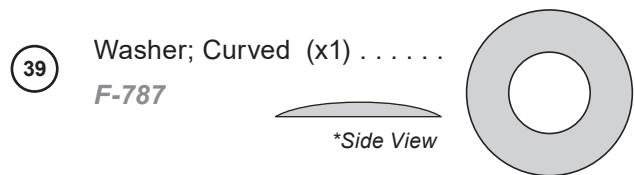

39
Washer; Curved (x1)
F-787
*Side View

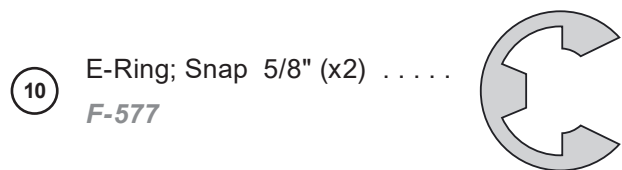

10
E-Ring; Snap 5/8" (x2)
F-577

 

42
Spacer (x2)
1008378-01

HARDWARE IDENTIFIER

Illustrations on this page are to scale for faster identification of hardware during assembly.

 
DO NOT RETURN PRODUCT IF YOU ARE MISSING PARTS.

Please Call: 1 (877) 728-8224

4

Bolt; Carriage, 1/4 x 1-3/4" (x6)


2M0828SS



13

Pin; Hitch, 1/2" x 2 1/2" (x1)


B-3861

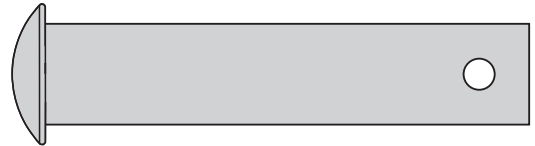

14

Bolt; Carriage, 5/16 x 2" (x2)


10M1032P

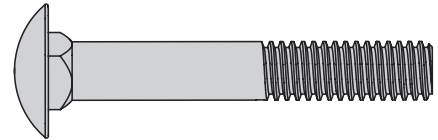

27

Bolt; Hex, 5/16 x 2-1/4" (x2)

 2M1036P-FT



36

Bolt; Hex, 5/16 x 2-3/4" (x3)


2M1044P



41

Bolt; Carriage
5/16 x 3/4" (x1)


11M1012P

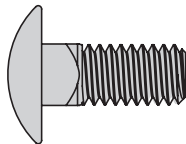

40

Hairpin Cotter; .148" Diameter
(x1)


B-1002P

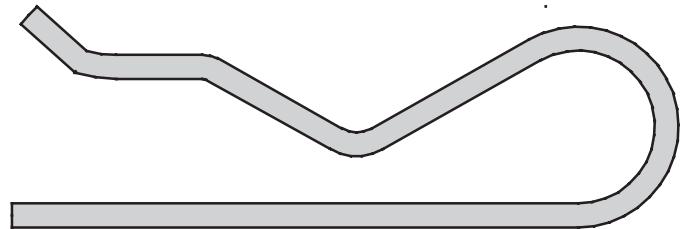

16

Hairpin Cotter
(x1)

D-146P

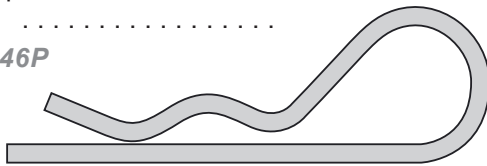

19

Spring; Agitator, SS
(x1)

F-436



18

Pin; Cotter
1/8 x 1" (x1)

 
50M0416P




34

Spring (x1)

B-3805



COMPONENT VIEW AND REFERENCE LIST

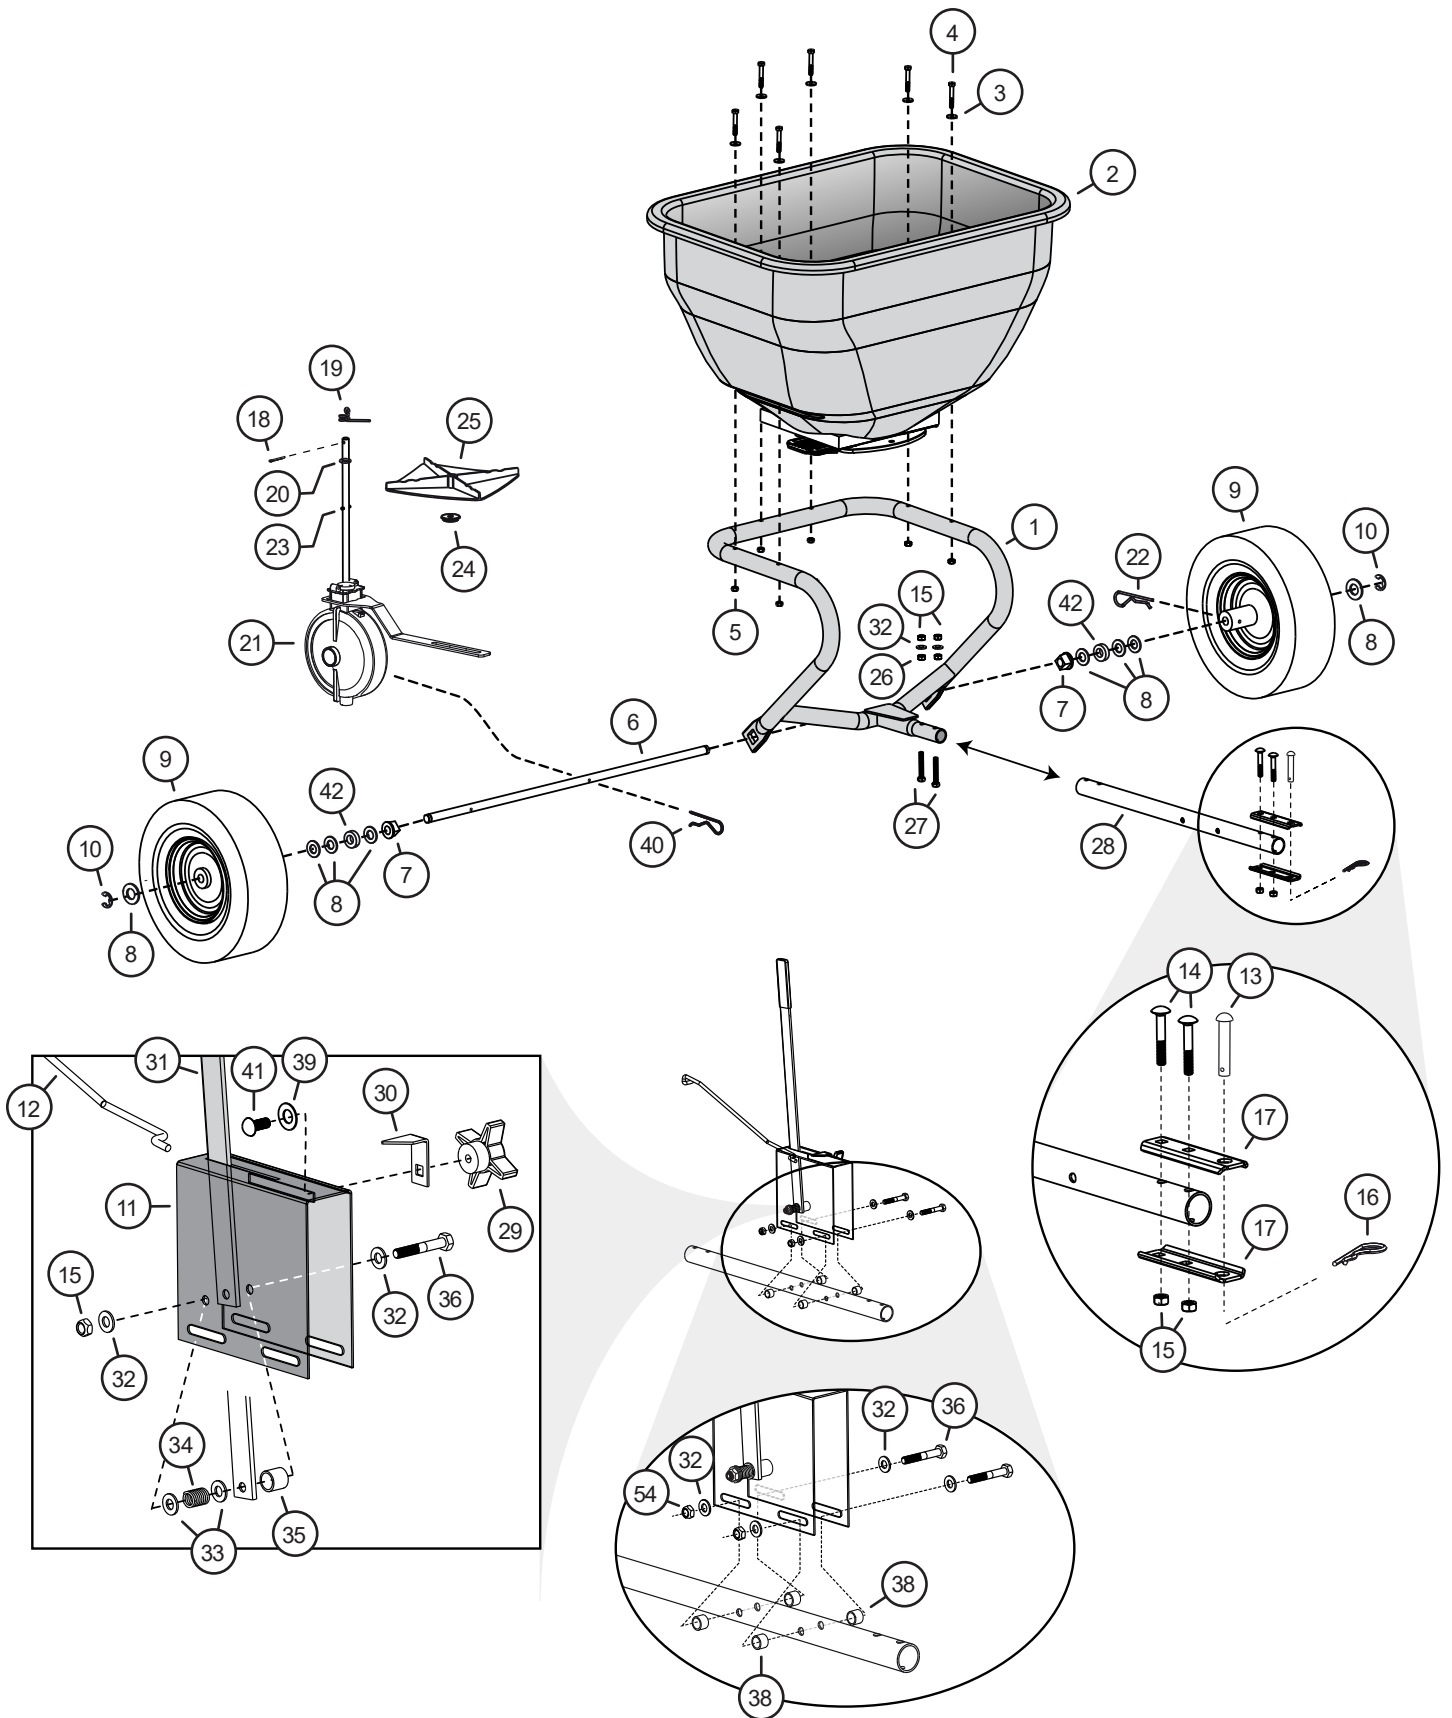

COMPONENT VIEW AND REFERENCE LIST

Ref. #	BS26BH		BS36BH		Description	Qty
	BS26BH-A	BS261BH	BS36BH-A	BS361BH		
Ref. #	Part #	Part #	Part #	Part #	Description	Qty
1	F-1029-10	F-1029-10	F-1029-10	F-1029-10	Hopper Support	1
2	F-1030	F-1030	F-1031	F-1031	Hopper	1
6	F-1013-01	F-1013-01	F-1013-01	F-1013-01	Axle; Plated	1
9	1008774	1008774	1008774	1008774	Wheel; Pneumatic, Composite Rim	2
11	F-1009-10	F-1009-10	F-1009-10	F-1009-10	Plate; Gauge	1
12	F-1010	F-1010	F-1010-01	F-1010-01	Rod; Link	1
17	R-892-10	R-892-10	R-892-10	R-892-10	Clevis	2
21	F-1015	F-1015	F-1015	F-1015	Transmission Assembly	1
23	F-892	F-892	F-892	F-892	Pin; Spring	1
25	F-573	F-573	F-573	F-573	Fan	1
28	F-1023-10	F-1023-10	F-1023-10	F-1023-10	Tube; Tow	1
30	F-781-01	F-781-01	F-781-01	F-781-01	Handle; Stop	1
31	F-1008-10	F-1008-10	F-1008-10	F-1008-10	Handle; Flow Control	1
42	1008378-01	1008378-01	1008378-01	1008378-01	Spacer	2
55	N/A	BS-HANDEXTBH	N/A	BS-HANDEXTBH	Handle Extension Kit	1
56	N/A	1009191	N/A	1009191	Hopper Cover	1

Skinpack Z-1912 *(Used on all models)*

Ref #	Part #	Description	Qty	Ref #	Part #	Description	Qty
3	F-575	Washer; Thrust, 1/4"	6	26	30M1000P	Nut; Hex, 5/16"-18	2
4	2M0828SS	Bolt, Hex Stainless, 1/4" x 1-3/4"	6	27	2M1036P-FT	Bolt; Hex, 5/16" x 2-1/4"	2
5	B-4785	Nut; Nylon Lock, 1/4"	6	29	F-782	Knob; 4 Prong, Black	1
7	F-283	Axle; Bearing	2	32	45M1111P	Washer; Flat, 5/16"	8
8	45M2121P	Washer; Flat, 5/8"	8	33	R-618	Washer; Special	2
10	F-577	E-Ring; Snap, 5/8"	2	34	B-3805	Spring	1
13	B-3861	Pin; Hitch, 1/2" x 2-1/2"	1	35	B-3721	Spacer; Latch	1
14	10M1032P	Bolt, Carriage, 5/16" x 2"	2	36	2M1044P	Bolt; Hex, 5/16" x 2-3/4"	3
15	B-4786	Nut; Nylon Lock, 5/16"	5	37	R-1882	Grip; Flat	1
16	D-146P	Cotter; Hairpin, 1/8"	1	38	F-1045-01	Bushing; Pivot	4
18	50M0416P	Pin; Cotter, 1/8" x 1"	1	39	F-787	Washer; Crvd. Spring-Glv	1
19	F-436	Spring, Agitator, SS	1	40	B-1002P	Cotter; Hairpin, .148 Diameter	1
20	F-365	O-Ring; I.D. AS-110, 3/8"	1	41	11M1012P	Bolt; Carriage, 5/16" x 3/4"	1
22	F-620	Cotter; Special Hairpin	1	54	B-1674P	Nut, Lock, 5/16"-18	2
24	F-591	Driver; Fan	1				


COMPONENT VIEW AND REFERENCE LIST

NOTE:

Gate and directional control plate movement can be adjusted by tightening / loosening bolts (45).

The bolts don't require much tightening or loosening. Use 1/8 turns or less on each bolt, then test the gate and directional control plate for your preferred settings.

Periodically check bolts for tightness.

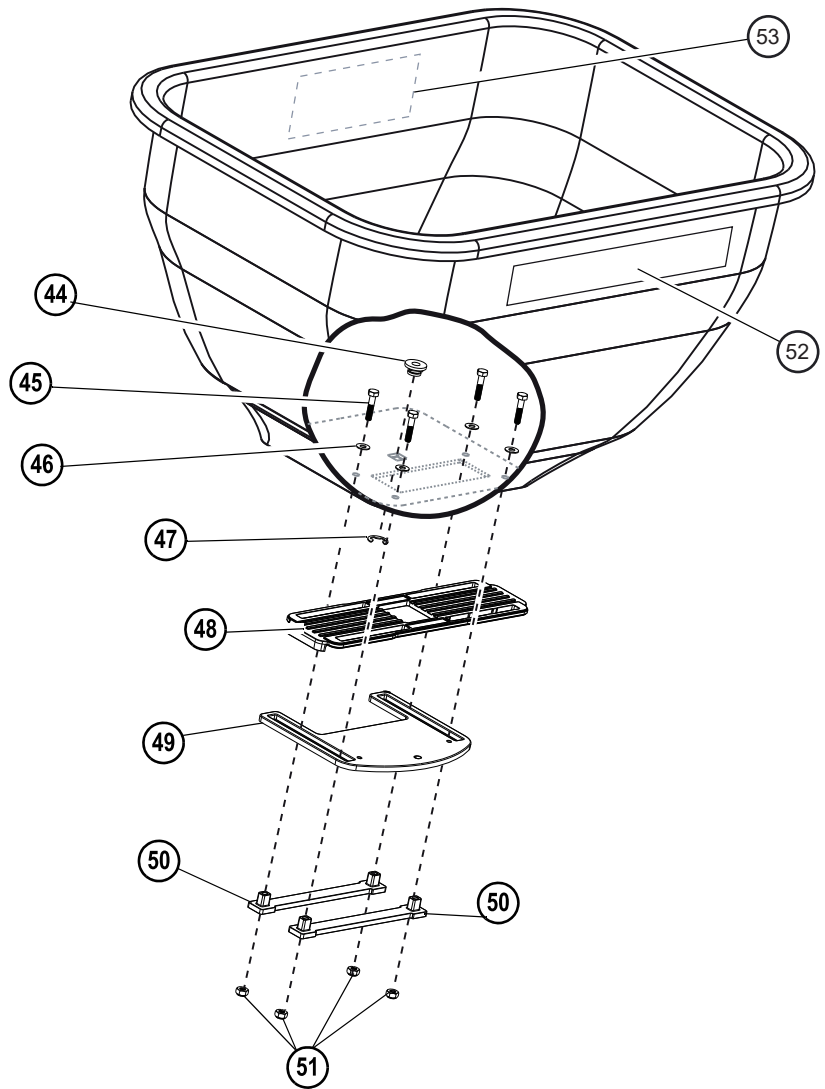

Installation Questions?
Missing Parts?
Replacement Parts?



**DON'T GO
BACK TO
THE STORE!**

Please call our Customer Service
Department, Toll Free: 877-728-8224


Or Email:
customerservice@brinly.com

Hopper Assembly (Used on all models)

Ref #	Part #	Description	Qty
44	F-574	Bearing; Shaft	1
45	2M0820SS	Bolt; Hex, 1/4" x 1-1/4" SS	4
46	45M0909SS	Washer, Plain SS	4
47	F-577	E-Ring, 5/8"	1
48	B-7392	Plate; Directional Control	1
49	B-7391	Gate	1
50	B-7393	Strap	2
51	1005198	Nut; Hex Lock, 1/4"-20 SS	4
52	F-1003	Label; Calibration / Directional	1
53	B-5924	Decal; Logo	1

COMPONENT VIEW AND REFERENCE LIST

WARNING: Allow adequate clearance to avoid damage or injury.

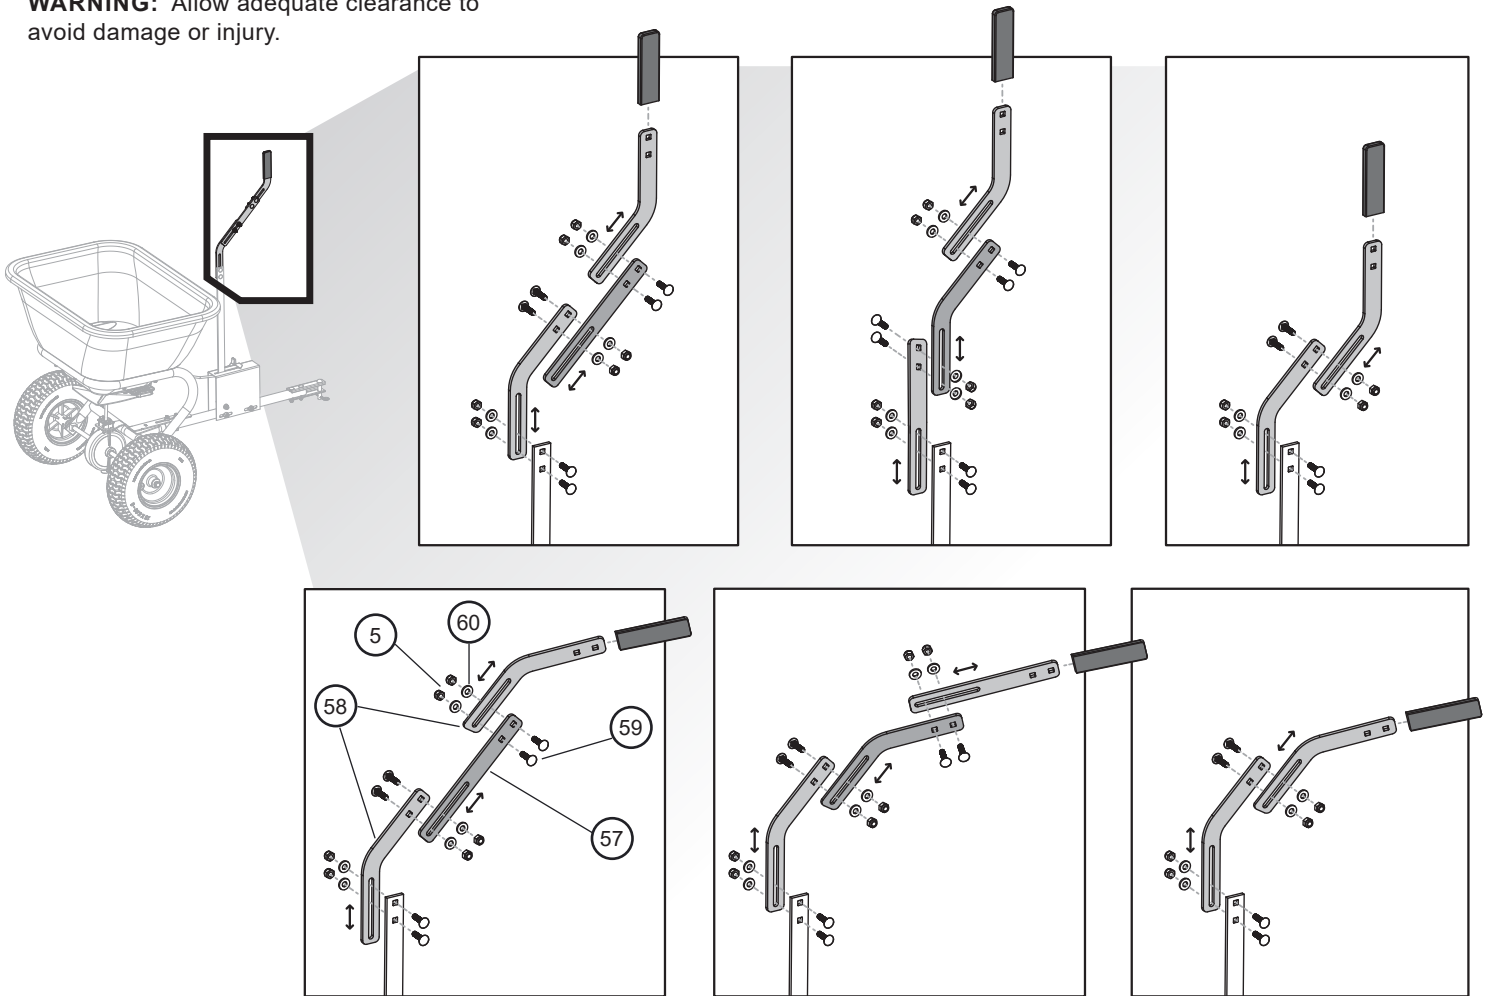

Handle Extension Kit BS-HANDEXTBH (Not included in all models)

Ref #	BS261BH Part #	BS361BH Part #	Description	Qty
57	1020261-10	1020261-10	Handle, Straight Extension	1
58	1020219-10	1020219-10	Handle, Angle Extension	2
	1020220	1020220	Hardware Bag	1
59	11M0816P	11M0816P	Bolt, Carriage, 1/4" x 1"	6
60	45M0909P	45M0909P	Washer, Flat, 1/4"	6
5	B-4785	B-4785	Nut, Nylon Lock, 1/4"-20	6