

Equity

ELECTRIC QUARTZ ALARM




MODEL: 33100
DC: 070119

For more information and support visit: bit.ly/laxtech_support

POWER UP

1. Insert the 120 volt power cord into an outlet.
2. Rotate the Time Set Knob clockwise to the correct time.

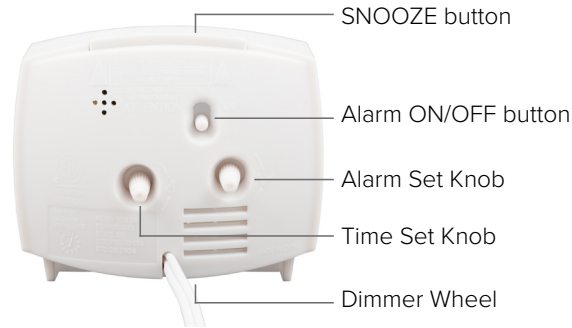

ALARM TIME SETTING & OPERATION

1. Rotate the Alarm Set Knob clockwise to the correct alarm time.
2. Slide the Alarm ON/OFF button upward to activate the alarm.
3. Slide the Alarm ON/OFF button downward to deactivate the alarm.

SNOOZE

 
When alarm sounds, press the SNOOZE button to silence alarm for 4 minutes. Snooze function can be repeated many times if desired.

DISPLAY DIMMER

Spin the Dimmer Wheel on the bottom of the clock to adjust the dial light brightness.

JOIN THE CONVERSATION

Ask questions, watch detailed setup videos, and provide feedback on our **La Crosse Technology** social media outlets!



POWER REQUIREMENTS & DIMENSIONS

Power: 120V Power Cord

Dimensions: 3.00"H x 4.00"W x 2.00"D

WARRANTY & SUPPORT

Equity provides a 2-year limited warranty on this product from the date of consumer purchase against defects for material and workmanship. During this period such defects will be repaired, or the product will be replaced at Equity's option, without charge. This warranty does not cover damage caused by misuse or negligence.

ALL IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF FITNESS AND MERCHANTABILITY, ARE LIMITED IN DURATION TO A PERIOD ENDING TWO YEARS FROM DATE OF PURCHASE.

Some states do not allow limitations on how long an implied warranty lasts so the above limitation may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

If your product is not working properly, please send: your product, a letter explaining the problem, and \$5.00 for postage and handling to:

Equity by La Crosse Warranty Department,
2830 26th St S.


La Crosse, WI 54601

Full Warranty Details, Visit: www.lacrossetechnology.com/support

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRICAL SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

CAUTION: To prevent electrical shock, do not use this (polarized) plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.

ATTENTION: POUR PRÉVENIR LES CHOCS ÉLECTRIQUES NE PAS UTILISER CETTE FICHE POLARISÉE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT, OU UNE AUTRE SORTIE DE COURANT SAUF SI LES LAMES PEUVENT ÊTRE INSÉRÉES À FOND SANS EN LAISSER AUCUNE PARTIE À DÉCOUNVERT

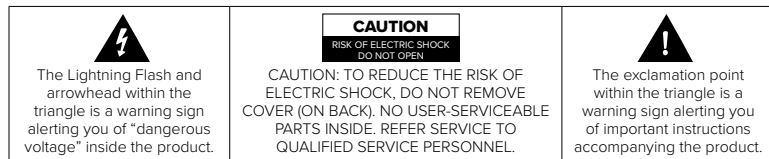

ENVIRONMENTAL PROTECTION



Disposal of electrical and electronic equipment:

Do not dispose of this product with household waste. For the proper treatment, recovery, and recycling, please take this product to the appropriate collection point. If you are unsure where this is, contact your local authority. Improper disposal may be harmful to the environment.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



WARNING: This product can expose you to chemicals including styrene, which is known to the State of California to cause cancer. For more information go to: www.P65Warnings.ca.gov

SAFETY INSTRUCTIONS

- 1. Read Instructions:** All the safety and operating instructions should be read before the appliance is operated.
- 2. Retain Instructions:** The safety and operating instructions should be retained for future reference.
- 3. Water and Moisture:** The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool.
- 4. Ventilation:** The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings, or place in a built-in installation such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
- 5. Heat:** The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- 6. Power Sources:** The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- 7. Grounding or Polarization:** Precautions should be taken so that the grounding or polarization means of an appliance are not defeated.
- 8. Power Cord Protection:** Power supply cords should be routed so that they are not likely to be walked on, or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and at the point where they exit from the appliance.
- 9. Cleaning:** The appliance should be cleaned only as recommended by the manufacturer.
- 10. Object and Liquid Entry:** Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- 11. Damage Requiring Service:** The appliance should be serviced by qualified service personnel when:
 - A. The power supply cord or the plug has been damaged.
 - B. Objects have fallen, or liquid has been spilled into the appliance; or
 - C. The appliance has been exposed to rain; or
 - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
 - E. The appliance has been dropped, or the enclosure damaged.
- 12. Servicing:** The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

FCC STATEMENT

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Increase separation between equipment & receiver.
- Consult the dealer or an experienced radio/TV technician for help.

This device must not be co-located or operating in conjunction with any other antenna or transmitter.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

CAUTION!

The manufacturer is not responsible for any radio or TV interference caused by unauthorized changes or modifications to this equipment. Such changes or modifications could void the user authority to operate the equipment. All rights reserved. This manual may not be reproduced in any form, even in part, or duplicated or processed using electronic, mechanical or chemical process without the written permission of the publisher. This booklet may contain errors or misprints. The information it contains is regularly checked and corrections are included in subsequent editions. We disclaim any responsibility for any technical error or printing error, or their consequences. All trademarks and patents are recognized.