


INSTRUCTION


Adjustable 4 Rail Panel System

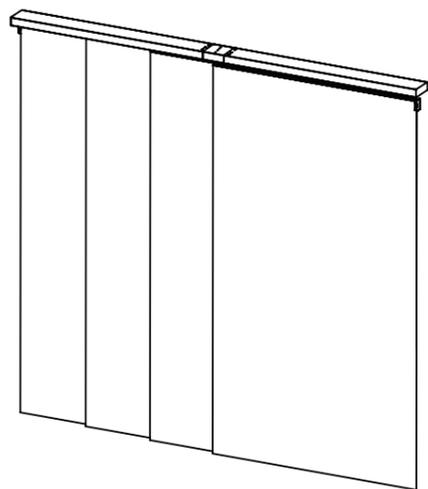



Before start your installation, please check all pieces.
If there are missing or defective parts, kindly contact GoDear Design directly for further help.

Parts

Adjustable Track x 1

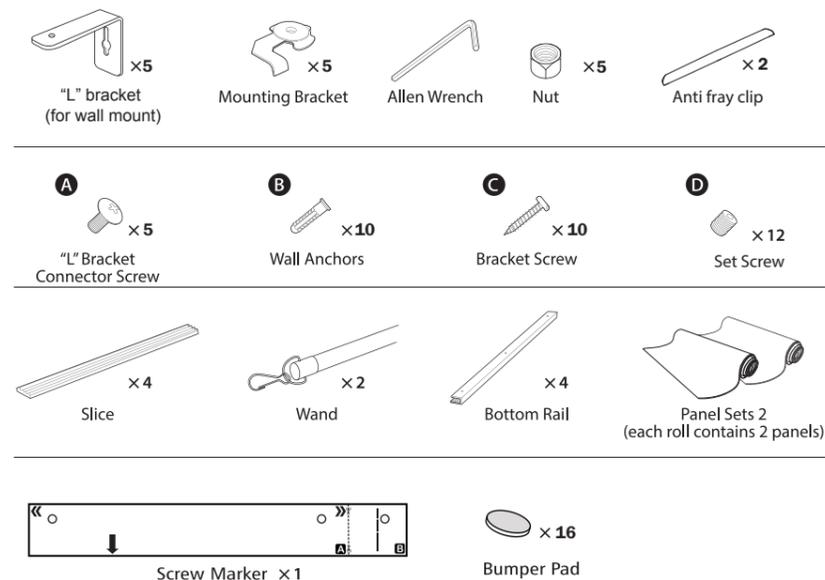


Prepare Tools

 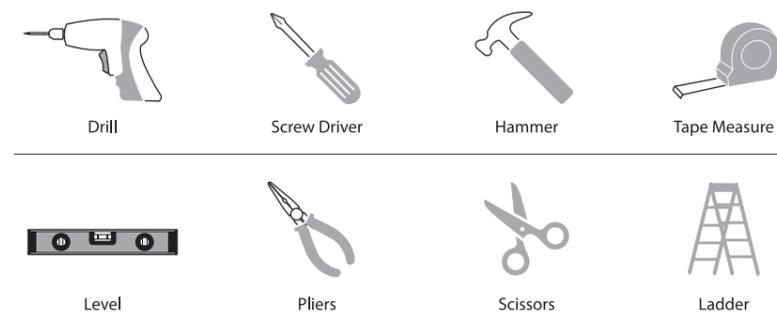


Wall Mount



Step 1 Extend the track to the width you need (maximum 86")

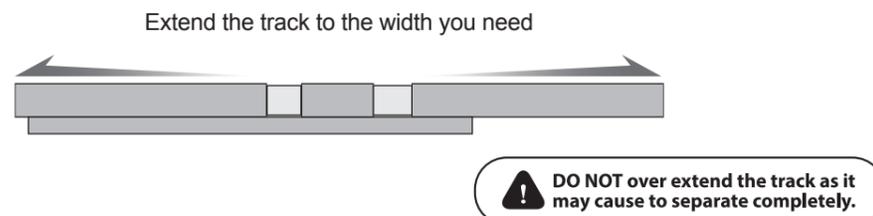



Step 2 Mark the screws position with provided screw marker.

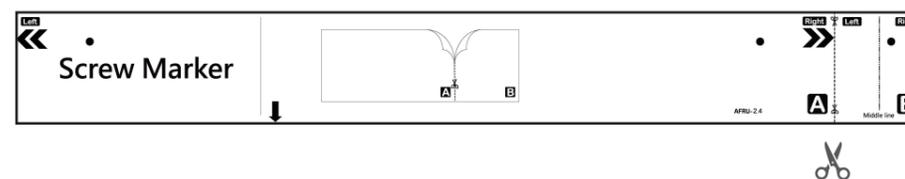

Step 3 Cut down the cardboard B and use it to mark the central screw point.
Align cardboard A against the left side and mark 2 screw points, vice versa.

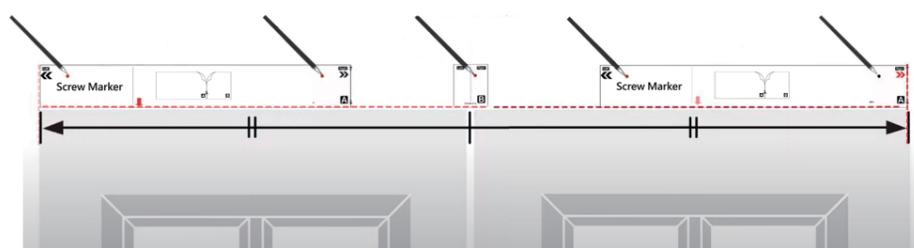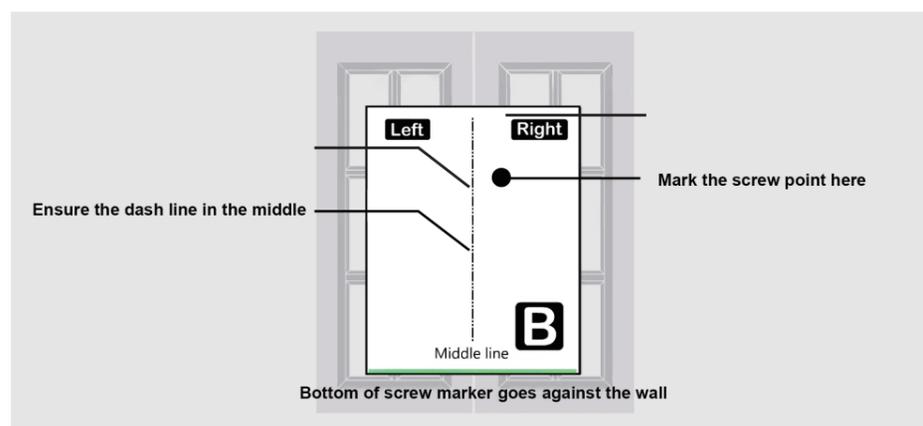


 Note: If you don't want to use the screw marker, you can also use a tape measure to draw screw points, 5 screw points must be on the same level.

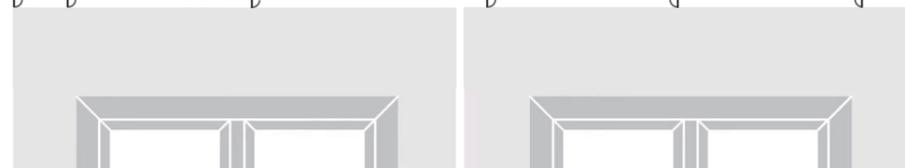


OUTSIDE MOUNT:


- Minimum 2.5" of bracket height required on the top.
- Use a plier and a screw marker to fasten nuts screws.

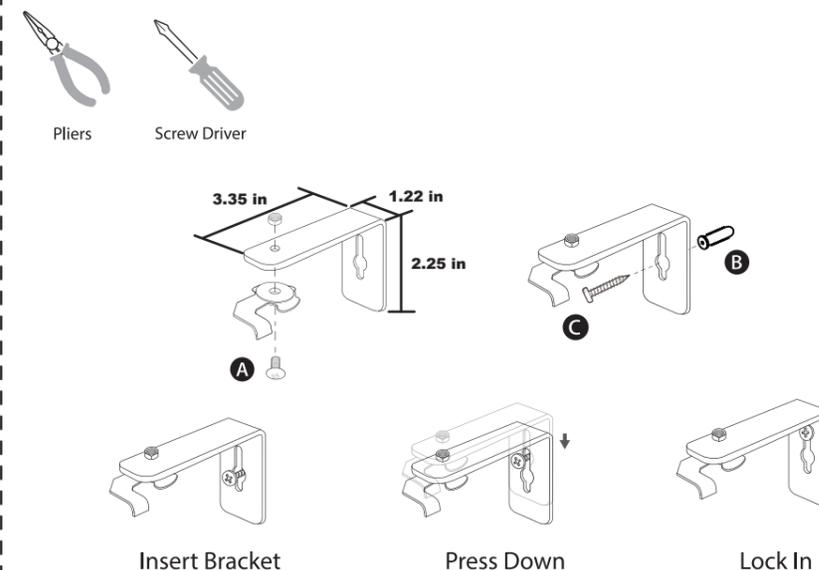

Step 4 Attach the track to the mounting brackets.
We recommend additional hand to finish this step.

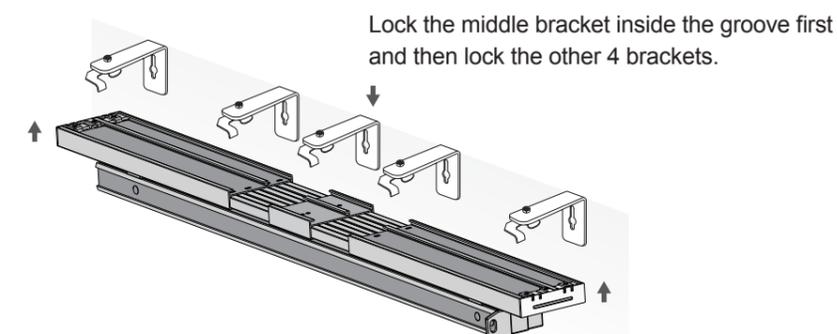

Step 5 Make sure the mounting brackets are tightened inside the groove.

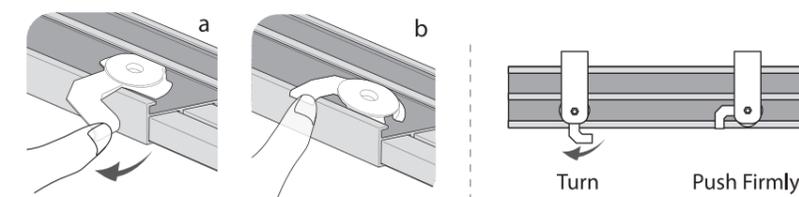


Caution! All the brackets must be correctly and firmly installed.


Please follow Step 6 to complete the installation.

Ceiling Mount

Not required for ceiling mount

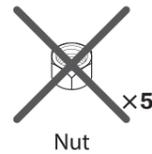


Step 1 Extend the track to the width you need (maximum 86")


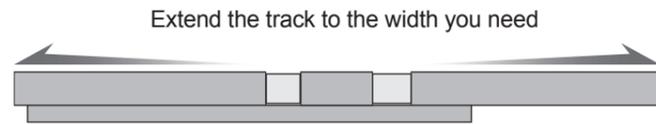


! DO NOT over extend the track as it may cause to separate completely.

 
Step 2 Mark the screws position with provided screw marker.



Step 3 Cut down the cardboard B and use it to mark the central screw point. Align cardboard A against the left side and mark 2 screw points, vice versa.

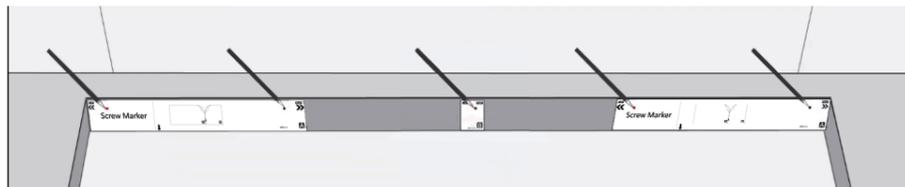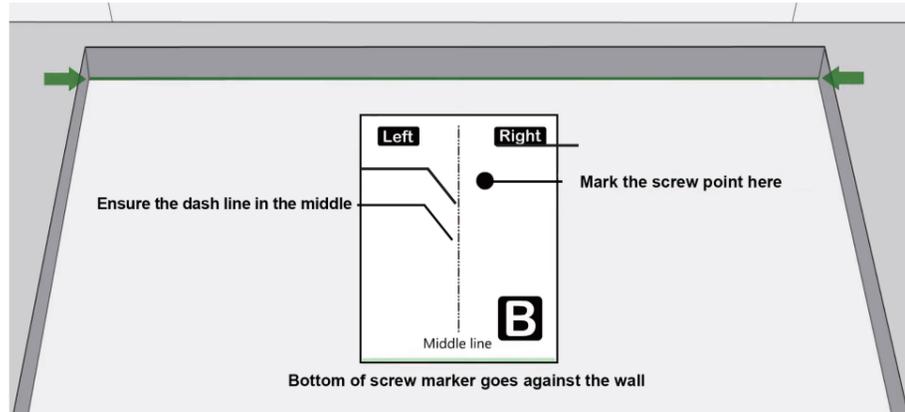


Note: If you don't want to use the screw marker, you can also use a tape measure to draw screw points, 5 screw points must be on the same level.

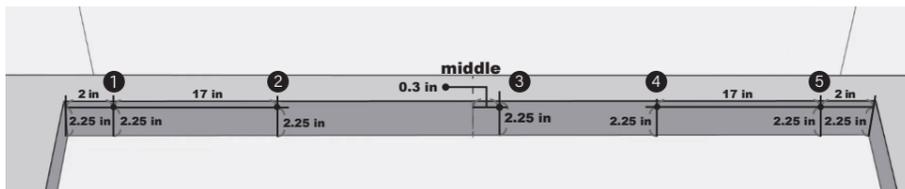


IF INSIDE MOUNT:


- Minimum 2.5" depth needed.
- Make sure mounting surface is FLAT.
- Keep the mounting brackets adjustable.

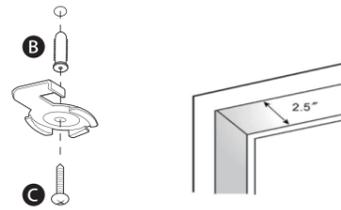

Step 4 Attach the track to the mounting brackets. We recommend additional hand to finish this step.

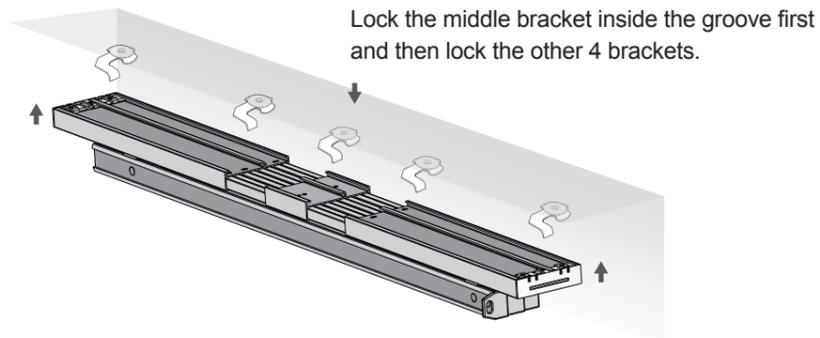


Step 5 Make sure the mounting brackets are tightened inside the groove.

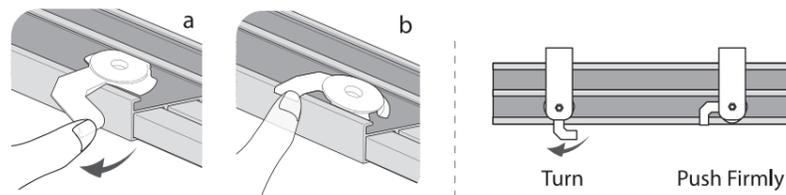


Caution! All the brackets must be correctly and firmly installed.

Step 6 - Sliding Panel


a Measure the size you want

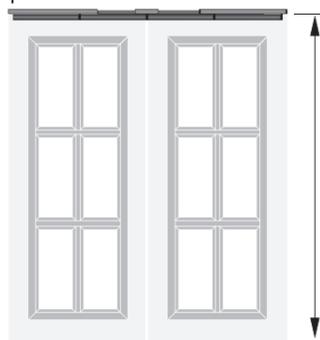


b Cut out the length of Panel

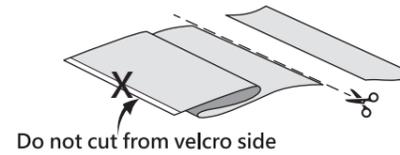


c Insert the panel

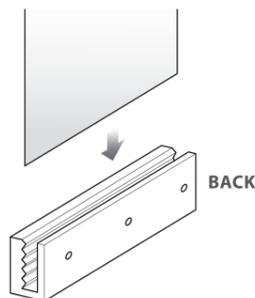


d Insert the slice

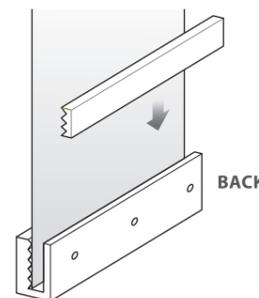


e Use Allen wrench to screw set screws into the bottom rails.

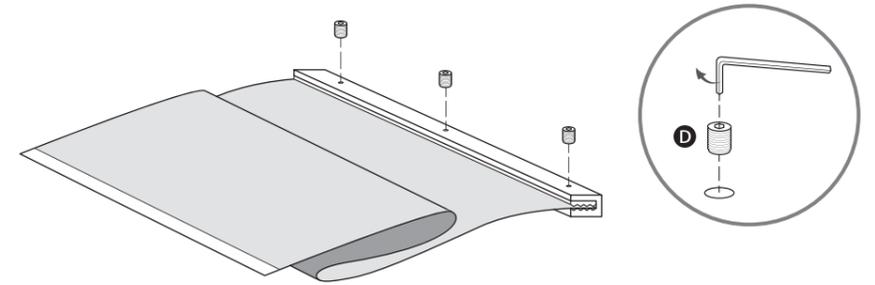

 
f 4 bumper pads on each bottom rail recommended



Step 7 Apply the anti fray clips to two sides of panels. Attach panels on the sliding rails.

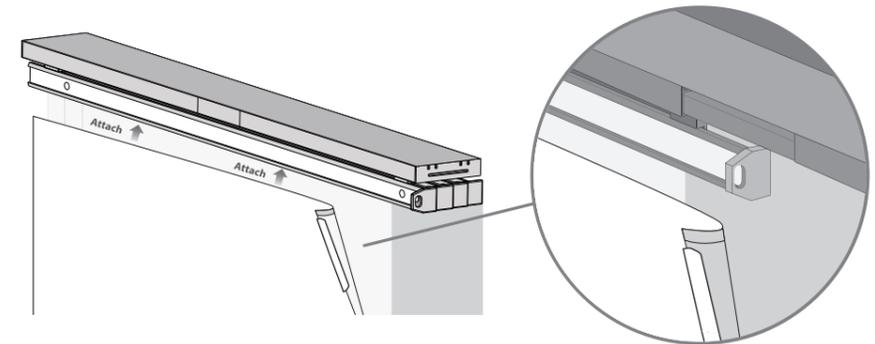

Step 8 Hook the 2 wands to the leading and ending guide rails.

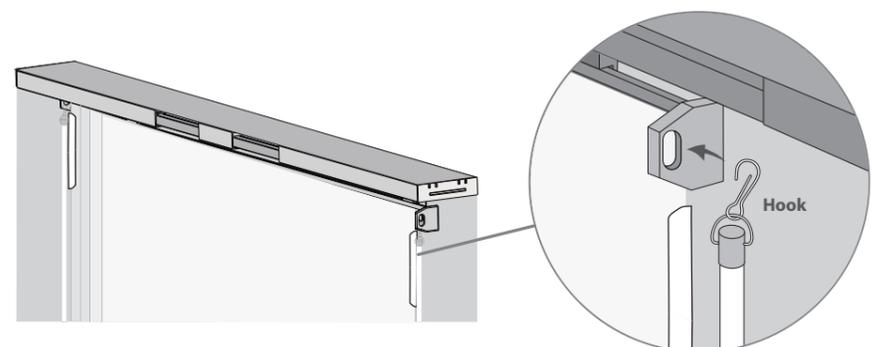

Tips Best 45 degree, use wand to open and close fabric panels with ease.

