


PARTS LIST

KNOW YOUR LAWN MOWER

Fig. 1

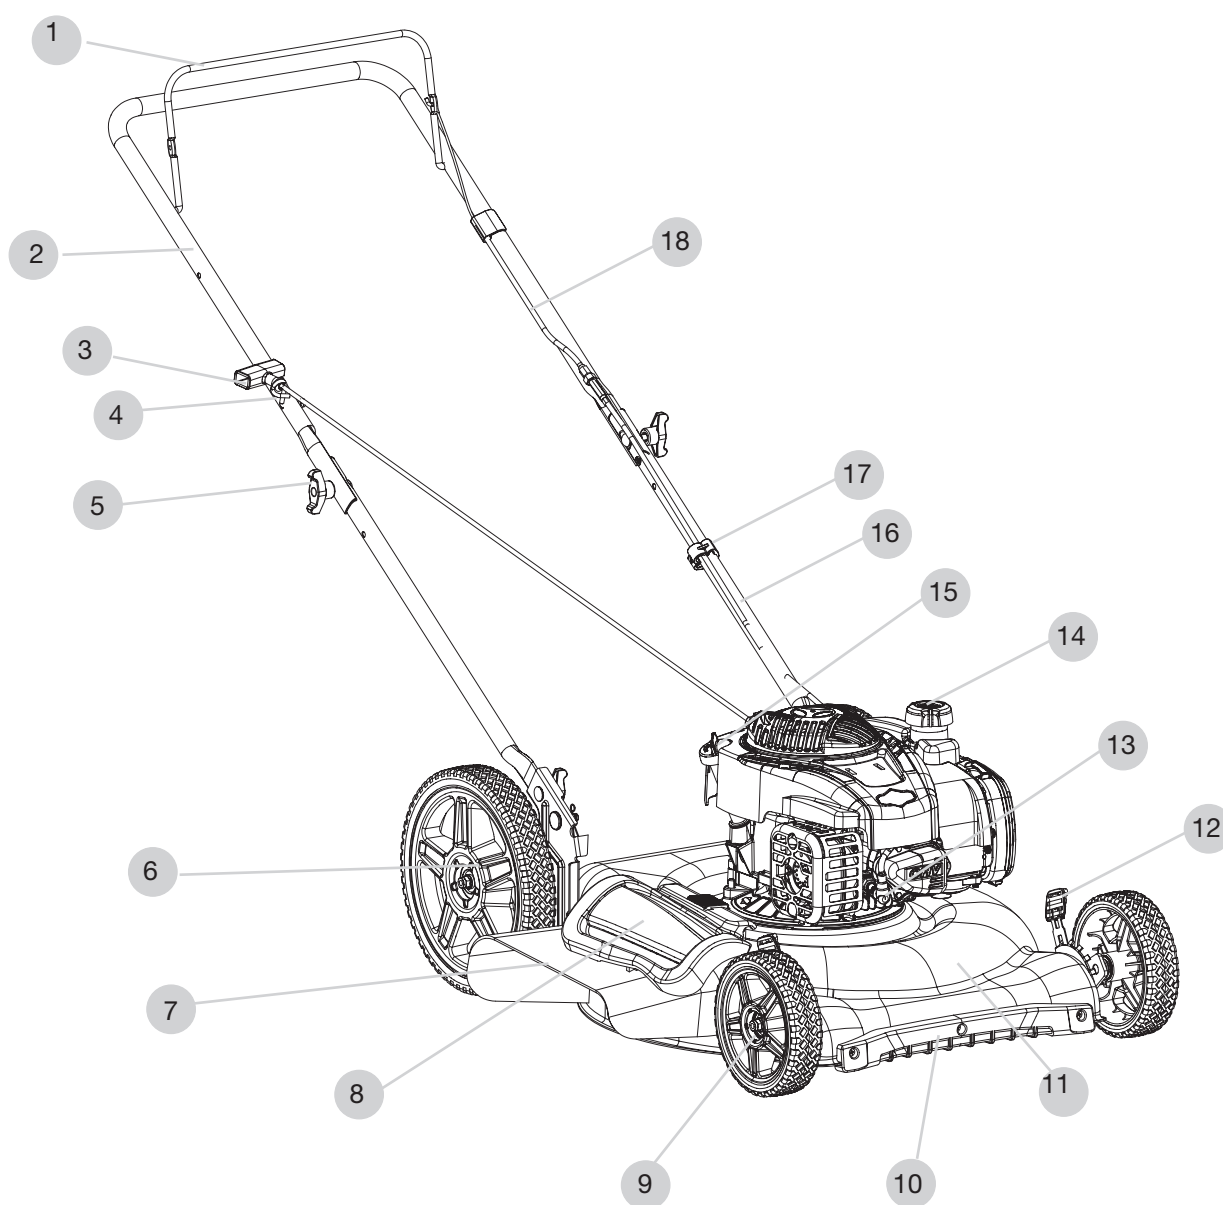

PARTS LIST

1. Engine On/Off Control Bar
2. Upper handle
3. Recoil starter
4. Rope guide
5. Handle knob and bolt
6. Rear wheel
7. Side discharge chute
8. Side discharge cover
9. Front wheel
10. Front bumper
11. Cutting deck
12. Height adjustment lever - 1 per wheel
13. Spark plug cover
14. Gas filler cap
15. Oil filler dipstick
16. Lower handle
17. Cord clip
18. Bowden cable

PARTS LIST

Carefully remove the lawn mower from its packaging and check that the following parts are included:

- A. Main mower deck (with upper and lower handle) 1 pc
- B. Side discharge chute 1 pc
- C. Manual 1 pc
- D. Engine Oil (SAE 30 15 o.z.) 1 pc
- E. Cord clip 1 pc
- F. Handle knob and bolt 4 pcs



WARNING!

If any parts are damaged or missing, do not operate this lawn mower until the missing parts are replaced.

Failure to heed this warning could result in serious personal injury.