



## TABLE OF CONTENTS:

IMPORTANT SAFEGUARDS .....	1
FEATURES .....	2
FUNCTIONS .....	2
ADDITIONAL SAFEGUARDS .....	3
OPERATING INSTRUCTIONS .....	3
CARE AND CLEANING .....	3
ONE YEAR LIMITED WARRANTY .....	4
GARANTIES IMPORTANTES .....	5
CARACTÉRISTIQUES .....	6
FONCTIONS .....	6
GARANTIES SUPPLÉMENTAIRES .....	7
INSTRUCTIONS D'UTILISATION .....	7
ENTRETIEN ET NETTOYAGE .....	7
GARANTIE LIMITÉE D'UN (1) AN .....	8
SALVAGUARDAS IMPORTANTES .....	9
CARACTERÍSTICAS .....	10
FUNCIONES .....	10
SALVAGUARDIAS ADICIONALES .....	11
INSTRUCCIONES DE FUNCIONAMIENTO .....	11
CUIDADO Y LIMPIEZA .....	11
GARANTÍ LIMITADA D 1 AÑO .....	12

Technical specifications:

SB-01: 1500W, 120V, 60Hz

DB-02: 900W + 900W = 1800W, 120V, 60 Hz

“NESCO®” is a registered trademark of The Metal Ware Corporation.

The Metal Ware Corporation  
1700 Monroe St., P.O. Box 237  
Two Rivers, WI 54241-0237  
Phone: 1-(800) 288-4545



For accessories and additional products, go to  
[www.nesco.com](http://www.nesco.com)

## IMPORTANT SAFEGUARDS

**- This product is designed for household use only -**

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. READ ALL INSTRUCTIONS.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock and personal injury, do not immerse this appliance, including cord and plug, in water or other liquid.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Close supervision is necessary when any appliance is used by or near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool completely before putting on or taking off parts, and before cleaning.
7. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. To avoid hazards, return appliance to NESCO® Factory Service Department for examination, repair or adjustment.
8. The use of accessory attachments not recommended by the manufacturer may result in fire, electric shock or injury to persons.
9. Do not use outdoors.
10. Do not let cord hang over edge of table or counter, or touch hot surfaces.
11. Do not place on or near a hot gas or electrical burner or in a heated oven.
12. Do not use appliance for other than its intended use, as described in this manual.
13. Do not use metal scouring pads on the exterior surface of the appliance.
14. When finished using hot plate, turn temperature adjuster knob to MIN and the power knob to OFF.

## SAVE THESE INSTRUCTIONS

**Polarized Plug:** This appliance has a polarized plug (one blade is wider than the other). To reduce risk of electric shock, plug is intended to fit into 120V AC polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not try to modify the plug in any way.

**Short Cord Instructions:** A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the tabletop where it can be pulled on by children or tripped over unintentionally.

## FEATURES



**Model SB-01**



## FUNCTIONS

**ON/OFF CONTROL** - Controls electrical power to the appliance. Control must be turned to ON position and cord plugged into 120V electrical outlet in order for the appliance to work. Always turn control to OFF position before unplugging cord from outlet.

**TEMPERATURE CONTROL**- Controls the temperature of the heating surface. MIN. is low heat and MAX is high heat.

**INDICATOR LIGHT** - When ON shows the appliance is heating and will turn OFF when desired temperature is reached. It will then cycle ON/OFF during use.

**CAST IRON HEATING SURFACE** - Durable heating surface will evenly distribute heat and last for many uses.

## ADDITIONAL SAFEGUARDS

- **CAUTION HOT SURFACES!** This appliance is hot during use and retains heat for some time after turning OFF. Proper precautions must be taken to prevent the risk of burns, fires or other injury to persons or damage to property.
- Always use oven mitts when handling hot materials and allow metal parts to cool before cleaning.
- All users of this appliance must read and understand this “Use & Care Guide” before operating or cleaning this appliance.
- When using this appliance, provide adequate air space above and on all sides for air circulation.
- Do not leave this appliance unattended during use.
- If this appliance begins to malfunction during use, immediately unplug the cord from electrical outlet.
- The cord to this appliance should only be plugged into a 120V AC electrical wall outlet.
- Use this appliance in a stable position at all times.
- Note: When using hot plate for the first time, there may be some smoke or the smell of smoke, coming from the heating surface. This is normal due to the protective coating placed on surface during the manufacturing process.

## OPERATING INSTRUCTIONS

- Turn ON/OFF control to OFF, then plug appliance cord into a 120V AC electrical outlet.
- Turn ON/OFF control to “ON” position.
- Adjust temperature control to desired position. MIN is low heat. MAX is high heat.
- The Indicator light will turn ON when heating to selected temperature setting, and light will turn OFF/ON during normal use to indicate appliance is maintaining temperature.
- Use flat and stable cookware. For best results use cookware 7 - 8 inches [1.7 - 2.2 cm] in diameter.
- When finished using appliance, turn temperature control to MIN and the ON/OFF control to OFF. **CAUTION! THE METAL SURFACES BECOME HOT; TO AVOID BURNS, DO NOT TOUCH DURING OR IMMEDIATELY AFTER USE.**
- Remove appliance cord from electrical outlet.
- Allow to cool completely before cleaning and storing.

## CARE AND CLEANING

- Make sure hot plate is unplugged and cooled before cleaning.
- Do not submerge in water or any other liquid. **Not Dishwasher Safe**
- Use a damp cloth or sponge with mild soap to clean outer appliance.
- Do not use abrasive cleansers or metal scrubbing pads to clean. This will damage item and can cause possible electric shock.
- Store in a dry place. Avoid damp or flooded areas.