


USE AND CARE GUIDE

LED Wall Mirror

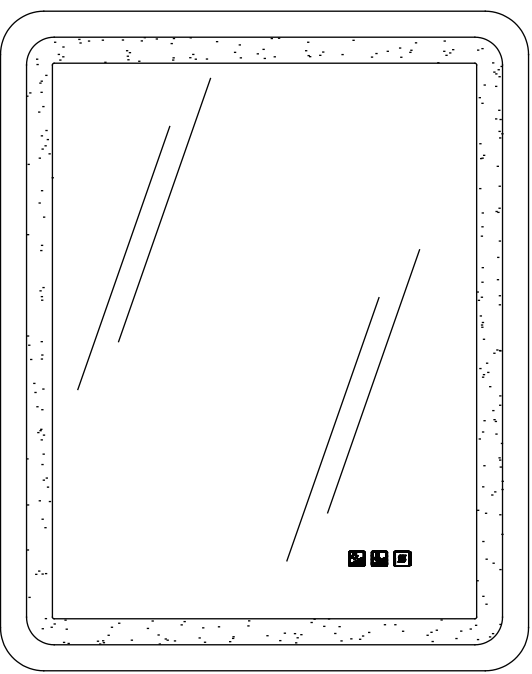

Questions, problems, missing parts? Before returning to the store, call Glacier Bay Customer Service
8 a.m. - 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-855-434-5224

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in Glacier Bay through the purchase of this product. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing Glacier Bay!

Table of Contents

Table of Contents.....	2	Hardware.....	4
Safety Information.....	2	Package Contents.....	5
Important Safety Instruction.....	3	Installation.....	5
Warranty.....	3	Operation.....	10
Pre-Installation.....	4	Care and Cleaning.....	10
Planning Installation.....	4	Troubleshooting.....	10
Tools Required.....	4		

Safety Information

- Consult a qualified electrician if you have any electrical questions.
- Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
- NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
 - Reorient or relocate the receiving antenna.
 - Increase the separation between the equipment and receiver.
 - Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
 - Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation. Please call our Customer Service Team at 1-855-434-5224.

WARNING: Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.

HOMEDEPOT.COM
Please contact 1-855-434-5224 for further assistance.

Important Safety Instruction

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following. Read all instructions before using (this furnishing).

DANGER - To reduce the risk of electric shock:

- Always disconnect this furnishing from the electrical outlet before cleaning.

WARNING - To reduce the risk of burns, fire, electric shock, or injury to persons:

- Disconnect from outlet before putting on or taking off parts.
- Close supervision is necessary when this furnishing is used by, or near children, invalids, or disabled persons.
- Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer.
- Never operate this furnishing if it has a damaged cord, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the furnishing to a service center for examination and repair.
- Keep the cord away from heated surfaces.
- Never operate the furnishing with the air openings blocked. Keep the air openings free of lint, hair, and thelike.
- Never drop or insert any object into any opening.
- Do not use outdoors.
- Do not operate where aerosol (spray) products are being used or where oxygen is being administered
- To disconnect, turn all controls to the off position, then disconnect from outlet.

11 For grounded products the following statement:
"WARNING: Risk of Electric Shock - Connect this furnishing to a properly grounded outlet only. See Grounding Instructions."

SAVE THESE INSTRUCTIONS

12 GROUNDING INSTRUCTIONS

This product must be connected to a grounded metal, permanent wiring system, or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment-grounding terminal or lead on the product.

13. CAUTION: Don't put a steel disc, aluminium ring/aluminium foil or similar foreign objects near the field/wireless charger, that may cause overheat.

Warranty

The manufacturer warrants this lighting fixture to be free from defects in materials and workmanship for a period of one (1) year from date of purchase. This warranty applies only to the original consumer purchaser and only to products used in normal use and service. If this product is found to be defective, the manufacturer's only obligation, and your exclusive remedy, is the repair or replacement of the product at the manufacturer's discretion, provided that the product has not been damaged through misuse, abuse, accident, modifications, alterations, neglect, or mishandling. This warranty shall not apply to any product that is found to have been improperly installed, setup, or used in any way not in accordance with the instructions supplied with the product. This warranty shall not apply to a failure of the product as a result of an accident, misuse, abuse, negligence, alteration, faulty installation, or any other failure not relating to faulty material or workmanship. This warranty shall not apply to the finish on any portion of the product, such as surface and/or weathering, as this is considered normal wear and tear. The manufacturer does not warrant and specially disclaims any warranty, whether express or implied, of fitness for a particular purpose, other than the warranty contained herein. The manufacturer specifically disclaims any liability and shall not be liable for any consequential or incidental loss or damage, including but not limited to any labor / expense costs involved in the replacement or repair of said product.

Contact the Customer Service Team at 1-855-434-5224 or visit www.homedepot.com.


HOMEDEPOT.COM
Please contact 1-855-434-5224 for further assistance.

Pre-Installation

PLANNING INSTALLATION


- Read all instructions before installation.
- To avoid damaging this product, assemble it on a soft, non-abrasive surface, such as carpet or cardboard.
- Keep your receipt and these instructions for proof of purchase.

TOOLS REQUIRED

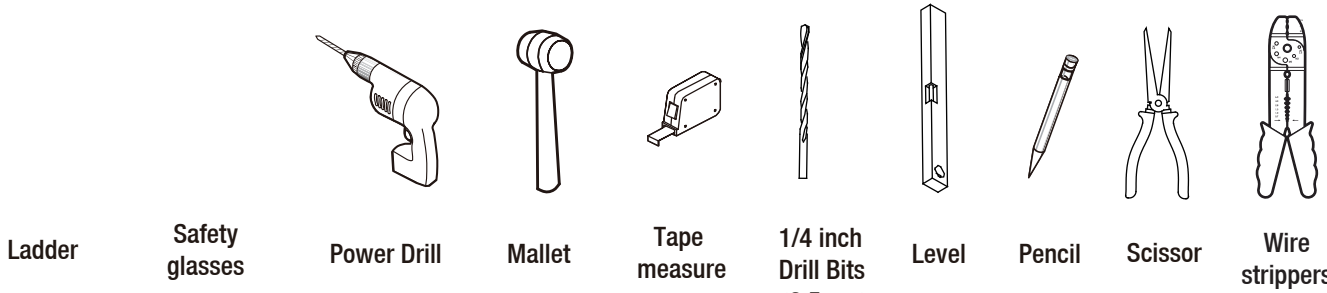

HARDWARE INCLUDED

NOTE: Hardware not shown to actual size.

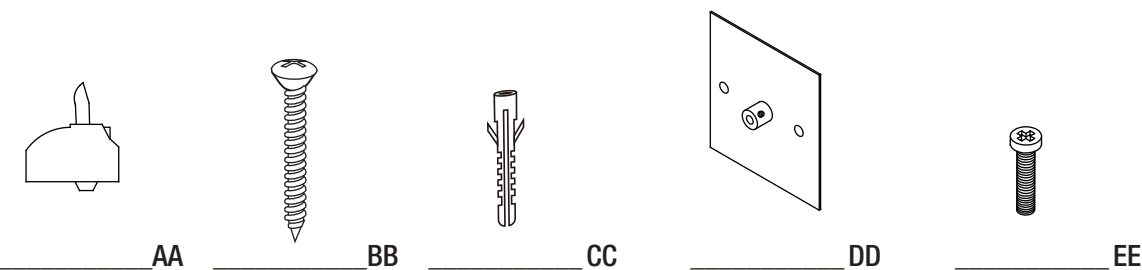


Part	Description	Quantity
AA	Quick connectors	3
BB	Anchor screw	3
CC	Wall anchor	3
DD	Metal plate	1
EE	Screw	2

HOMEDEPOT.COM
Please contact 1-855-434-5224 for further assistance.

Pre-Installation (continued)

PACKAGE CONTENTS

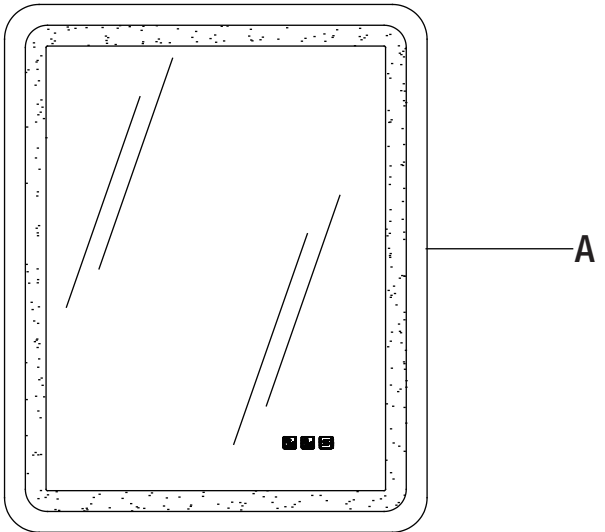


Part	Description	Quantity
A	LED wall mirror	1

Installation

1 Level and mark the location

- Select the desired position of the mirror. Level and mark the location.

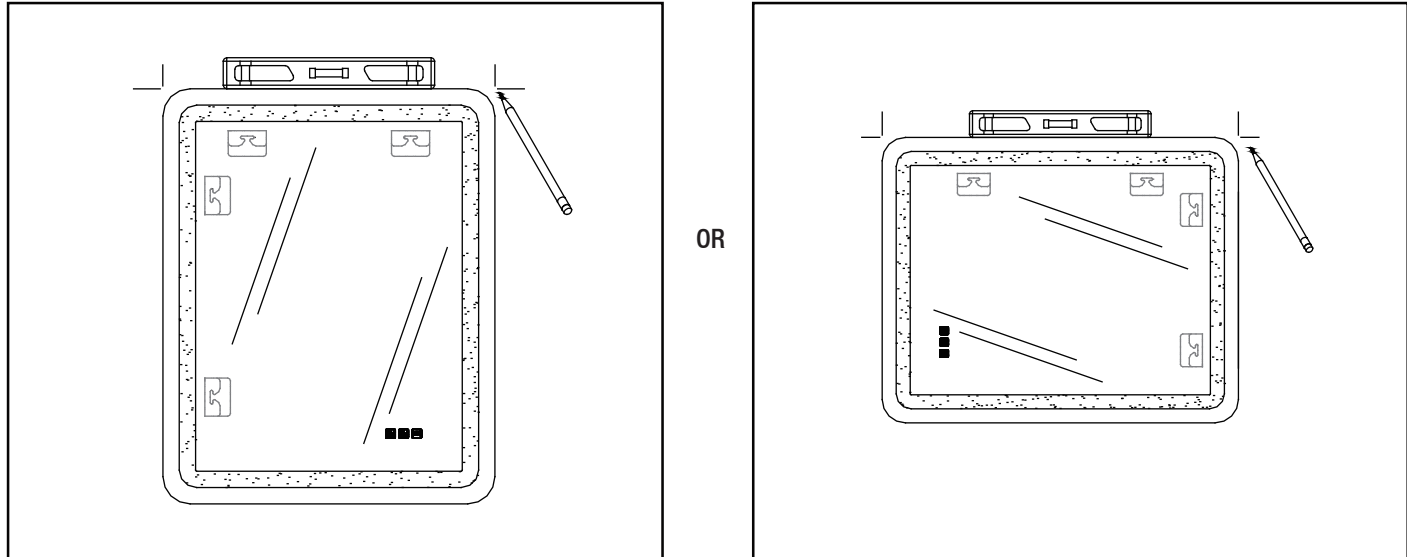


NOTE: Horizontal & vertical mount option available.

HOMEDEPOT.COM
Please contact 1-855-434-5224 for further assistance.

Installation (continued)

1 Level and mark the location (continued)

- Use the tape (not included) measure the height, and draw the horizontal line and the vertical line of the wash-basin (not included). Measure the distance of the mirror hole, and mark the hole place on the wall.

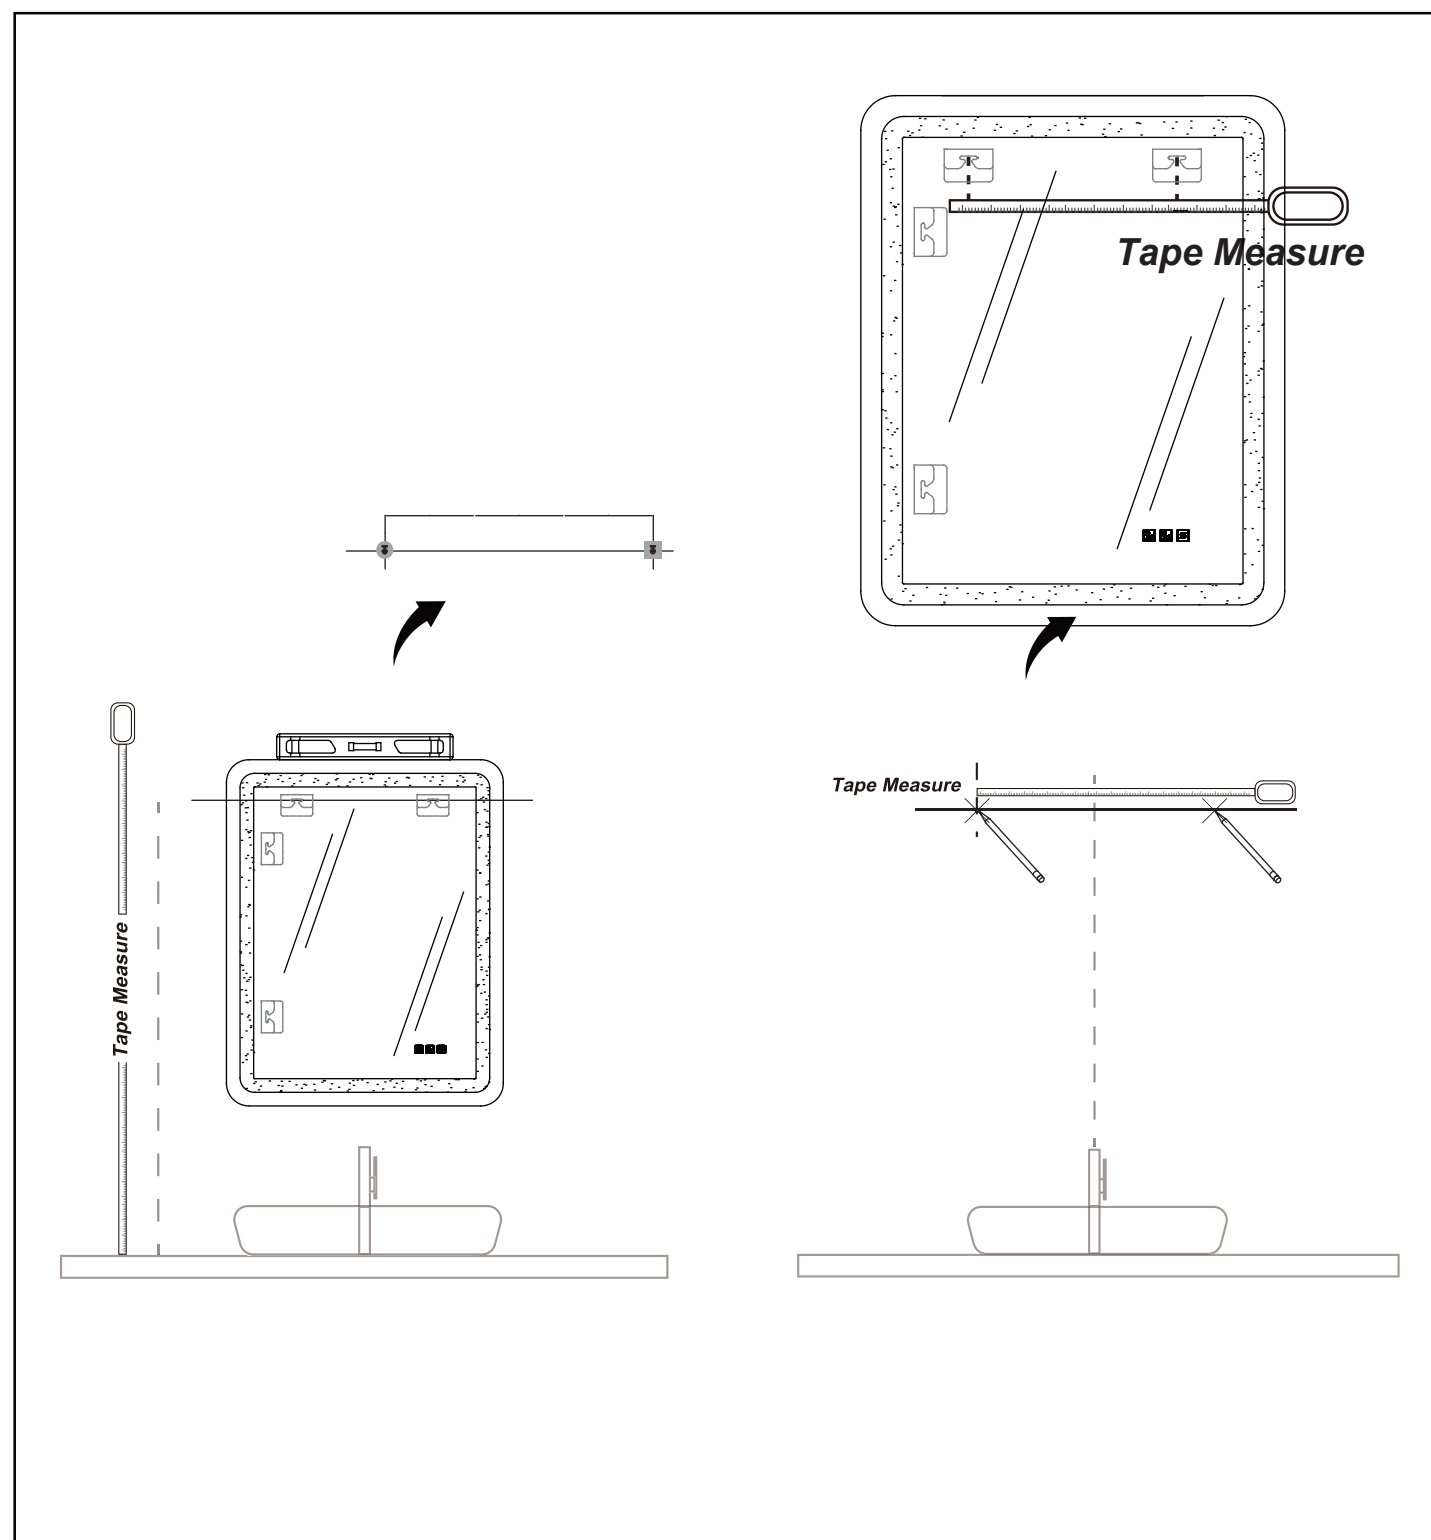


HOMEDEPOT.COM
Please contact 1-855-434-5224 for further assistance.

Installation (continued)

1 Level and mark the location (continued)


- Drill and insert the Wall Anchor (DD), and then drive in the Anchor screw (CC) cross the Wall Anchor (DD).

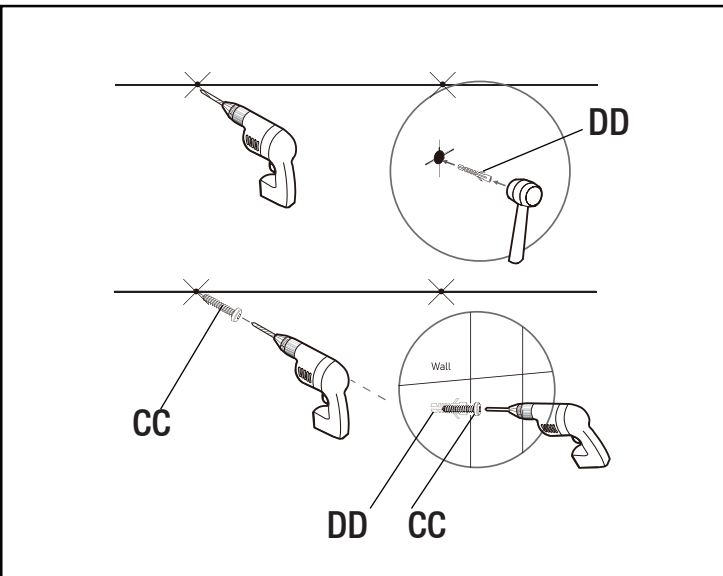


2 Make Electrical Connection

Method 1: Plug in

- Insert the plug (A) into socket (not included), keep the voltage 120V. If the voltage exceeds 120V, please use transfer.

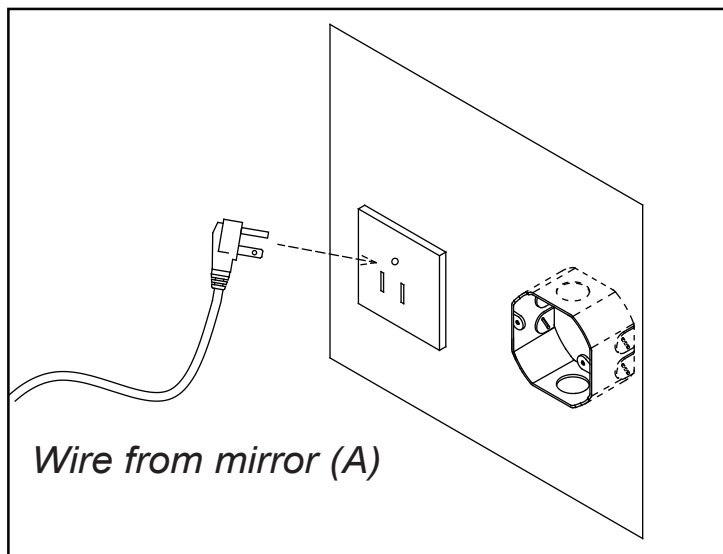

- After inserting the plug, use screws (EE) with screwdriver (not included) to install the metal plate (DD) to cover the outlet box for safety consideration.

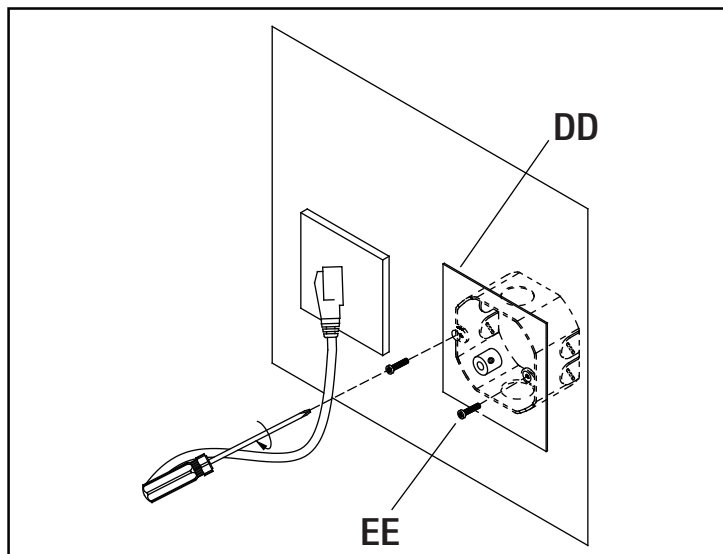

HOMEDEPOT.COM
Please contact 1-855-434-5224 for further assistance.


Installation (continued)

2 Make Electrical Connection (continued)


Method 2: Hardwire

ATTENTION: Please cut off the main power supply BEFORE cutting the cable and wiring!

- Cut the plug.

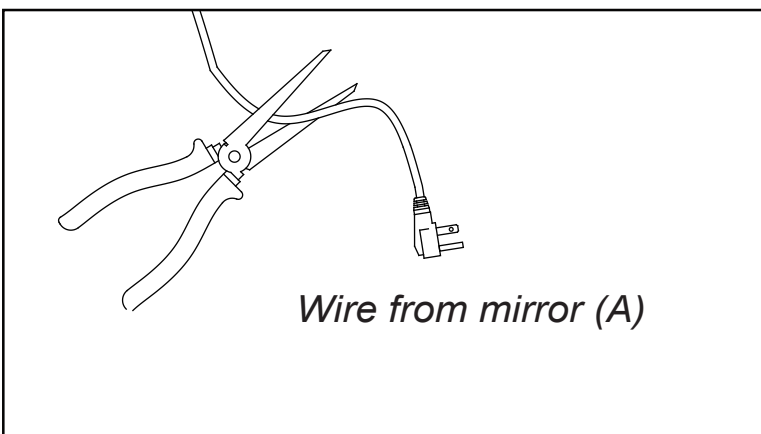


- Insert the wire of the mirror (A) to go through the metal plate (DD), use wire stripper (not included) to expose wire, and then collect the same color wire with the quick connectors (AA).

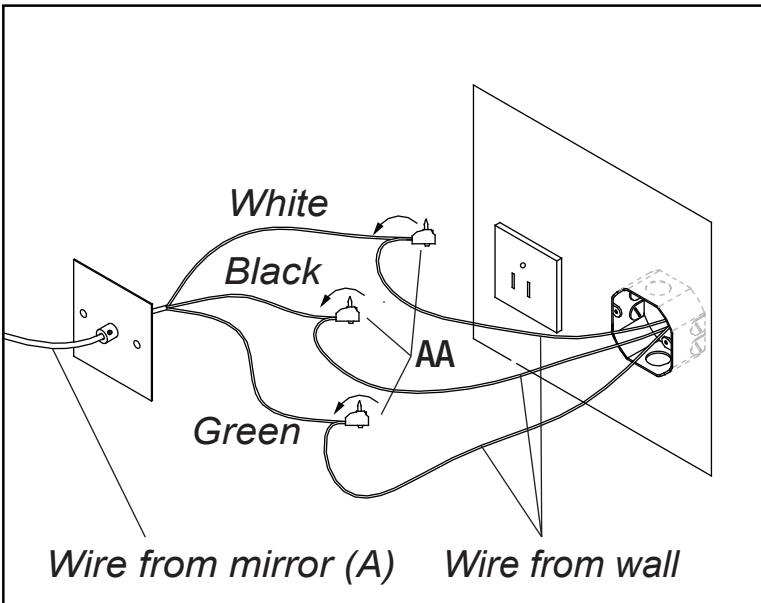

- After wires are connected, tuck them carefully inside the outlet box (not included) of the wall.

- After wires are tucked into the outlet box, use screws (EE) with screwdriver (not included) to install the metal plate (DD) to cover the outlet box for safety consideration.

- After the metal plate (DD) is fixed with the outlet box, use screwdriver to tighten the wire screw of the metal plate (DD).

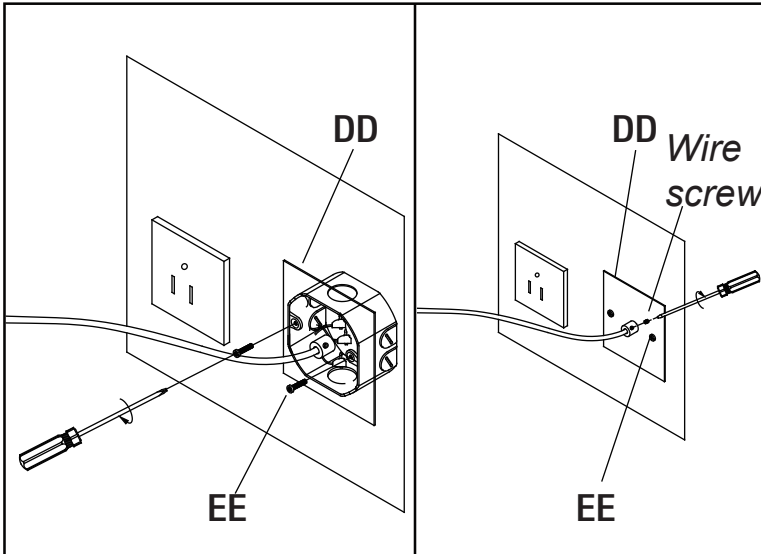


HOMEDEPOT.COM
Please contact 1-855-434-5224 for further assistance.




Installation (continued)

3 Hang the mirror

- Align the hooks on the back of the mirror (A) with the Anchor screws (CC) on wall and hang it to complete the installation.

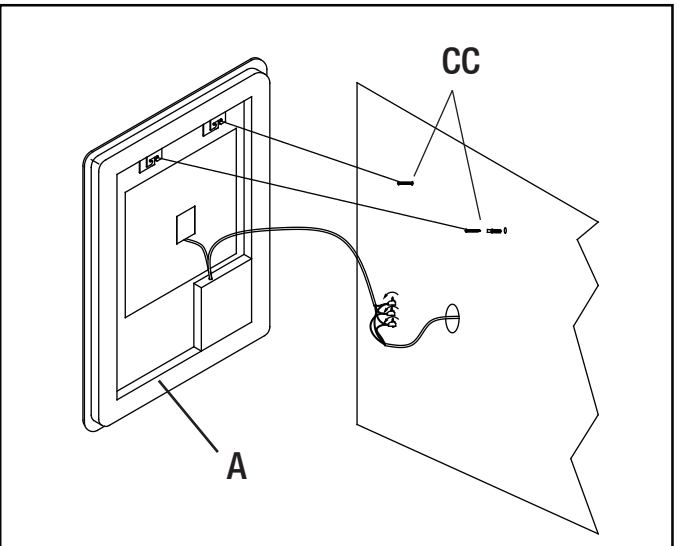

CAUTION: Ensure the mirror is screwed and secured properly. An improperly installed mirror may fall.

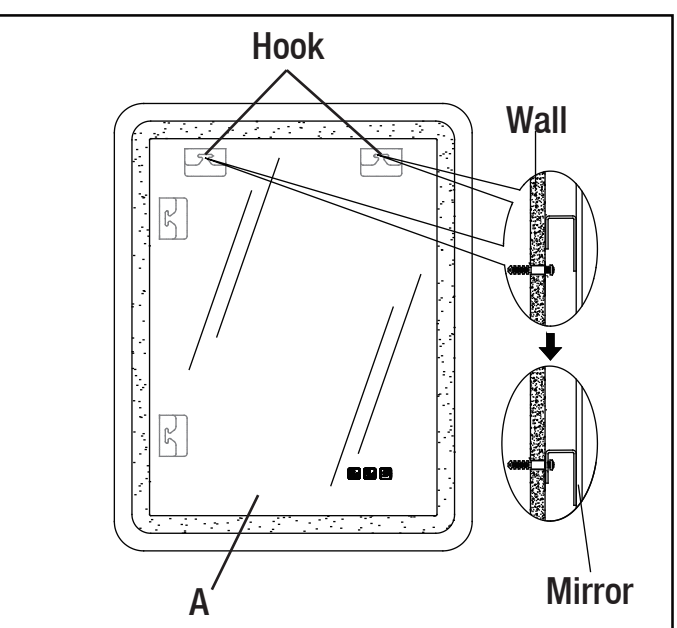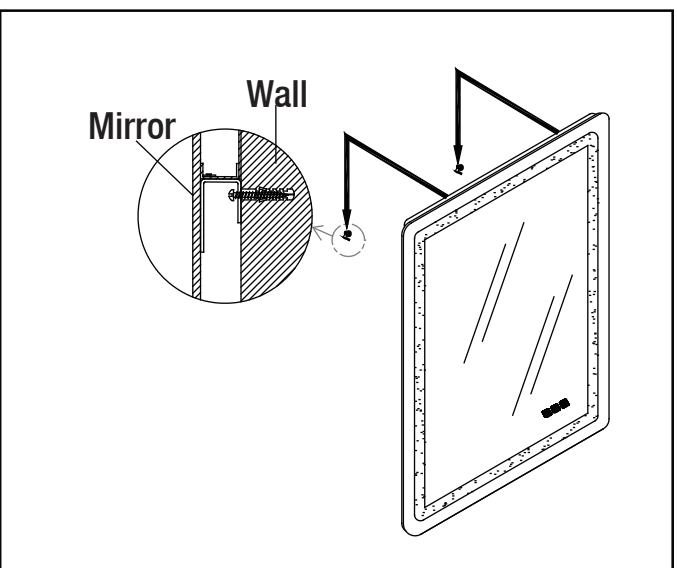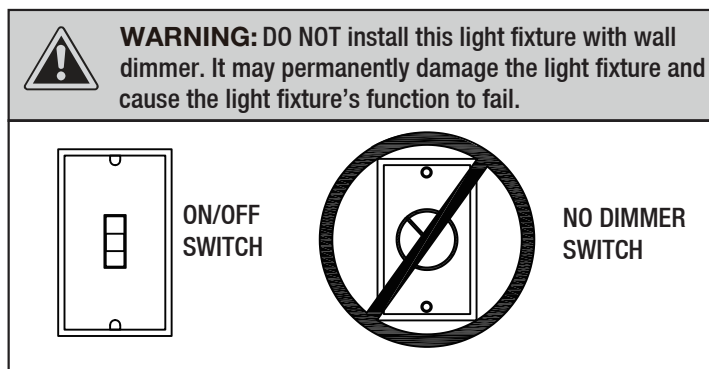


HOMEDEPOT.COM
Please contact 1-855-434-5224 for further assistance.

Operation

- Button turns white with 100% brightness when connected to main supply. Button turns blue when touching.
- Button always on with 10% brightness when standby as long as connecting to main supply. Touch 3 seconds button turns off. Touch again button turns white with 10% brightness.

ON/OFF and Dimmer

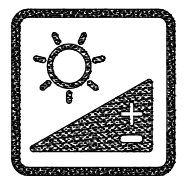


- Short-touch the button to turn on/off the mirror.
- Long touch the button to adjust the brightness (Dimming).

CCT adjustment



- Adjusting color temperatures (CCT) between warm white and cool white by shortly pressing the button.
- Long touch the button to adjust the color temperature (CCT).
- Finish setting by withdrawing your finger when the color reaches the one you need.

Anti-Fog Function

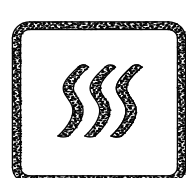

- Mirror begins to be warm and defog after pressing the defogger button. Press again to quit the anti-fog function.
- NOTE: The defogger will stop automatically after 60 minutes of continuous operation to prevent any damage caused by prolonged high temperature.

Care and Cleaning

- Clean the lamp with a soft, dry cloth.
- Do not use any cleaners with chemicals, solvents, or harsh abrasives.

Troubleshooting

Problem	Possible Cause	Solution
The bulb will not light.	The power is off.	Ensure the power supply is On.
	There is a faulty wire connection.	Check the wiring.
	The circuit breaker is off.	Ensure the circuit breaker is in the On position.
The fuse blows or circuit breaker trips when the light is turned on.	There are crossed wires or the power wire is grounding out.	Check the wire connections. Contact a qualified electrician or call the Customer Service Team at 1-855-434-5224.

HOMEDEPOT.COM
Please contact 1-855-434-5224 for further assistance.

Questions, problems, missing parts? Before returning to the store, call Glacier Bay Customer Service
8 a.m. - 7 p.m., EST, Monday-Friday, 9 a.m. - 6 p.m., EST, Saturday

1-855-434-5224

HOMEDEPOT.COM

Retain this manual for future use.

FCC SUPPLIER'S DECLARATION OF CONFORMITY

Product information

Product Name: LED wall mirror

Model No.: RS2310054FB

Trade Mark: Glacier Bay

Applicable standards: FCC CFR Title 47 Part 15 Subpart B

This device complies with related rules, operation is subject to the following two conditions.

- This device may not cause harmful interference and.
- This device must accept any interference received, including interference that may cause undesired operation.

The test result has been evaluated by Dongguan New Testing Centre Co., Ltd laboratory and showed in the test report

The test report number: NTC-ER2405034

It is understood that each unit marketed is identical to the device as tested, and any changes to the device that could adversely affect the emission characteristics will require retest.

The following responsible party designated in FCC §2.909 is responsible for this declaration:

Company Name: Rising Stars Lighting Co., Ltd

Company Address: 14 Robins Tree Ln, Irvine, CA 92602 USA

Signature

(Full Name): Mia Zhang

Telephone Number: +1-213-840-1232

Date: 05/22/2024

Title:

Fax: +1-213-840-1232

Email: mia@risingstarlights.com