
DIGITAL FOLDING TRAVEL ALARM CLOCK SET OF 2

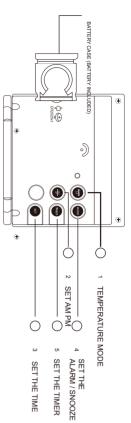

- LCD Display shows: Time/Alarm/Timer, Day, Temperature, Month and Date.
- Alarm clock with alarm mode and snooze mode
- Timer feature up to 23:59:59 hours.
- Thermometer (C°/F°) shows the current ambient temperature

- Pull plastic insulator strip to activate battery (included)
- **Temperature Mode (1):** Press the DOWN/C/F button to change from °F to °C (Fahrenheit to Celsius)
- Set AM or PM Format (2): Press the ADJ/UP button to choose between 12 and 24-hour format
- minutes, years, months, days and by pressing UP/DOWN/SET to finish each setting separately Set the Time (3): Press SET to set up the time/date, one after each other, by following the sequence of hours,
- **≯** Hours→minutes→years→months→days→exit
- Set the Alarm/Snooze (4): Press the MODE button to set Alarm and Snooze. In Alarm Mode press

by following the sequence below and press UP/DOWN/SET to finish each setting separately SET into Alarm Mode and Snooze Mode to set hours, minutes, snooze, alarm tone (choose from 1-8 different tones)

Hours→minutes→snooze→alarm tone→exit

first time (total of 3 rings) When alarm time is up, it rings for 1 minute. When Snooze is set up, Snooze will ring ONLY twice after alarm rings the In Alarm Mode press ADJ/UP button to display the Alarm and Snooze symbols to indicate the Alarm and Snooze are ON

If no Snooze is set up; the alarm will ring only ONCE

the alarm will go ON again and pressing any button (except "set") will activate the 2nd snooze ring After the alarm rings, pressing any button (except for "set"), will stop ringing the alarm. If snooze is ON

After the third ring, pressing any button will shut off the alarm

The alarm tone can be cancelled completely by pressing SET.

or DOWN/C/F button to set the time (in minutes) between first snooze ring and 2 nd snooze ring When setting up the Snooze, the time interval will be 60 minutes. This is the default interval time between 1st and 2nd Make sure to adjust this interval time to the desired time in between snooze rings. Use the "ADJ/UP

Set the Timer (5): Press Timer to set Timer

In Timer Mode press SET to set hours, minutes and seconds by following the sequence below and pressing UP/DOWN/SET to finish each setting separately

Reverse timing mode→hours→minutes→seconds

the same direction as the used one and close the battery cover How to replace the batteries: Pull out the battery cover and remove the used battery. Insert the new battery in

Do not press the LCD screen.

If there is no display when plastic insulator strip is pulled, open & close the battery cover

WARNING:

Do NOT mix old and new batteries

Do NOT discard batteries in fire


Cell batteries may present a choking risk & hazard. If swallowed seek

medical attention immediately.

Keep away from children. Batteries are to be handled by adults ONLY.

Customer Support:support@betusfactory.com

DIGITAL FOLDING TRAVEL ALARM CLOCK SET OF 2

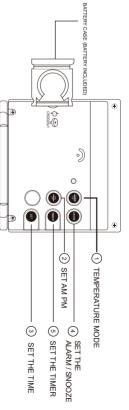

- LCD Display shows: Time/Alarm/Timer, Day, Temperature, Month and Date.
- Alarm clock with alarm mode and snooze mode
- Timer feature up to 23:59:59 hours.

Thermometer (C°/F°) shows the current ambient temperature

- Pull plastic insulator strip to activate battery (included)
- Temperature Mode (1): Press the DOWN/C/F button to change from °F to °C (Fahrenheit to Celsius).
- Set AM or PM Format (2): Press the ADJ/UP button to choose between 12 and 24-hour format
- Set the Time (3): Press SET to set up the time/date, one after each other, by following the sequence of hours, minutes, years, months, days and by pressing UP/DOWN/SET to finish each setting separately
- → Hours→minutes→years→months→days→exit
- **Set the Alarm/Snooze (4):** Press the MODE button to set Alarm and Snooze. In Alarm Mode press

by following the sequence below and press UP/DOWN/SET to finish each setting separately. SET into Alarm Mode and Snooze Mode to set hours, minutes, snooze, alarm tone (choose from 1-8 different tones)

Hours→minutes→snooze→alarm tone→exit

If no Snooze is set up; the alarm will ring only ONCE In Alarm Mode press ADJ/UP button to display the Alarm and Snooze symbols to indicate the Alarm and Snooze are ON first time (total of 3 rings). When alarm time is up, it rings for 1 minute. When Snooze is set up, Snooze will ring ONLY twice after alarm rings the

After the third ring, pressing any button will shut off the alarm

the alarm will go ON again and pressing any button (except "set") will activate the 2nd snooze ring After the alarm rings, pressing any button (except for "set"), will stop ringing the alarm. If snooze is ON

The alarm tone can be cancelled completely by pressing SET.

or DOWN/C/F button to set the time (in minutes) between first snooze ring and 2 nd snooze ring When setting up the Snooze, the time interval will be 60 minutes. This is the default interval time between 1st and 2nd Make sure to adjust this interval time to the desired time in between snooze rings. Use the "ADJ/UP

Set the Timer (5): Press Timer to set Timer

In Timer Mode press SET to set hours, minutes and seconds by following the sequence below and pressing UP/DOWN/SET to finish each setting separately

Reverse timing mode→hours→minutes→seconds

the same direction as the used one and close the battery cover **How to replace the batteries:** Pull out the battery cover and remove the used battery. Insert the new battery in

Do not press the LCD screen

If there is no display when plastic insulator strip is pulled, open & close the battery cover

WARNING:

Do NOT mix old and new batteries

Do NOT discard batteries in fire.

medical attention immediately. Cell batteries may present a choking risk & hazard. If swallowed seek

Keep away from children. Batteries are to be handled by adults ONLY.

Customer Support:support@betusfactory.com