

302-1409BW-W FAQs

The links below will work in most PDF viewers and link to the topic area by clicking the link. We recommend Adobe Reader version 10 or greater available at:
<http://get.adobe.com/reader>

TABLE OF CONTENTS

302-1409BW-W FAQs	1
Batteries	1
Indoor comfort meter Factory Restart	1
Power requirements	1
Fahrenheit/Celsius.....	2
HI LO Temperature/Humidity Records.....	2
12-Hour time format	2
Manually set time: Program Menu	2
Indoor Comfort Indicator	3
Indoor comfort meter is blank: No letters, numbers or dashed lines.....	3

BATTERIES

- Half of all warranty issues can be resolved with fresh batteries of the appropriate voltage.
- We suggest name brand alkaline batteries.
- Use batteries dated six years in advance of the current year. Batteries dated earlier than six years from now may still work but may be unstable in performance.
- Alkaline batteries manufactured this year will have an expiration date 10 years in the future. Battery technology has improved, and batteries will maintain voltage longer in storage. However, the environment the batteries reside in for the 10 years can deplete the power.
- Good name brand alkaline batteries make less noise, which reduces the chance of RF (radio frequency) interference from the battery compartment. A minimum voltage of 1.48V for each battery is necessary for proper performance.

INDOOR COMFORT METER FACTORY RESTART

The factory reset will return your indoor comfort meter to its default settings. This will clear all previous recorded history, so you may want to write down data before taking this step.

- Basically, this is a great way to return your station to “out of the box” condition.
- All history records will be removed, so write down anything you want to keep.

To factory rest your station:

1. Remove batteries and press any button 20 times.
2. After 15 minutes insert fresh alkaline batteries.

POWER REQUIREMENTS

- 2-AAA Alkaline batteries for your indoor comfort meter

FAHRENHEIT/CELSIUS

- Enter the program menu to select in Fahrenheit (°F) or Celsius (°C).

HI | LO TEMPERATURE/HUMIDITY RECORDS

From normal display, press and release the + | HISTORY button to view HI and LO Temperature/Humidity records.

- **NOW:** Current temperature & humidity readings. Display will default back to these values.
- **1 Hr:** 1 Hour records, update at the top of each hour.
- **24Hr:** Daily records, update daily at 12am midnight.
- **MONTH:** Current month records, update at 12am each day. Reset on the first day of each new calendar month.
- **YEAR:** Current year records, update at 12 am each day. Reset at the start of each new calendar year.
- **TOTAL:** Records since the unit was first power on or last reset. These update at the top of each hour.

Note: The station will return to normal display if no button is pressed for 3 seconds.

Manually Reset HI | LO Records:

1. Press the + | HISTORY button to view records.
2. Hold the + | HISTORY button for about five seconds to reset all records at one time.

12-HOUR TIME FORMAT

- Time display: 12-hour or 24-hour format.
- Default is 12-hour time.
- Use the Program Menu to switch time formats.

MANUALLY SET TIME: PROGRAM MENU

1. Hold the **SETTINGS** button 3 seconds to enter settings mode.
2. Press the + | **HISTORY** button to adjust the flashing values. Hold the + | **HISTORY** buttons to adjust quickly.
3. Press the **SETTINGS** button to confirm adjustments and move to the next item or exit.

Settings order:

- 12/24 Hour Time
- Hour
- Minutes
- Year
- Month

- Date
- Month/Date or Date/Month format
- Fahrenheit / Celsius

SETTINGS:


1. Hold SETTINGS button. The **12Hr** will flash Press the + | HISTORY button to choose 24 hour time format.
2. Press SETTINGS to confirm and move to the hour. The **HOUR** will flash. Press the + | HISTORY button to choose the hour.
3. Press SETTINGS to confirm and move to the minutes. The **MINUTES** will flash. Press the + | HISTORY button to choose the minutes.
4. Press SETTINGS to confirm and move to the year. **2020** will flash. Press the + | HISTORY button to change the year.
5. Press SETTINGS to confirm and move to the month. The **MONTH** number will flash. Press the + | HISTORY button to change the month.
6. Press SETTINGS to confirm and move to the date. **DATE** number will flash. Press the + | HISTORY button to change the date.
7. Press SETTINGS to confirm and move to Month/Date or Date/Month format. **MM/DD** will flash. Press the + | HISTORY button to change to DD/MM.
8. Press SETTINGS to confirm and move to the temperature unit. **°F** will flash. Press the + | HISTORY button if you prefer °C (Celsius).
9. Press SETTINGS to confirm and exit.

Note: If no buttons are pressed in a 10 seconds period, set mode will time out and return to live display mode, reflecting whatever adjustments were made by user before timed out

INDOOR COMFORT INDICATOR

The Indoor Comfort Indicator is based on the Indoor Humidity. The arrow will indicate comfort level.

Too Dry	1% to 25%
Dry	26% to 39%
Comfort	40% to 75%
Wet	76% to 83%
Too Wet	84% to 99%

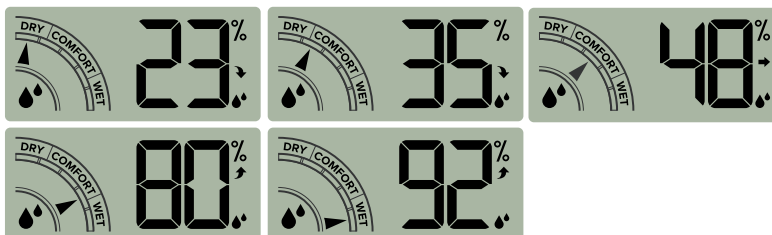

INDOOR COMFORT METER IS BLANK: NO LETTERS, NUMBERS OR DASHED LINES

- Check that the batteries connect correctly.
- Batteries may be overpowered or underpowered.
- Remove batteries from the indoor comfort meter.
- Press any button 20 times. Leave the batteries out of the indoor comfort meter for 2 hours.