

TIMELESS HOME

Use & Care Guide

Your Timeless Home Furniture is designed for style, comfort,
and lasting quality.

This guide provides essential tips to help maintain your
furniture appearance and functionality.

Use & Care Guide

Thank you for your purchase! With proper care, your furniture will remain beautiful and functional over time. To maintain its appearance, wipe surfaces regularly with a soft, dry, or slightly damp cloth. For tougher spots, a mild soap solution can be used; ensure the surface is dried immediately afterward. Harsh chemicals or abrasive cleaners should be avoided, as they can damage finishes.

To protect your furniture, use coasters, placemats, or table pads to prevent scratches, stains, or heat damage. Avoid placing hot or wet items directly on surfaces, and keep furniture out of direct sunlight whenever possible to prevent fading or discoloration. When moving furniture, lift rather than drag it to avoid damage to both the piece and your flooring, and ensure that furniture is placed on level surfaces to maintain stability. Overloading surfaces or shelves can compromise the integrity of the piece, so be mindful of weight limits.

Promptly wipe up any spills with a soft, dry cloth. For sticky residues, a slightly damp cloth with mild soap may be used, followed by thorough drying. Periodically check and tighten any hardware to keep your furniture secure and stable. With simple, regular care, your furniture will continue to look and perform at its best.