

Mr. Christmas®

SANTA'S EXPRESS

THIS PRODUCT IS NOT A TOY! Please read this entire instruction booklet before using.

INSTRUCTION MANUAL

1. DESCRIPTION

Thank you for purchasing the **SANTA'S EXPRESS**. This product features a train with animated figures and a smoke-billowing smokestack accompanied by 20 Christmas carols. The gift box includes the unit, a bottle of propylene glycol for the smoke effect, an adaptor and a TRY ME battery pack for in-store demonstration only. Mr. Christmas makes no guarantee as to the demonstration battery life. This product is not a toy and is not intended for use by children.

PROPYLENE GLYCOL IS NOT INTENDED FOR HUMAN CONSUMPTION. AVOID CONTACT WITH THE EYES OR SKIN. IF CONTACT OCCURS, RINSE THE AREA THOROUGHLY WITH WATER.

2. OPERATION

- A. Gently lift the unit from the packaging and remove it from the polybag. **DO NOT LIFT THE UNIT BY HOLDING ANY ATTACHED FIGURES OR PARTS. LIFT FROM BASE ONLY.**
- B. Place the unit on any flat surface.
- C. Remove the Try Me battery pack attachment. This battery pack is for in-store demonstration use only and is not intended for home use.
- D. Insert the adapter plug into the unit jack at the rear of the unit. Plug the adapter into a nearby working outlet. The adapter is intended to be correctly oriented in a vertical or floor mount position.
- E. For smoke effect, remove the black plug from the cavity next to the bell (circled below left) and insert a couple of drops of the propylene glycol (included.) Do not add more than 1-2 drops of propylene glycol to the smokestack to produce the desired effect.
- F. Turn the VOLUME dial at the back of the unit from OFF to ON, lights will go on, music will play and the figures will begin to move. After a few seconds, smoke will billow from the smokestack.
- G. Turn the VOLUME dial to adjust the volume of the music. **NOTE: WHEN THE VOLUME CONTROL IS AT ITS MINIMUM SETTING, NO MUSIC CAN BE HEARD.**
- H. When the unit is ON, songs will play continuously. The first song is selected randomly each time the unit is turn ON.
- I. Press the PUSH FOR NEW SONG button to hear a new song.



3. TROUBLESHOOTING

Your **SANTA'S EXPRESS** has been designed to provide many seasons of trouble-free operation. In the event that a problem does occur, please refer to the following chart for suggested solutions.

Problem	Likely Causes	Solution
No music, lights or motion	1. No power	1. Make sure the adapter is plugged into a working outlet 2. Make sure the adapter jack is securely attached to the back of the unit
	2. Unit is OFF	Turn the VOLUME dial toward the MAX position
Music is not playing but there is motion	1. Pause between songs	Wait one or two seconds for the next song to start
	2. VOLUME dial is LOW	Turn the VOLUME dial toward the MAX position
Music is playing but figures are not moving	1. Power is interrupted	Turn power OFF and then ON again
	2. Animation is obstructed	Turn power OFF and remove obstruction

Mr. Christmas®

Problem	Likely Causes	Solution
Music is too loud, too soft, or not audible	1. Volume dial is incorrectly adjusted	Adjust VOLUME dial to your preference
	2. Power is interrupted	1. Make sure the adapter is plugged into both the wall and the unit 2. Turn power OFF and then ON again
Smoke is not coming from the smokestack	1. Not enough propylene glycol	1. Add a few drops of propylene glycol to the cavity in the smokestack 2. Wait a few moments for the smoke to billow
	2. If more than 1-2 drops of propylene glycol were added to the smokestack, the reservoir may be flooded	1. Allow the unit to run for 12-24 hours depending on the amount of fluid added 2. Once dry, add 1-2 drops to the cavity in the smokestack. 3. Wait a few moments for smoke to billow

Please note: All wood products are handmade and may have slight imperfections, making each and every one unique.

4. CARE INSTRUCTIONS

- A. Before using or reusing, inspect product carefully. Discard any products that have cracks in enclosure or exposed wire.
- B. When storing the product, carefully remove from the current location to avoid any undue strain or stress on the conductors, connections and wires.
- C. When not in use, store neatly in a cool, dry location protected from sunlight and heat.
- D. If necessary, clean product by wiping with a soft, dry cloth.

5. SAFETY INSTRUCTIONS AND WARNINGS

WARNING: THIS IS NOT A TOY! THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING IF SWALLOWED.

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS ITEM TO RAIN OR MOISTURE. DO NOT REMOVE COVER. NO USER SERVICEABLE PARTS INSIDE. IF SERVICING IS NEEDED, SEND TO QUALIFIED SERVICE PERSONNEL. PLEASE ADHERE TO THE FOLLOWING:

- A. **Read Instructions** - All safety and operating instructions should be read before the item is operated. Please adhere to the instructions and warnings for your safety.
- B. **Water and Moisture** - Do NOT put item near water of any kind: a bathtub, washbowl, kitchen sink, on a wet floor or near a swimming pool.
- C. **Heat** - The item should be situated away from heat sources such as radiators, hairdryers, heat registers, stoves or other appliances that produce heat.
- D. **Power Sources** - The item should be connected to a power supply only like the one that is provided with the item.
- E. **Damage Requiring Service** - Have a qualified service personnel service this item when:
 - 1) The power-supply cord or plug has been damaged.
 - 2) Objects have fallen or liquid has spilled into the item.
 - 3) The item has been exposed to rain or moisture.
 - 4) All troubleshooting techniques have been tried and the item will not work or has stopped working.
 - 5) The item has been dropped or the enclosure damaged.

FEDERAL COMMUNICATIONS COMMISSION CODE, PART 15

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If the equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to correct the interference by one or more of the following measures:

- (a) Reorient or relocate the receiving antenna
- (b) Increase the separation between the equipment and the receiver
- (c) Connect the equipment to an outlet on a circuit different from that to which the receiver is connected
- (d) Consult the dealer or an experienced radio / TV technician for help

Warning: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

The following is only applicable to customers in the USA:

For more information about this product, please call 1-800-467-9627, or visit our website www.mrchristmas.com. We will be happy to help you!

6. NINETY-DAY LIMITED WARRANTY

Mr. Christmas warrants the original consumer / purchaser of the **SANTA'S EXPRESS** that it will be free from defects in material and workmanship for a period of ninety (90) days from date-of-purchase. Any liability of Mr. Christmas under this warranty shall be limited to the repair or replacement of defective parts without charge if the item is returned with shipping charges prepaid together with proof of date-of-purchase, name and mailing address of the original consumer/purchaser. This warranty does not cover defects caused by damages in transit, abuse, accident, negligence or repairs made by others. This warranty gives the consumer / purchaser specific legal rights. This consumer / purchaser may also have other rights, which vary from state to state.

ACTUAL PRODUCT MAY VARY SLIGHTLY FROM PHOTOGRAPHS / DRAWINGS IN THE INSTRUCTION MANUAL