



User Guide

Manuel de l'utilisateur

Charging Station for
Quick Release Battery Pack



IMPORTANT PRODUCT INFORMATION

Safety and Compliance Information

Use Responsibly. Read all instructions and safety information before use.



SAFETY INFORMATION

FAILURE TO FOLLOW THESE SAFETY INSTRUCTIONS COULD RESULT IN FIRE, ELECTRIC SHOCK, OR OTHER INJURY OR DAMAGE

Do not expose your device or adapter to liquids. If your device or adapter gets wet, carefully unplug all cables without getting your hands wet and wait for the device and adapter to dry completely before plugging them in again. Do not attempt to dry your device or adapter with an external heat source, such as a microwave oven or a hair dryer. If the device or adapter appear damaged, discontinue use immediately. Use only accessories supplied with the device to power your device. To avoid risk of electric shock, do not touch your device or any wires connected to your device during a lightning storm.

Product Specifications

Model number: CHS-15AB-05 050250

Power Input: 100-240 VAC, 50/60Hz, 0.5A

Power Output: 5V, 3A, 15W

9V, 2A, 18W

12V, 1.5A, 18W

Operating Temperature: 10 to 40°C

Safety Standard: UL60950/UL62368, CAN/CSA C22.2 No. 60950 / CAN/CSA C22.2

No. 62368, AS/NZS 60950/AS/NZS 62368



BATTERY SAFETY

Keep the battery (not included) and its power adapter in a well-ventilated area and away from heat sources, especially when in use or charging. Do not charge your battery near water or in extremely humid conditions. Do not open, disassemble, bend, deform, puncture or shred the battery. Do not modify, attempt to insert foreign objects into the battery or immerse or expose to water or other liquids. Do not expose the battery to fire, explosion or other hazard. Promptly dispose of used batteries in accordance with applicable laws and regulations. If dropped and you suspect damage, take steps to prevent any ingestion or direct contact of fluids and any other materials from the battery with skin or clothes.

Failure to insert batteries in the correct polarity, as indicated in the battery compartment, may shorten the life of the batteries or cause batteries to leak. Do not use charging station with any other battery besides the Ring Quick Release Battery Pack. Do not mix Alkaline, Standard (Carbon-Zinc) or Rechargeable (Nickel Cadmium) or (Nickel Metal Hydride) batteries. Always remove old, weak, or worn out batteries promptly and recycle or dispose of them in accordance with Local and national disposal regulations.

If a battery leaks, remove all batteries and recycle or dispose of them in accordance with battery manufacturer's recommendations. If fluid from the battery comes into contact with skin or clothes, flush with water immediately.

Protect the device from direct sunlight. Install the device at dry locations and protect it against rain and humidity. The device may not get contact to salt water or other conductive liquids. The device must be charged only within a building in a dry state. Install your power adapter into an easily accessible socket outlet located near the equipment that will be plugged into, or powered by, the adapter.

RECYCLING YOUR DEVICE PROPERLY

In some areas, the disposal of certain electronic devices is regulated. Make sure you dispose of, or recycle, your device in accordance with your local laws and regulations. For information about recycling your device, go to www.amazon.com/deviceupspot.

INFORMATIONS IMPORTANTES SUR LE PRODUIT

Renseignements sur la sécurité et la conformité

Utilisez de façon responsable. Lisez toutes les instructions et les renseignements de sécurité avant l'utilisation.



INFORMATIONS SUR LA SÉCURITÉ

LE MANQUEMENT À CES CONSIGNES DE SÉCURITÉ POURRAIT ÊTRE À L'ORIGINE D'UN INCENDIE, D'UNE ÉLECTROCUTION OU D'AUTRES BLESSURES OU DOMMAGES

Ne pas exposer l'appareil ou l'adaptateur à des liquides. Si votre appareil ou votre adaptateur devient humide, débranchez avec soin tous les câbles sans vous mouiller les mains et attendez que l'appareil et l'adaptateur soient complètement secs avant de les rebrancher. N'essayez pas de faire sécher votre appareil ou votre adaptateur à l'aide d'une source de chaleur externe, comme un four à micro-ondes ou un séchoir à cheveux. Si l'appareil ou l'adaptateur semblent endommagés, cessez immédiatement de les utiliser. Utilisez uniquement des accessoires fournis avec l'appareil pour l'alimentation de votre appareil. Pour éviter tout danger de décharge électrique, ne touchez pas à l'appareil ou à l'un des fils qui y sont branchés au cours d'un orage.

Caractéristiques du produit

Numéro de modèle: CHS-15AB-05 050250

Tension d'entrée: 100-240 VAC, 50/60Hz, 0.5A

Sortie: 5V, 3A, 15W

9V, 2A, 18W

12V, 1.5A, 18W

Température de fonctionnement: 10 to 40°C

Norme de sécurité: UL60950/UL62368, CAN / CSA C22.2 No. 60950 / CAN / CSA

C22.2 No. 62368, AS / NZS 60950 / AS / NZS 62368



CONSIGNES DE SÉCURITÉ CONCERNANT LA PILE

Conservez la batterie (non incluse) et son adaptateur secteur dans un endroit bien ventilé et à l'écart des sources de chaleur, en particulier lors de l'utilisation ou de la charge. Ne chargez pas votre batterie près de l'eau ou dans des conditions extrêmement humides. Ne pas ouvrir, démonter, piler, déformer, percer ou débrancher la batterie. Ne modifiez pas, n'essayez pas d'insérer des objets étrangers dans la batterie ou de l'immerger ou de l'exposer à l'eau ou à d'autres liquides. N'exposez pas la batterie au feu, à une explosion ou à tout autre danger. Éliminez rapidement les piles usagées conformément aux lois et réglementations en vigueur. En cas de chute et de vous soupçonnez des dommages, prenez des mesures pour éviter toute ingestion ou tout contact direct de liquides et de tout autre matériau de la batterie avec la peau ou les vêtements.

Le fait de ne pas insérer les piles dans la polarité correcte, comme indiqué dans le compartiment des piles, peut réduire la durée de vie des piles ou provoquer des fuites. N'utilisez pas la station de charge avec une autre batterie que la batterie Ring Quick Release. Ne mélangez pas de piles alcalines, standard (carbone-zinc) ou rechargeables (nickel-cadmium) ou (nickel-hydrure métallique). Retirez toujours rapidement les piles anciennes, faibles ou usées et recyclez-les ou éliminez-les conformément aux réglementations locales et nationales en matière d'élimination.

Si une pile fuit, retirez toutes les piles et recyclez-les ou jetez-les conformément aux recommandations du fabricant de piles. Si le liquide de la batterie entre en contact avec la peau ou les vêtements, rincez immédiatement à l'eau.

Protégez l'appareil des rayons directs du soleil. Installez l'appareil dans des endroits secs et protégez-le de la pluie et de l'humidité. L'appareil ne doit pas entrer en contact avec de l'eau saïe ou d'autres liquides conducteurs. L'appareil doit être chargé uniquement dans un bâtiment à l'état sec. Installez votre adaptateur secteur dans une prise de courant facilement accessible située à proximité de l'équipement qui sera branché ou alimenté par l'adaptateur.

RECYCLAGE ADÉQUAT DE VOTRE APPAREIL

Dans certaines régions, la mise au rebut de certains appareils électroniques est réglementée.

Veillez à éliminer ou recycler votre appareil conformément aux lois et réglementations locales. Pour en savoir plus sur le recyclage de votre appareil, consultez www.amazon.com/devicesupport.

For Consumers in Australia

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure. Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

I. LIMITED WARRANTY

This is a "limited Warranty" which gives you specific legal rights. You may also have other rights, which vary from jurisdiction to jurisdiction. Some jurisdictions, such as Australia, do not allow the exclusion or limitation of incidental or consequential damages, so the limitation or exclusion under this Limited Warranty may not apply to you. Please keep your dated sales receipt; it is required for all warranty requests. Except as otherwise provided by the Australian Consumer Law, any dispute or controversy regarding this Limited Warranty arising from your use of your Ring products will be resolved by final and binding bilateral arbitration in accordance with the "Dispute Resolution" section of the Terms of Service, found www.ring.com/terms.

1. WHAT THE WARRANTY COVERS

For a period of one (1) year from the date of purchase of your Ring product, or one (1) year from the date of receipt of your replacement Ring product (see Section II below for details), Ring LLC ("Ring") will, at its sole option, repair or replace any Ring products that malfunction due to defective parts or workmanship at no charge to you. This warranty is not transferable and applies only to the original consumer purchaser. Ring may, in its sole discretion, make any repair or replacement with new or refurbished product or components. If the product or component requiring repair or replacement is no longer available, Ring may, in its sole discretion, replace such product with a similar product of similar function.

2. WHAT THE WARRANTY DOES NOT COVER

Repair service, damage due to misuse, abuse, negligence or casualty (e.g., fire), acts of God (including but not limited to lightning, flood, tornado, earthquake, or hurricane), and consumable parts (including batteries) are not covered by this warranty. Damage from unauthorized service or modification of the product or of any furnished component will void this warranty in its entirety. This warranty does not include reimbursement for inconvenience, installation, loss of use, or unauthorized service. In addition, this warranty does not cover any losses, injuries to persons, loss of property or general damages. This warranty, our theft protection, and community support services do not apply to any products purchased from third party sellers on eBay and other online marketplaces. We strongly suggest that you do not buy Ring products from any unauthorized sellers, as such products may be used, defective, counterfeit or may not be designed for use in your country. This warranty covers only Ring products and is not extended to other equipment, components, or devices that a customer uses in conjunction with our products. Except in relation to any guarantees you may be entitled to under the Australian Consumer Law, Ring's maximum liability under this warranty is limited to the original purchase price of the Ring product in question. THIS WARRANTY IS EXPRESSLY IN LIEU OF ALL OTHER WARRANTIES, (EXCEPT THOSE GUARANTEES YOU MAY BE ENTITLED TO UNDER THE AUSTRALIAN CONSUMER LAW), EXPRESSED OR IMPLIED, INCLUDING ANY WARRANTY, REPRESENTATION OR CONDITION OF MERCHANTABILITY OR THAT THE PRODUCTS ARE FIT FOR ANY PARTICULAR

PURPOSE OR USE, AND SPECIFICALLY IN LIEU OF ALL SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES. IF RING LLC CANNOT LAWFULLY DISCLAIM STATUTORY OR IMPLIED WARRANTIES, THEN TO THE EXTENT PERMITTED BY LAW AND EXCEPT IN RELATION TO ANY GUARANTEES YOU MAY BE ENTITLED TO UNDER THE AUSTRALIAN CONSUMER LAW, ALL SUCH WARRANTIES SHALL BE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS LIMITED WARRANTY AND TO REPAIR OR REPLACEMENT SERVICE. SOME JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG A STATUTORY OR IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

EXCEPT AS OTHERWISE PROVIDED BY THE AUSTRALIAN CONSUMER LAW, REPAIR OR REPLACEMENT SHALL BE THE SOLE REMEDY OF THE CUSTOMER AND THERE SHALL BE NO LIABILITY ON THE PART OF RING LLC FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO ANY LOSS OF BUSINESS OR PROFITS, WHETHER OR NOT FORESEEABLE. SUCH DAMAGES, SUCH AS THOSE IN WHICH THE AUSTRALIAN CONSUMER LAW APPLIES, DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION AND EXCLUSIONS MAY NOT APPLY TO YOU.

This limited warranty gives you specific rights. You may have additional rights under applicable law, and this limited warranty does not affect such rights.

II. THEFT PROTECTION



If your Ring camera or doorbell product is stolen at any time after your purchase, Ring will replace the stolen device at no charge to you. This theft protection is not transferable and applies only to the original consumer purchaser. Coverage of this theft protection is limited to one (1) replacement only for each Ring camera or doorbell product that you have purchased. Theft protection does not apply to any products purchased from third party sellers on eBay and other online marketplaces. Any claim based on theft of your Ring camera or doorbell product must be submitted within fifteen (15) days of the theft and include the original sales receipt, and a copy of a police report evidencing that you reported the theft to the police. Failure to report the theft to police voids this theft protection.

III. How to obtain service / replacement

To obtain the benefit of the above limited warranty or theft protection, please contact Ring community support at: help@ring.com


+61 2 8294 9169
1300 205 983 (Toll Free)
1532 26th St
Santa Monica, CA 90404
USA

For warranty requests where the Australian Consumer Law does not apply: Please be prepared to describe the product that needs service, the nature of the problem and to provide proof of purchase. You will also be required to return your existing device in accordance with directions that will be provided by Ring. Ring has no warranty obligations with respect any products that are excluded from warranty pursuant to Paragraph 2 above, as reasonably determined by Ring, and the owner of such device shall bear all shipping costs for the return of such product to owner. Any claim under this Limited Warranty must be submitted to Ring before the end of the warranty period described above. Please allow up to fourteen (14) business days for your warranty request to be processed. For replacement requests: Please be prepared to describe the product that needs to be replaced and a copy of the police report. Please allow up to fourteen (14) business days for your replacement to be processed.

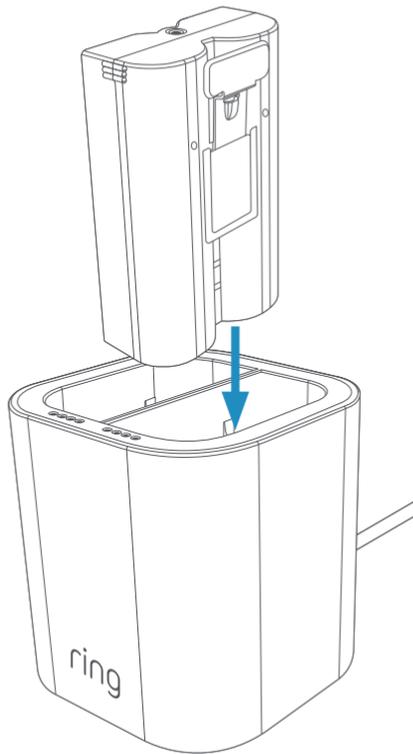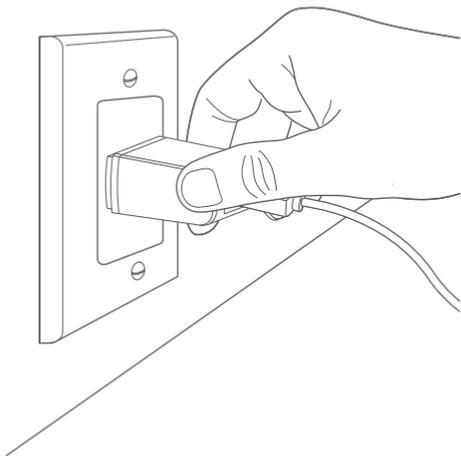

* Battery not included / Pile non inclus



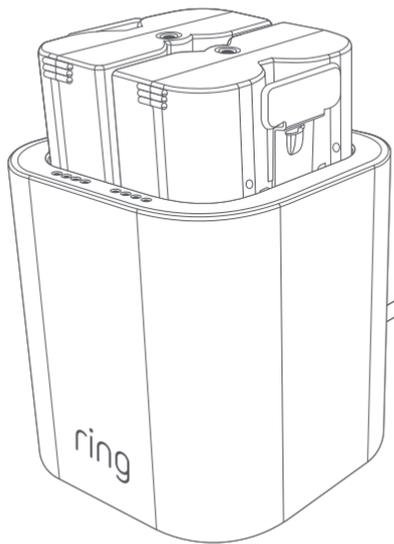

* Batteries are charging when lights are blinking / Les piles se rechargent lorsque les voyants clignotent

* Batteries not included / Piles non inclus





We don't recommend using other AC/DC/USB adapters with the charging station. Using other USB adapters may result in insufficient charging and longer charging times.

Errors:

- If the LEDs indicating battery status are all blinking it means the charger is charging with insufficient power.
- If LEDs indicating battery status are ON but not blinking, it means the charger is not charging (this may be due to low power or broken connection).
- If the first, second, and fourth LEDs are OFF and only the third LED is ON, it means the temperature of the battery is out of range.
- If the first, third, and fourth LEDs are OFF and only the second LED is ON, it means the charger's connection is failing.

Nous vous déconseillons d'utiliser d'autres adaptateurs AC / DC / USB avec la station de charge. L'utilisation d'autres adaptateurs USB peut entraîner une charge insuffisante et des temps de charge plus longs.

Les erreurs:

- Si les voyants indiquant l'état de la batterie clignotent tous, cela signifie que le chargeur se recharge avec une puissance insuffisante.
- Si les voyants indiquant l'état de la batterie sont allumés mais ne clignotent pas, cela signifie que le chargeur ne se charge pas. (cela peut être dû à une faible puissance ou à une connexion interrompue)
- Si les première, deuxième et quatrième LED sont éteintes et que seule la troisième LED est allumée, cela signifie que la température de la batterie est hors de portée
- Si les premier, troisième et quatrième voyants sont éteints et que seul le deuxième voyant est allumé, cela signifie que la connexion du chargeur échoue.



1532 26th St
Santa Monica, CA 90404
USA

By purchasing or using the product, you agree to the Terms of Service found at ring.com/terms.

En achetant ou en utilisant le produit, vous acceptez les conditions d'utilisation disponibles sur ring.com/terms.

For information on our warranty, theft protection, and Ring Protect Plans, see ring.com/legal.

Pour plus d'informations sur notre garantie, notre protection contre le vol et nos plans Ring Protect, rendez-vous sur ring.com/legal.

© 2020 Ring LLC or its affiliates.

Ring and all related logos are trademarks of Ring LLC or its affiliates.

© 2020 Ring LLC ou ses sociétés affiliées.

Ring et les logos connexes sont des marques de commerce appartenant à Ring SARL ou à ses sociétés affiliées.