

INSTRUCTIONS / ASSEMBLY GUIDE

=====

Product: Backdrop Support Stand Kit – 10 x 6.5 ft

1. PRODUCT OVERVIEW

This adjustable backdrop support system is suitable for photography, parties, banners, projector screens, and green screen backdrops. Height adjusts from 3 ft to 6.5 ft, and the crossbar width can be set to 2.5 ft, 5 ft, 7.5 ft, or 10 ft.

2. SAFETY INFORMATION

- Always fully extend tripod legs for stability.
- Tighten all knobs before hanging a backdrop.
- Do not exceed the maximum load of 9 lbs.
- Keep hands clear when assembling crossbar sections.

3. PACKAGE CONTENTS

- 2 Adjustable Background Stands
- 1 Four-Section Crossbar
- 4 Backdrop Holder Clips
- 1 Carry Bag

4. ASSEMBLY INSTRUCTIONS

1. Unfold the tripod stands and fully extend all three legs.
2. Ensure the distance between the ends of any two legs is approximately 25.5 inches.
3. Adjust each stand to the desired height (3 ft to 6.5 ft) and tighten the locking knobs.
4. Connect the crossbar sections based on desired width:
 - 1 section = 2.5 ft
 - 2 sections = 5 ft
 - 3 sections = 7.5 ft
 - 4 sections = 10 ft

5. Attach the assembled crossbar to the top of both stands.
6. Secure all knobs to ensure the crossbar is firmly in place.
7. Hang your backdrop evenly using the included clips.
8. Confirm that the total weight does not exceed 9 lbs.

5. USE & CARE

- Wipe clean with a dry cloth only.
- Store the stand in the carry bag when not in use.
- Inspect the joints and knobs periodically.
- Avoid placing heavy or uneven loads on the crossbar.

6. WARRANTY

This product includes a **30-day limited warranty** covering manufacturing defects only.