

USE AND CARE GUIDE

RUBBER WOOD FRAME STOOL



Questions, problems, missing parts?

Before returning to the store, call Customer Service.

8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday

1-877-527-0313

HOMEDEPOT.COM

THANK YOU

We appreciate the trust and confidence you have placed in StyleWell through the purchase of this **Rubber Wood Frame Stool**. We strive to continually create quality products designed to enhance your home. Visit us online to see our full line of products available for your home improvement needs. Thank you for choosing StyleWell!

Table of Contents

Table of Contents.....	2
Safety Information.....	2
Warranty.....	2
1 Year Warranty.....	2
What is Covered.....	2
What is Not Covered.....	2
Maintenance.....	3
Care and Cleaning.....	3

Safety Information

DANGER

- Keep small parts away from children during assembly.
- Read and follow instructions carefully.

WARNING

- Read these instructions carefully and keep in a safe place.
- TO GUARANTEE THE SAFE USE OF THIS PRODUCT, FOLLOW THE WARNINGS, GUIDELINES AND RECOMMENDATIONS IN THIS MANUAL.
- Adult assembly required.
- Small parts may present choking hazard prior to assembly.
- Do not stand, step or climb on unit.

CAUTION

- Do not use power tools to assemble your furniture. Power tools may strip or damage parts/product.
- Do not overtighten connectors (screws, bolts, etc.). Overtightening can lead to product damage.
- Be sure to check all packing materials carefully for small parts that may have come loose inside the carton during shipment. If parts are missing, contact THE HOME DEPOT to obtain any missing parts.
- DO NOT USE SUBSTITUTE PARTS.
- This product should only be used on a flat, level surface.
- Product is designed to hold **225LBS**. Exceeding this limit may damage the product or cause injury to the user.

Warranty

1 YEAR WARRANTY

WHAT IS COVERED

We guarantee this product to be free of manufacturing defects to the original purchaser for one year.

WHAT IS NOT COVERED

This warranty does not cover commercial use, acts of nature, and abusive use.

Maintenance

- Never use water to clean your furniture as it may cause damage to the finish.**
- Liquid spills should be removed immediately. Using a soft clean cloth, blot the spill gently. Avoid rubbing.**
- Never use harsh chemicals or solvents on your product as this may damage the fabric.**
- Stains or marks from crayons or ink markers will be difficult to remove.**
- In the event that your furniture is stained or otherwise damaged during use, we recommend that you call a professional to repair your furniture.**
- Prolonged exposure to heat sources may cause glazing, melting and scorching, or even cause color to fade.**
- If you choose to use a professional product, pretest the fabric in an inconspicuous area for any signs of discoloration or shrinking.**
- Check bolts/screws periodically and tighten them if necessary.**

Care and Cleaning

- It is best to keep your furniture in a climate-controlled environment. Extreme temperature and humidity changes can cause fading, warping,**
- Shrinking and splitting of wood. It is advised to keep furniture away from direct sunlight as sun may damage the finish.**
- Regular vacuuming or light brushing helps to remove dirt and prevent soil build-up, which increases the appearance wear.**
- Use a soft, clean cloth that will not scratch the surface when dusting.**

StyleWell.TM

**Questions, problems, missing parts?
Before returning to the store, call Customer Service
8 a.m. – 7 p.m., EST, Monday – Friday, 9 a.m. – 6 p.m., EST, Saturday**

1-877-527-0313

HOMEDEPOT.COM

Retain this manual for future use.