

FILTER CARTRIDGE REPLACEMENT

1. Turn off water to the filter.
2. Turn on the faucet nearest to the filter housing to release pressure.
3. Unscrew the filter housing and discard used cartridge. Wash the filter canister with mild soap and water. Do not use harsh cleaners or hot water.
4. Inspect the filter housing O ring. Make sure it is lightly lubricated and completely seated in the groove. It is recommended that you replace the O ring when you replace the filter.
5. Place a new filter cartridge into the housing, make sure it is centered and completely seated on the bottom seal.
6. Reinstall the housing to its cap. Hand tightening is all that is required to seal the unit. You can use a wrench to slightly give the housing an additional $1/2$ turn, but **DO NOT OVERTIGHTEN**.
7. Slowly turn on water to the filter by using the upstream shut-off valve (if there is one).
8. After installation, flush the cartridge for 5 minutes, wait one hour, then flush again for 5 minutes before using the water.

